

eKids SM535

EKIDS Spiderman Kids Camera User Manual

Model: SM535

Brand: eKids

INTRODUCTION

Thank you for purchasing the EKIDS Spiderman Kids Camera. This digital camera is designed for young users, offering fun photo and video capabilities with easy-to-use features like photo editing and stickers. Please read this manual carefully to ensure proper use and longevity of your device.

SETUP

1. Battery Installation

The camera requires 3 AA alkaline batteries. Locate the battery compartment on the back of the camera. Open the cover, insert the batteries according to the polarity indicators (+/-), and close the cover securely.



Image: Back view of the camera, illustrating the location of the battery compartment and the LCD screen.

2. SD Card Insertion

Your camera comes with a 512 MB SD card for immediate use. Locate the SD card slot, typically near the battery compartment. Insert the SD card with the metal contacts facing down until it clicks into place. To remove, gently push the card in until it springs out.

3. Powering On/Off

Press and hold the Power button (usually marked with a power symbol) to turn the camera on or off. The 2-inch LCD screen will illuminate upon successful power-on.



Image: Front view of the camera, showing the lens, flash, and main controls.

OPERATING INSTRUCTIONS

1. Taking Photos

Point the camera at your subject. Press the Shutter button (often a large, prominent button) to capture a photo. The camera has a 2 Megapixel effective resolution for still images.



Image: A child actively using the camera to take a picture, demonstrating its ergonomic design for small hands.

2. Recording Videos

Switch to video mode using the mode button (refer to the camera's on-screen icons). Press the Record button to start and stop video recording. The camera supports HD video recording at 720p resolution.

3. Photo Editing and Stickers

After taking a photo, you can access editing features on the 2-inch LCD screen. Use the navigation buttons to select from various frames and over 25 digital stickers to decorate your pictures. Confirm your selection with the OK button.



eKids™

Image: An illustration of the various digital frames and stickers that can be applied to photos directly on the camera's screen.

4. Viewing and Deleting Content

Enter playback mode to view your captured photos and videos. Use the navigation buttons to scroll through your media. There will be an option to delete individual files or all files, typically accessed via a menu button.



eKids™

Image: A promotional graphic detailing key features of the camera, including its 2.0 Megapixel resolution, HD video recording, included SD card, LED flash, and 2-inch full-color screen.

MAINTENANCE

Cleaning the Camera

Use a soft, dry cloth to clean the camera body. For the lens and screen, use a microfiber cloth specifically designed for optics. Do not use liquid cleaners or abrasive materials. Keep the camera away from dust and moisture.

Storage

When not in use for extended periods, remove the batteries to prevent leakage. Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low or dead batteries; Batteries inserted incorrectly.	Replace with new AA alkaline batteries; Check battery polarity.
Cannot take photos/videos.	SD card full or not inserted correctly; Camera in wrong mode.	Delete some files or replace SD card; Reinsert SD card; Switch to photo/video mode.
Screen is blank or frozen.	System error; Low battery.	Turn off and on again; Replace batteries. If issue persists, perform a reset (if available, usually a small pinhole button).
Poor image/video quality.	Dirty lens; Insufficient lighting.	Clean the lens with a microfiber cloth; Ensure adequate lighting for your subject.

SPECIFICATIONS

Feature	Detail
Brand	eKids
Model Name	Spiderman (SM535)
Color	Red
Product Type	Compact Digital Camera
Screen	2-inch LCD

Feature	Detail
Image Stabilization	Digital
Special Features	Video function, Photo editing, Spiderman design
Connectivity Technology	USB
Memory	Includes 512 MB SD card
Battery Composition	Alkaline (3 AA batteries required)
Video Resolution	720p
Product Dimensions (L x W x H)	6 x 12 x 15 cm
Item Weight	296 Grams
Effective Still Resolution	2 Megapixels
Water Resistance Level	Not waterproof
Included Components	Camera body and accessory

WARRANTY AND SUPPORT

Specific warranty information for the EKIDS Spiderman Kids Camera (Model SM535) is not provided in the product details. For detailed warranty terms, technical support, or spare parts availability, please refer to the official eKids website or contact their customer service directly. Keep your purchase receipt as proof of purchase.