

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

SOLFART S8568-6T-6000K-ND

SOLFART Modern LED Vanity Light Instruction Manual

Model: S8568-6T-6000K-ND | Brand: SOLFART

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your SOLFART Modern LED Vanity Light. Please read this manual thoroughly before installation and keep it for future reference. This 45.3-inch Matt Black vanity light fixture features 6 integrated LED lights, designed for modern bathroom and indoor applications.

SAFETY INFORMATION

- Always turn off the power at the circuit breaker before beginning installation.
- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric Code (NEC).
- If you are unsure about wiring, consult a qualified electrician.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create a safety hazard.
- This fixture is designed for indoor use only.
- Handle the fixture with care to prevent damage.

WHAT'S IN THE BOX

- 1 x SOLFART Modern LED Vanity Light Fixture
- Mounting Screws
- Installation Instruction Manual



Figure 1: Main components of the SOLFART LED Vanity Light.

SPECIFICATIONS

Feature	Detail
Brand	SOLFART
Model Number	S8568-6T-6000K-ND
Color	Matt Black
Material	Aluminum, Acrylic
Style	Modern
Light Fixture Form	Vanity
Room Type	Bathroom
Product Dimensions	45.3" L x 4" W x 4.3" H (1150mm x 100mm x 110mm)
Specific Uses	Indoor use only
Power Source	AC
Installation Type	Wall Mount
Special Feature	Not Dimmable
Light Source Type	LED (Integrated)
Finish Type	Matte Black
Number of Light Sources	6
Voltage	110 Volts
Light Color	Cool White 6000K
Wattage	48 watts
Color Rendering Index (CRI)	80.00
Water Resistance Level	Water Resistant

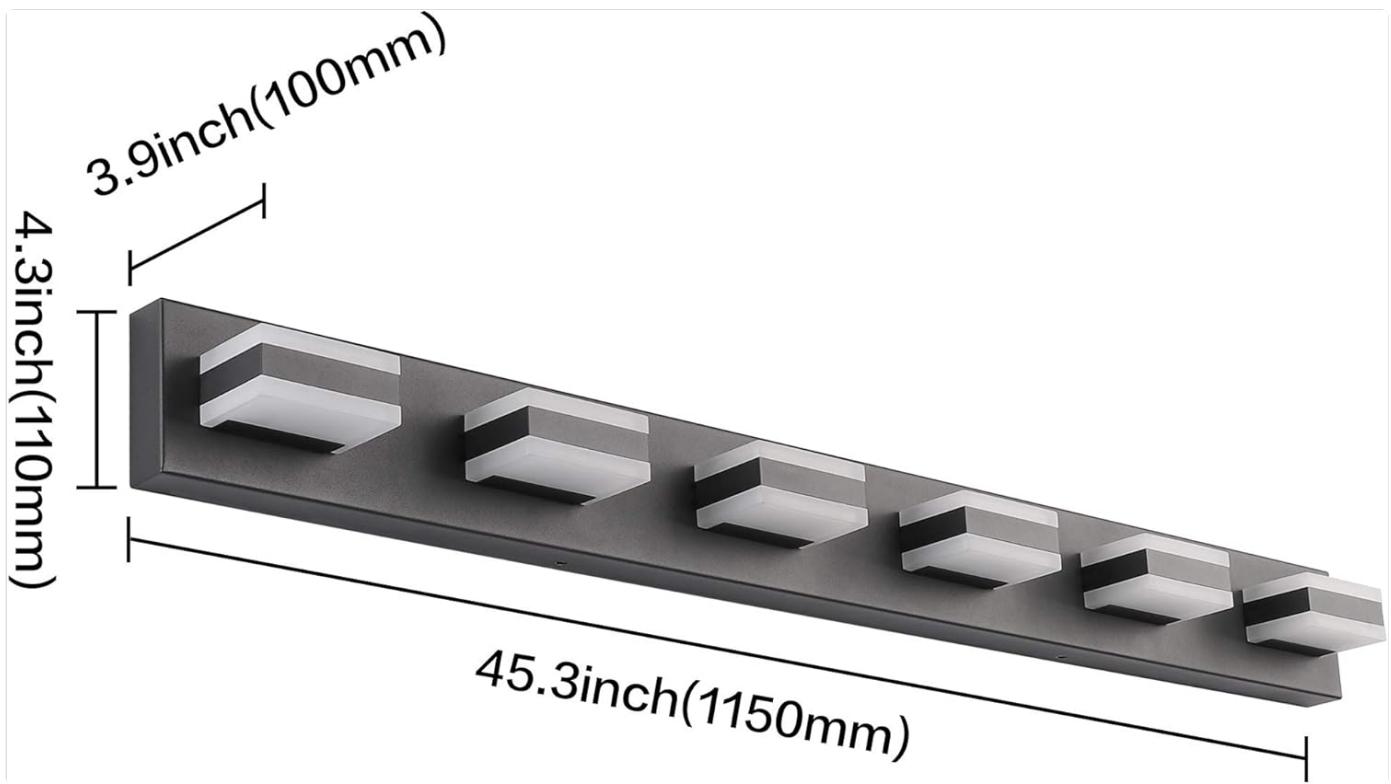


Figure 2: Detailed dimensions of the vanity light fixture.

INSTALLATION INSTRUCTIONS

The SOLFART LED Vanity Light is designed for easy installation. Please follow these steps carefully:

- Safety First:** Before starting, ensure the power supply to the installation area is turned OFF at the circuit breaker.
- Remove Mounting Plate:** Carefully remove the mounting plate from the back of the light fixture. This plate will be attached to the wall.
- Mark and Secure Mounting Plate:** Position the mounting plate on the wall where you intend to install the light. Use a pencil to mark the drilling points. Drill pilot holes if necessary and secure the mounting plate to the wall using the provided screws. Ensure it is level and stable.
- Electrical Connections:** Connect the light fixture's wires to your household electrical wires.
 - Connect the **black** wire from the fixture to the **black** (Live/Hot) wire from the wall.
 - Connect the **white** wire from the fixture to the **white** (Neutral) wire from the wall.
 - Connect the **green** or **bare copper** (Ground) wire from the fixture to the **green** or **bare copper** (Ground) wire from the wall.
 - Secure all connections with wire nuts (not included, typically part of household wiring).
- Attach Fixture to Mounting Plate:** Carefully align the light fixture with the mounting plate and secure it using the screws. Ensure all wires are tucked neatly inside the junction box and the fixture is flush against the wall.
- Restore Power:** Once the fixture is securely installed, turn the power back ON at the circuit breaker.



Figure 3: Example of the vanity light installed above a mirror.

OPERATING INSTRUCTIONS

This SOLFART LED Vanity Light is designed for simple operation. It is a hardwired fixture and does not require assembly. The light is controlled by your standard wall switch.

- To turn the light ON, flip the wall switch to the 'ON' position.
- To turn the light OFF, flip the wall switch to the 'OFF' position.
- **Note:** This model is **Not Dimmable**. Attempting to use it with a dimmer switch may cause damage to the fixture or improper operation.

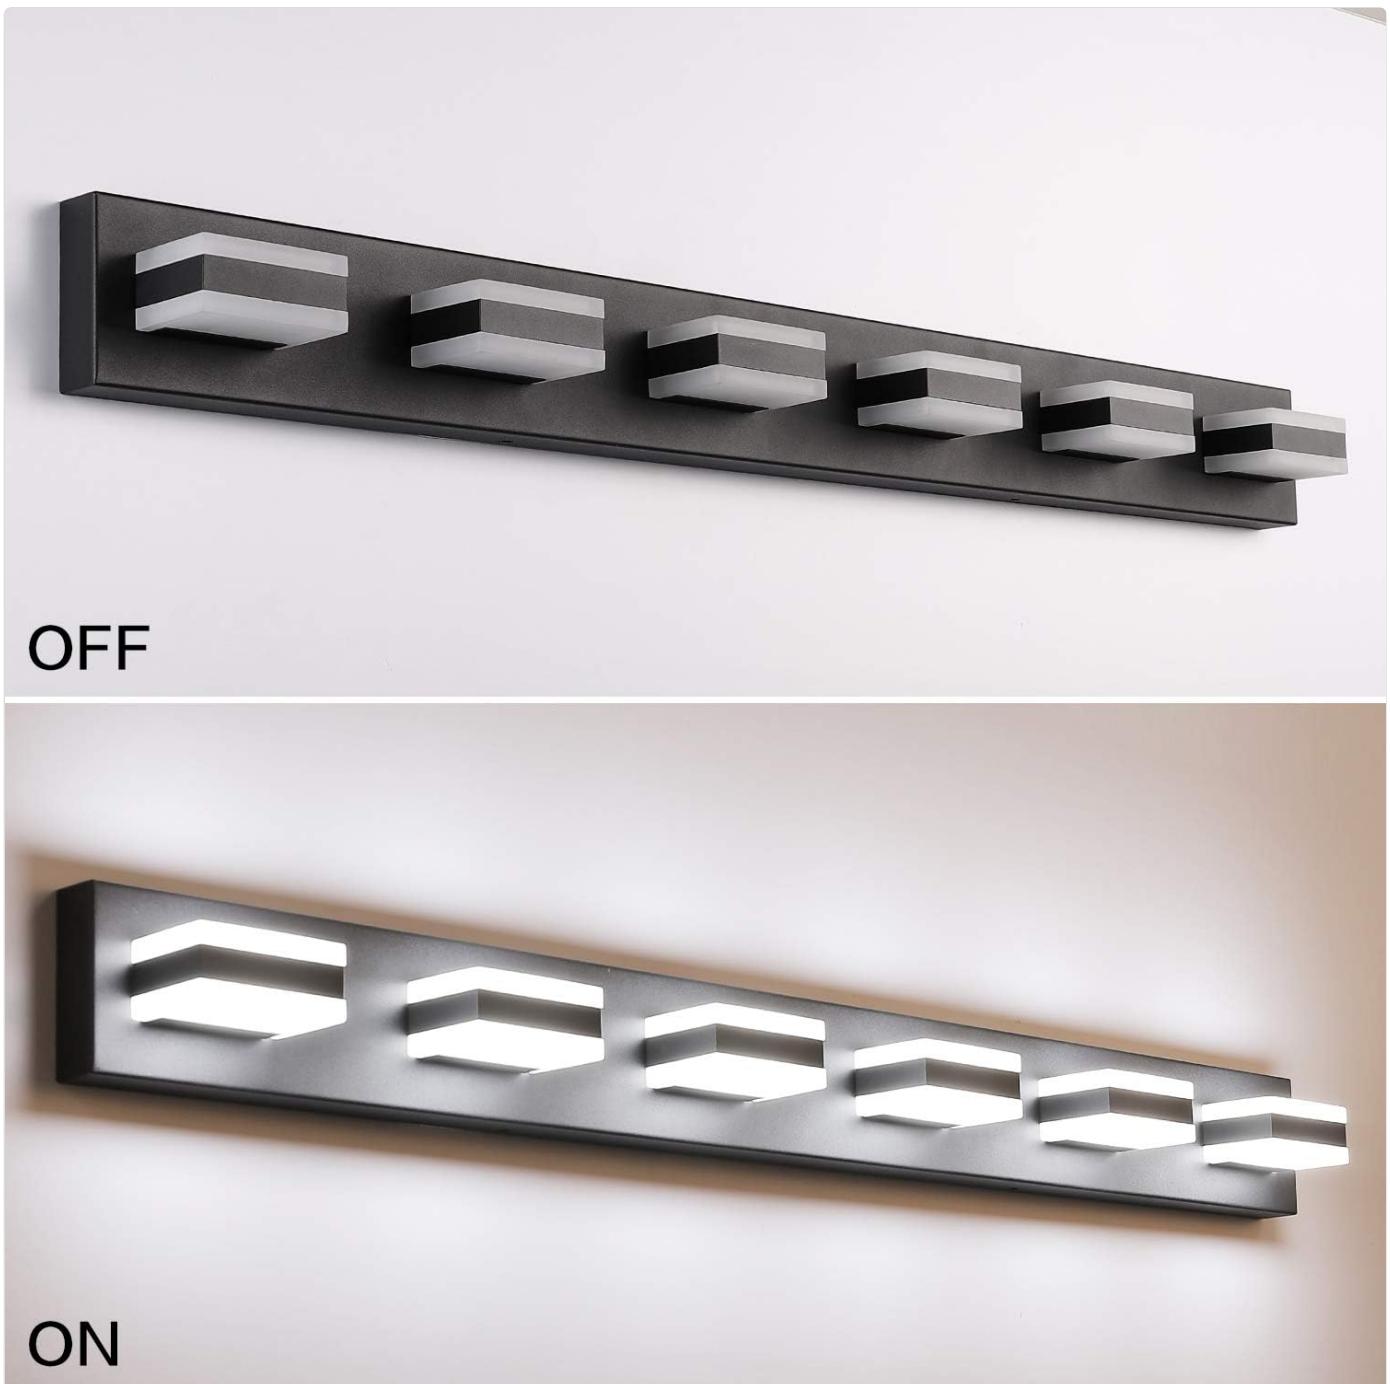


Figure 4: Visual representation of the light fixture in its off and on states.

MAINTENANCE

To ensure the longevity and optimal performance of your SOLFART LED Vanity Light, follow these maintenance guidelines:

- **Cleaning:** Before cleaning, ensure the power is turned off. Use a soft, dry cloth to wipe down the fixture. For stubborn spots, a slightly damp cloth with mild soap can be used, but avoid abrasive cleaners or solvents.
- **No Bulb Replacement:** This fixture uses integrated LED technology, meaning there are no bulbs to replace. The LEDs are designed for a long lifespan.
- **Inspection:** Periodically inspect the fixture for any signs of damage or loose connections. If any issues are found, turn off the power and consult a qualified electrician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture; Loose wiring connection; Faulty wall switch.	Check circuit breaker. Ensure all wire connections are secure. Test wall switch or consult an electrician.
Light flickers.	Loose wiring connection; Incompatible dimmer switch (this model is not dimmable).	Check and secure all wire connections. Ensure no dimmer switch is being used with this non-dimmable fixture.
Light is dim or not bright enough.	Incorrect voltage; Issue with the LED driver.	Verify correct voltage supply (110V). If problem persists, contact customer service.

WARRANTY AND SUPPORT

Your SOLFART LED Vanity Light comes with a **2-year warranty**. If you encounter any issues or have questions, please contact SOLFART customer service. Customer satisfaction is our priority.

To contact support, please log in to your purchase account, locate your order ID, and click "Contact Seller". We aim to reply within 24 hours.

© 2025 SOLFART. All rights reserved.