

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NC](#) /

› [ZOKOP 21 Inch Charcoal Grill \(with Charcoal Net\) Carrying Bag, Black User Manual](#)

NC 21 Inch Charcoal Grill

ZOKOP 21 Inch Charcoal Grill User Manual

Model: 21 Inch Charcoal Grill | Brand: NC

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your ZOKOP 21 Inch Charcoal Grill. Please read it thoroughly before assembly and operation, and retain it for future reference.

The ZOKOP 21 Inch Charcoal Grill is designed for outdoor cooking and heating. Its durable iron construction and heat-resistant paint ensure longevity. Key features include:

- Delicate shape can decorate the yard.
- Durable material is very utility.
- Have deep and wide pit which can hold more wood.
- Flame-retardant spark guard provide you a safe and clean environment.
- Lightweight make it carry conveniently.
- Heat resistance paint does not fade easily.



Image: The ZOKOP 21 Inch Charcoal Grill in use, showcasing its deep pit and the vibrant flames, highlighting its primary function for outdoor cooking and warmth.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, explosion, or burn hazard, which could cause property damage, personal injury, or death.

- For outdoor use only. Do not use indoors or in an enclosed area.
- Keep children and pets away from the grill at all times.
- Use on a flat, stable, non-combustible surface.
- Do not use gasoline, kerosene, or alcohol for lighting charcoal. Use only charcoal lighter fluid.
- Never leave a lit grill unattended.
- Allow the grill to cool completely before moving or cleaning.
- Wear protective gloves when handling hot components.
- Ensure adequate ventilation when using.

3. PACKAGE CONTENTS

Carefully unpack all components and ensure you have received all items listed below. If any parts are missing or damaged, do not attempt to assemble or use the grill. Contact customer support immediately.

- Grill Bowl (1)
- Legs (3)
- Cooking Grate (1)
- Charcoal Grate (1)
- Spark Screen / Mesh Lid (1)
- Poker / Fire Tool (1)
- Carrying Bag (1)
- Assembly Hardware (Screws, Washers, Nuts)

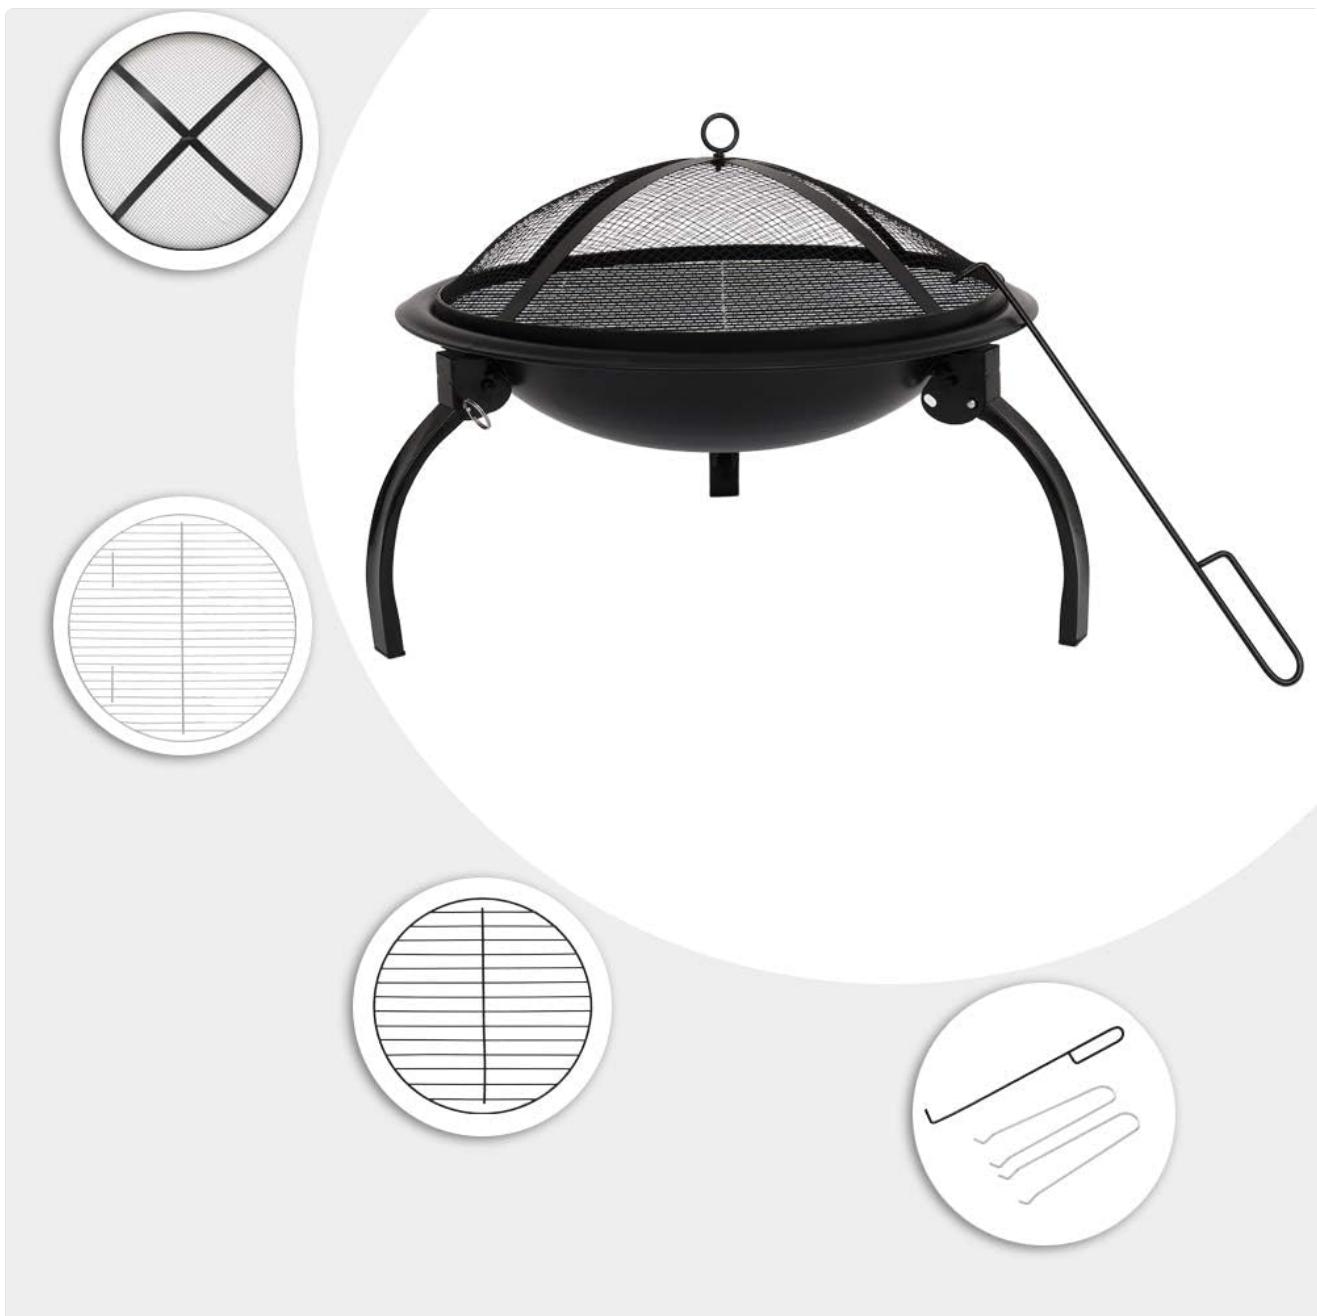


Image: An exploded view showing the individual components of the ZOKOP Charcoal Grill, including the grill bowl, legs, grates, spark screen, and poker, illustrating what is included in the package.



Image: The ZOKOP Charcoal Grill assembled with its spark screen lid and the accompanying poker tool, demonstrating the complete product and its accessories.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your ZOKOP 21 Inch Charcoal Grill:

- 1. Attach the Legs:** Locate the three legs and the corresponding attachment points on the grill bowl. Secure each leg to the grill bowl using the provided screws, washers, and nuts. Ensure they are tightened securely but do not overtighten.



Image: A detailed view of the leg attachment mechanism on the grill bowl, showing the ring and bracket for secure assembly.

2. **Insert Charcoal Grate:** Place the charcoal grate at the bottom of the grill bowl. This grate supports the charcoal and allows ash to fall through.
3. **Place Cooking Grate:** Position the cooking grate above the charcoal grate. This is where you will place your food.
4. **Position Spark Screen:** Place the spark screen (mesh lid) on top of the grill bowl. This helps contain sparks and embers during use.
5. **Final Check:** Ensure all components are securely in place and the grill is stable on a flat surface before use.

5. OPERATING INSTRUCTIONS

Before first use, it is recommended to "season" the grill by burning a small amount of charcoal for about 30 minutes without food. This helps burn off any manufacturing residues.

1. **Choose a Location:** Place the grill on a level, non-combustible surface, away from flammable materials, buildings, and overhanging structures.

2. **Add Charcoal:** Place charcoal briquettes or lump charcoal onto the charcoal grate. Do not overfill.
3. **Light Charcoal:** Use charcoal lighter fluid according to its instructions. Allow the fluid to soak in for a few minutes, then carefully light the charcoal. Do not add lighter fluid to hot or warm charcoal.
4. **Wait for Ash:** Allow the charcoal to burn until it is covered with a light gray ash (approximately 20-30 minutes). This indicates it's ready for cooking.
5. **Place Food:** Carefully place food on the cooking grate.
6. **Monitor and Cook:** Use the poker tool to adjust charcoal if needed. Keep the spark screen in place to prevent embers from escaping.
7. **Extinguish:** Once cooking is complete, allow the charcoal to burn down naturally. Do not use water to extinguish hot charcoal, as this can damage the grill and create steam hazards.



Image: The ZOKOP Charcoal Grill actively burning wood, set against a scenic sunset backdrop by a lake, illustrating its use for outdoor warmth and ambiance.



Image: A family enjoying grilling on the ZOKOP Charcoal Grill in a campsite setting, demonstrating its practical use for cooking outdoors.



Image: Two individuals grilling on the ZOKOP Charcoal Grill in a forest environment, highlighting its portability and suitability for various outdoor activities.

6. MAINTENANCE

Proper maintenance will extend the life of your grill.

- **Cleaning:** After the grill has completely cooled, remove the cooking grate and charcoal grate. Scrape off any food residue from the cooking grate. Empty ash from the grill bowl. Wipe down the grill bowl and legs with a damp cloth. Do not use abrasive cleaners.
- **Ash Disposal:** Ensure all ashes are cold before disposing of them. Wrap in heavy-duty aluminum foil and place in a non-combustible container.
- **Storage:** Store the grill in a dry, covered area when not in use. The included carrying bag provides convenient storage and transport.



Image: A person holding the ZOKOP Charcoal Grill neatly packed into its black carrying bag, demonstrating its portability and ease of storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Charcoal not lighting easily.	Insufficient lighter fluid; charcoal too damp; not enough air circulation.	Ensure charcoal is dry; use adequate lighter fluid; arrange charcoal for better airflow.
Grill is unstable.	Legs not tightened; uneven surface.	Check and tighten all leg screws; move grill to a flat, level surface.
Excessive smoke.	Too much lighter fluid; food drippings.	Allow lighter fluid to burn off completely before cooking; trim excess fat from food.

8. SPECIFICATIONS

Material: Iron

Finish Type: Painted

Shape: Round

Fuel Type: Charcoal

Color: Black

Product Dimensions: 22 x 22 x 12.75 inches (L x W x H)

Item Weight: 10.14 pounds (approx. 4.6 kg)

Brand: NC

Model: 21 Inch Charcoal Grill

UPC: 734931609543

ASIN: B09L6CMY54

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details. Keep your proof of purchase for any warranty claims.

Manufacturer: NC

For customer service inquiries, please visit the NC Store on Amazon:[NC Store](#)