

Braun MGK5445

Braun All-in-One Trimmer MGK5445 User Manual

INTRODUCTION

Welcome to the user manual for your Braun All-in-One Trimmer MGK5445. This versatile grooming tool is engineered for precision and efficiency, offering a comprehensive solution for your beard, hair, and body grooming needs. Please read these instructions carefully before using the device to ensure safe and optimal performance. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or fire, please observe the following safety precautions:

- Keep the device away from children.
- Do not use the device if it is damaged.
- Ensure the device is fully dry before charging.
- Do not open the device for repair; contact authorized service personnel.

PACKAGE CONTENTS

Your Braun All-in-One Trimmer MGK5445 package includes the following items:

- Braun All-in-One Trimmer Unit
- Precision Trimmer Head
- Nose & Ear Trimmer Head
- Body Groomer Head
- Hair Clipping Combs (various lengths)
- Beard Trimming Combs (various lengths)
- Gillette Razor
- Cleaning Brush
- Charging Cable



This image displays the Braun All-in-One Trimmer MGK5445 along with its complete set of accessories, including various trimmer heads, precision combs, and a Gillette razor.

SETUP

Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Connect the charging cable to the trimmer and plug it into a power outlet.
3. The charging indicator light will illuminate. A full charge provides up to 100 minutes of cordless trimming.

Attaching and Detaching Trimmer Heads and Combs

1. To attach a trimmer head, align it with the trimmer body and press firmly until it clicks into place.
2. To attach a comb, slide it onto the desired trimmer head until it locks.
3. To detach, gently pull the head or comb away from the trimmer body.



Proven on day 3 beards vs leading premium tier products

This image shows the main trimmer unit with various interchangeable heads and combs, illustrating how they attach to the device for different grooming needs.

OPERATING INSTRUCTIONS

The Braun All-in-One Trimmer MGK5445 offers multiple functions for comprehensive grooming.

General Trimming

- Ensure your skin and hair are clean and dry before trimming.
- Select the appropriate trimmer head and comb for your desired length and style.
- Turn on the trimmer and move it against the direction of hair growth for best results.

Beard Trimming

Use the beard combs to achieve various lengths:

- **Stubble (1-2 mm):** Use the shortest comb setting.
- **Short Beards (3-11 mm):** Use the short beard comb.
- **Long Beards (3-21 mm):** Use the long beard comb.
- For contour edging, remove the comb and use the precision trimmer head directly.

Hair Clipping

Attach the hair clipping comb (3-21 mm) to the main trimmer head. Adjust the comb to your desired hair length and move the trimmer against the direction of hair growth.

Body Grooming

Attach the body groomer head for comfortable and efficient trimming of body hair. Move the trimmer gently over the desired areas.

Nose and Ear Trimming

Attach the nose and ear trimmer head. Carefully insert the trimmer into your nostril or ear canal and gently rotate to trim unwanted hair. Do not insert too deeply.



A visual guide demonstrating the versatility of the trimmer, showing how to achieve stubble (1-2mm), short beards (3-11mm), long beards (13-21mm), precision trimming, contour edging, clean shaving, hair clipping (3-21mm), ear & nose trimming, and body grooming.



This composite image shows a man using the trimmer for various facial grooming tasks: shaping his beard, trimming nose hair, and tidying ear hair.



This image illustrates the trimmer being used for hair clipping at the back of the neck and for body hair removal on the torso.

MAINTENANCE AND CLEANING

Cleaning the Trimmer Head

1. After each use, switch off the trimmer and remove the trimmer head.
2. Brush away any loose hairs from the trimmer head and the trimmer body using the provided cleaning brush.
3. Rinse the trimmer head and combs under warm running water. The trimmer body is also waterproof and can be rinsed.
4. Allow all parts to air dry completely before reassembling or storing.

Waterproof Feature

The Braun All-in-One Trimmer is designed to be fully waterproof, allowing for convenient cleaning under running water and safe use in the shower.




The image shows the trimmer head being cleaned under a stream of water, highlighting its waterproof design for easy maintenance.

TROUBLESHOOTING

If you encounter any issues with your Braun All-in-One Trimmer, refer to the following common problems and solutions:

- **Trimmer does not turn on:** Ensure the battery is charged. Connect the trimmer to the charger and allow it to charge for at least 1 hour.
- **Poor trimming performance:** Clean the trimmer head and blades thoroughly. Ensure no hair or debris is obstructing the blades. The blades may need oiling if they feel stiff.
- **Battery not holding charge:** Ensure the charging cable is properly connected. If the issue persists after prolonged charging, the battery may require service.
- **Attachments not fitting:** Ensure you are using the correct attachment for the trimmer model. Align the attachment correctly before pressing firmly.

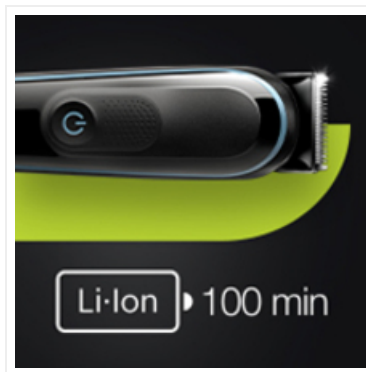

An icon indicating the trimmer's long-lasting Li-Ion battery, providing up to 100 minutes of cordless operation on a full charge.

SPECIFICATIONS

Feature	Detail
Model Number	MGK5445 (4210201418757)
Power Source	Electric, Rechargeable (Li-Ion Battery)
Battery Runtime	Up to 100 minutes
Charging Time	1 hour for full charge

Feature	Detail
Waterproof	Yes
Blade Material	Stainless Steel
Minimum Cutting Length	0.5 Millimetres
Maximum Cutting Length	21 Millimetres
Product Dimensions (LxWxH)	22.5 x 6.2 x 25.2 Centimeters
Item Weight	375 g (0.38 Kilograms)
Included Components	Clipper, various combs and heads
Target Audience	Men

WARRANTY INFORMATION

The Braun All-in-One Trimmer MGK5445 comes with a **2-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, alteration, or unauthorized repair.

CUSTOMER SUPPORT

For any questions, assistance, or warranty claims regarding your Braun All-in-One Trimmer MGK5445, please contact customer support:

- **Importer:** Procter & Gamble Home Products Private Limited
- **Address:** P&G Plaza, Cardinal Gracious Rd, Chakala, Andheri East, Mumbai, Maharashtra 400099, India
- **Braun Customer Care:** 1800-202-1364
- **Email:** intouch.im@pg.com