

[Manuals.plus](#) /

› [Procase](#) /

› Procase Tempered Glass Screen Protector for Nokia T20 Tablet (10.4-inch, 2021 Model) - Instruction Manual

Procase PC-08363175

Procase Tempered Glass Screen Protector for Nokia T20 Tablet (10.4-inch, 2021 Model)

Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the proper installation, usage, and care of your Procase Tempered Glass Screen Protector. Designed specifically for the Nokia T20 Tablet (10.4-inch, 2021 Model), this protector offers enhanced durability and maintains the original screen clarity and touch responsiveness.

1.1 Compatibility

This screen protector is exclusively compatible with the **Nokia T20 Tablet (10.4-inch, 2021 Model)**. It is not suitable for any other tablet models.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 2 x Procase Tempered Glass Screen Protectors
- 1 x Alcohol Prep Pad
- 1 x Microfiber Cleaning Cloth
- 1 x Dust Absorber Sticker
- Guide Stickers

What's in the Box

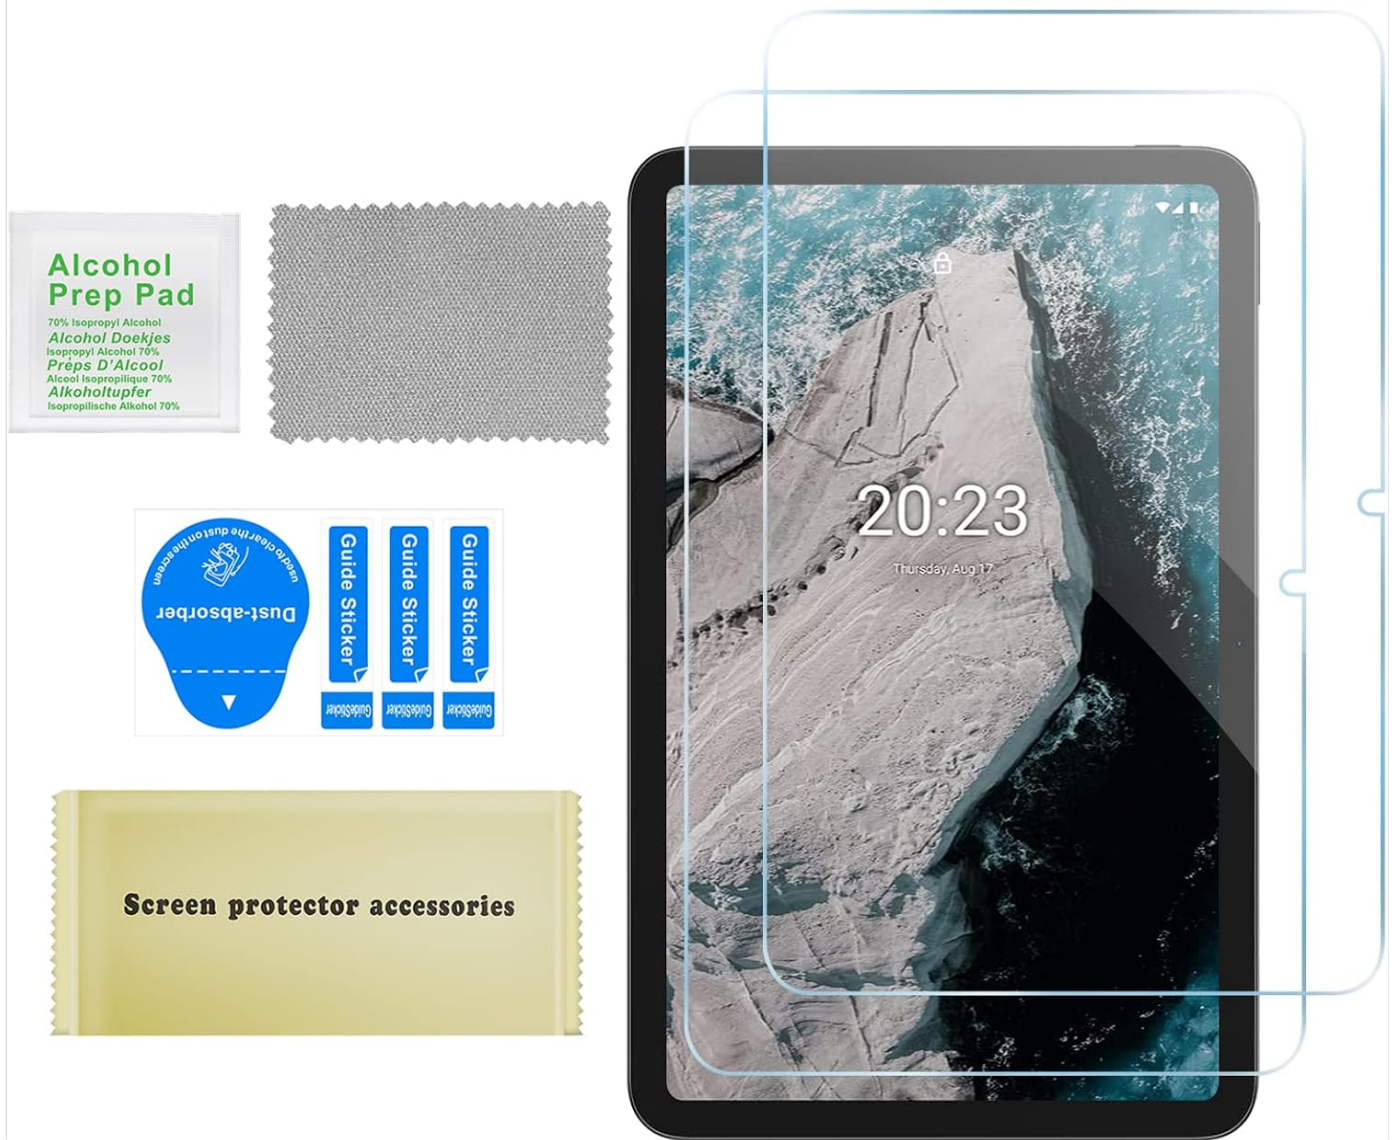


Image: Package contents for the screen protector.

3. INSTALLATION GUIDE


Follow these steps carefully for a bubble-free installation:

1. **Clean the Screen:** Use the included alcohol prep pad to thoroughly clean the tablet screen. Ensure all smudges and oils are removed.
2. **Dry the Screen:** Wipe the screen dry with the microfiber cleaning cloth. Make sure no lint or dust remains.
3. **Remove Dust:** Use the dust absorber sticker to pick up any remaining dust particles from the screen. Inspect the screen under light to ensure it is completely dust-free.
4. **Align the Protector:** Carefully peel off the protective film from the adhesive side of the tempered glass. Align the screen protector with the tablet screen, ensuring the cutouts for the camera and sensors match perfectly.
5. **Apply the Protector:** Once aligned, gently lower the protector onto the screen. The adhesive will begin to spread automatically.
6. **Remove Bubbles:** If any small bubbles appear, gently push them towards the edges of the screen using the microfiber cloth or a soft card. Most small bubbles will disappear within 24-48 hours.

True Touch Sensitivity



Ultra thin

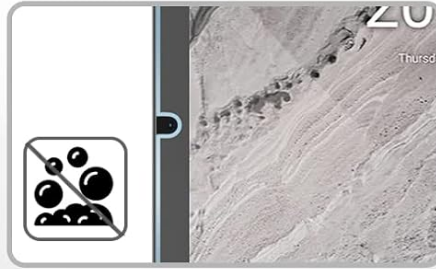

Bubble free



Easy to install



Image: Features highlighting ultra-thin design, bubble-free application, and ease of installation.

4. OPERATING AND FEATURES

The Procase Tempered Glass Screen Protector is designed to enhance your tablet experience while providing robust protection.

4.1 Key Features

- **High Definition Clarity:** Maintains the original visual quality of your tablet screen.
- **True Touch Sensitivity:** The ultra-thin design (0.33mm) ensures responsive and accurate touch interactions.
- **9H Hardness:** Provides superior resistance against scratches from keys, coins, and other sharp objects.
- **Shock-Resistant:** Engineered to absorb impact and protect your screen from drops and bumps.
- **Fingerprint and Smudge Resistance:** Features an oleophobic coating to reduce fingerprints and make cleaning easier.

High Definition

keeps original and stunning viewing quality & experience



Image: High definition clarity of the screen protector.



Image: Demonstrating true touch sensitivity with the screen protector installed.

5. MAINTENANCE

To ensure the longevity and clarity of your screen protector, follow these maintenance tips:

- **Regular Cleaning:** Use a soft, lint-free microfiber cloth to gently wipe the screen protector. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, alcohol (other than the provided prep pad for initial installation), or solvents, as these can damage the oleophobic coating.
- **Protect from Extreme Conditions:** While the protector is durable, avoid exposing it to extreme temperatures or direct, prolonged sunlight, which can affect its adhesive properties.

6. TROUBLESHOOTING

Common issues and their solutions:

Issue	Solution
Bubbles after installation	Small bubbles usually disappear within 24-48 hours. For larger bubbles, gently lift the nearest corner of the protector and reapply, pushing the bubble out with a soft card. Ensure the screen is dust-free.
Dust particles trapped under protector	Carefully lift the nearest corner of the protector. Use a dust absorber sticker to remove the dust particle from both the screen and the adhesive side of the protector. Reapply slowly.
Protector not adhering properly at edges	Ensure the screen is perfectly clean and dry before application. Press firmly on the edges for a few seconds. If the issue persists, the protector might be misaligned or the screen might have a slight curve not compatible with rigid glass.
Reduced touch sensitivity	Ensure the protector is correctly installed and free of air gaps. If the issue persists, verify that the tablet's touch settings are optimized.

7. SPECIFICATIONS

Feature	Detail
Model Number	PC-08363175
Compatible Devices	Nokia T20 Tablet (10.4-inch, 2021 Model)
Material	Tempered Glass
Hardness	9H Surface Hardness
Thickness	0.33 mm
Color	Transparent
Finish Type	Glossy
Water Resistance Level	Not Water Resistant
Product Dimensions (L x W)	24.1 cm x 15.2 cm
Item Weight	49.8 grams

Shock-Resistant

High-temperature treatment for better shatter-proof quality



Liquid-Resistant



Scratch-Resistant



Image: Demonstrating the protector's resistance to shock, liquids, and scratches.

8. WARRANTY AND SUPPORT

Procase products are manufactured with quality and performance in mind. For specific warranty information or technical support, please refer to the product packaging or contact Procase customer service directly through their official website or the retailer where the product was purchased.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question