

Manuals.plus /

› Yeaki /

› Yeaki Selfie Stick Tripod KH5S Instruction Manual

Yeaki KH5S

Yeaki Selfie Stick Tripod with Wireless Remote and LED Fill Light

Model: KH5S

INTRODUCTION

Thank you for choosing the Yeaki Selfie Stick Tripod. This versatile device combines a compact selfie stick, a stable tripod, and an integrated LED fill light with a detachable wireless remote, designed to enhance your photography and videography experience. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



The Yeaki Selfie Stick Tripod, showcasing its compact, extended, and tripod modes, along with the wireless remote.

PRODUCT FEATURES

- **Pocket-sized Portability:** Weighing only 6.7 oz and folding to 8 inches, it is highly portable and easy to carry.
- **Detachable Wireless Remote:** Features a Bluetooth remote control with a wireless connection range of up to 33 feet for convenient photo and video capture.
- **Rechargeable LED Fill Light:** Equipped with a filter plate and diffuser to soften light and reduce glare. Offers 3 color temperature modes (White, Natural, Warm) and 3 brightness levels for each mode, ideal for low-light

conditions.

- **Ultra-long Extension:** Extends from a compact 8 inches to an impressive 46 inches, allowing for wider angle shots and full-body photography.
- **Ultra-stable Tripod Design:** Constructed from aviation-grade stainless steel and reinforced ABS. Features a 4-point support design with a 70° angle for enhanced balance and a lower center of gravity. Silicone non-slip foot pads ensure a firm grip.
- **Wide Compatibility:** Universally compatible with iOS and Android smartphones, including iPhone 16/15/14/14 Pro/13/13 Pro/12/11/XS Max/XS/XR/X/8/7 and various Samsung Galaxy, LG, and TCL models.



Key features of the Yeaki Selfie Stick Tripod.


SETUP GUIDE

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that you have the selfie stick tripod, wireless remote, user manual, and fill light charging cable. Inspect for any visible damage.

2. Charging the LED Fill Light

1. Locate the charging port on the LED fill light.
2. Connect the provided charging cable to the fill light and a suitable USB power source.
3. The red indicator light signifies charging. A blue light indicates a full charge.

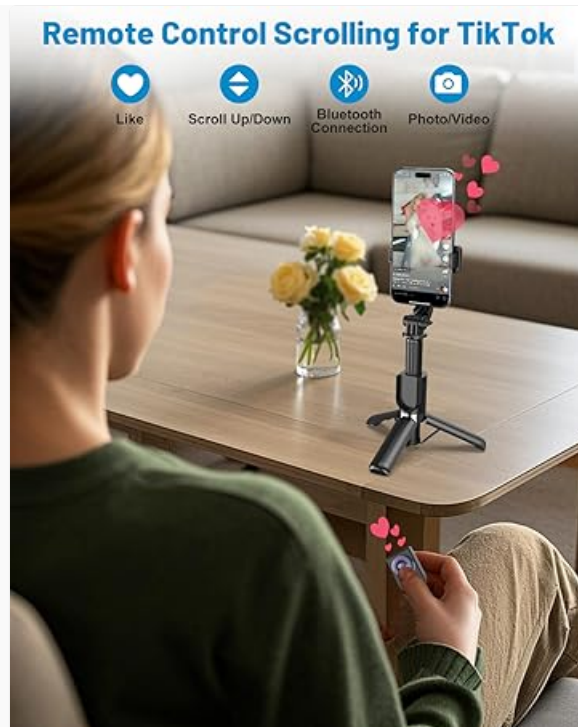

Charging the LED Fill Light.

3. Pairing the Wireless Remote (Bluetooth)


1. **Turn On:** Long press the remote button for 8 seconds until the LED light begins to flash blue.
2. **Pairing:** On your mobile phone, navigate to Bluetooth settings and search for a device named "Selfie".
3. **Connect:** Select "Selfie" to connect. The LED light on the remote will turn off upon successful connection.
4. **Memory Function:** The Bluetooth remote has a memory function and will automatically reconnect to the last paired phone when turned on.
5. **Auto Shut-off:** If not paired or connected within approximately 5 minutes, the Bluetooth will automatically shut down to conserve battery.
6. **Turn Off:** Long press the remote button for 5 seconds. The LED indicator will flash 3 times before shutting down.



4. Attaching Your Smartphone

Gently extend the phone holder clamp and securely place your smartphone. Ensure the phone is centered and stable within the clamp. The holder supports phones with widths between 2.36 inches and 3.74 inches.

Bluetooth Remote Widely Compatible

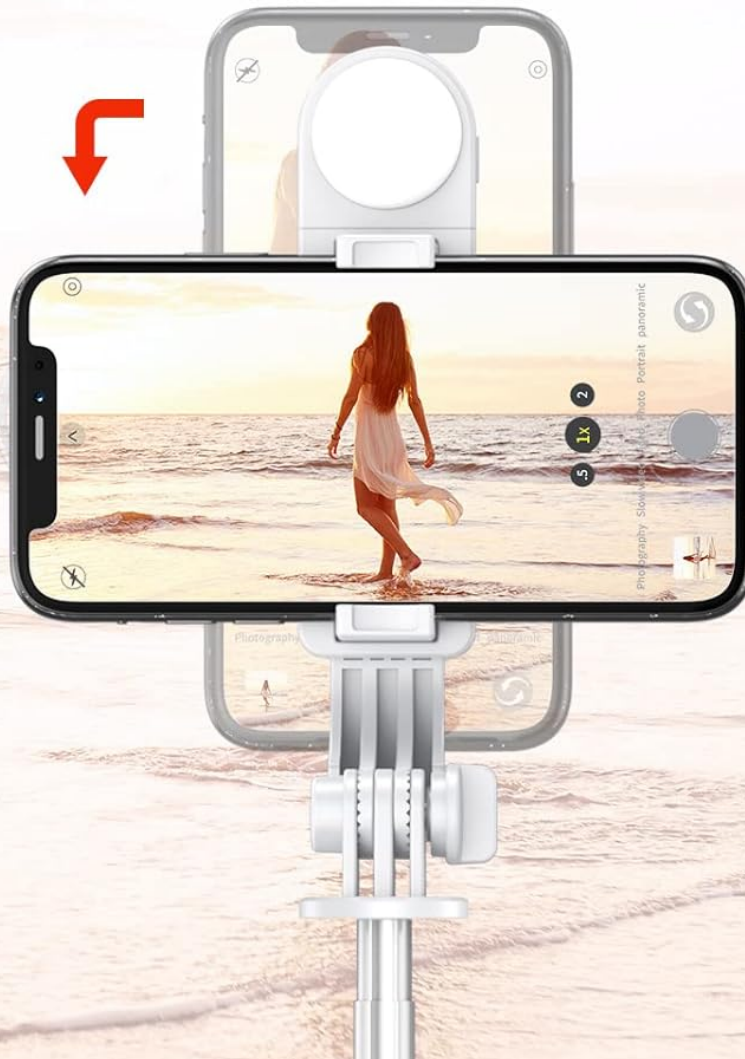

IOS



Android



OPERATING INSTRUCTIONS

1. Using as a Selfie Stick

1. Hold the base of the device firmly.
2. Extend the telescopic rod to your desired length (up to 46 inches).
3. Adjust the phone holder angle for optimal framing. The adjustable chuck allows for flexible positioning.
4. Use the wireless remote to capture photos or start/stop video recording.

Selfie Stick Tripod

「 Selfie Stick 」

「 Tripod Stand 」



Selfie Stick and Tripod Stand functionality.

2. Using as a Tripod Stand

1. Ensure the telescopic rod is fully retracted or extended to a stable height.
2. Gently unfold the tripod legs at the base until they lock into position. The 70° angle design provides stability.
3. Place the tripod on a flat, stable surface.

4. Adjust the phone holder to your preferred horizontal or vertical orientation.
5. Use the wireless remote for hands-free capture.

Super Stable Selfie Stick Tripod

Center of gravity, lower & more balanced

Reinforced base
70° large angle
Non-slip pad



Stable tripod design with reinforced base and non-slip pads.

3. Adjusting the LED Fill Light

1. **Color Temperature:** Short press the fill light button to cycle through 3 color temperature modes: White,

Natural, and Warm.

2. **Brightness:** Long press the fill light button for 2 seconds to adjust the brightness level. There are 3 brightness levels for each color temperature.

3 Color Temperature Modes

3 brightness levels of each mode



White



Natural



Warm

First Gear

Second Gear

Third Gear



Demonstration of 3 color temperature modes and 3 brightness levels.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, remove the battery from the wireless remote and store the device in a dry place.
- **Battery Replacement (Remote):** When the remote battery is depleted, replace it with a new, compatible battery.
- **Avoid Water:** Do not use the device near water or in excessively humid environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wireless remote not connecting.	Remote battery low or off; Bluetooth not enabled on phone; incorrect pairing.	Ensure remote is charged/has new battery and turned on (blue light flashing). Enable Bluetooth on your phone. Forget "Selfie" in Bluetooth settings and re-pair.
LED fill light not turning on or dim.	Battery depleted; light turned off.	Charge the fill light. Short press the button to turn on/cycle modes. Long press to adjust brightness.
Tripod unstable.	Legs not fully extended/locked; uneven surface; phone too heavy.	Ensure tripod legs are fully extended and locked. Place on a flat, stable surface. Verify phone weight is within the 6.6 oz limit.
Selfie stick not extending/retracting smoothly.	Dust or debris in telescopic sections.	Gently clean the telescopic sections. Avoid forcing extension/retraction.

SPECIFICATIONS

Feature	Detail
Model Number	KH5S
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Folded Length	8 inches
Maximum Extended Length	46 inches
Item Weight	6.7 ounces
Weight Limit (Phone)	6.6 ounces
Phone Holder Width	2.36" - 3.74"
Bluetooth Range	Up to 33 feet
Fill Light Modes	3 Color Temperatures (White, Natural, Warm), 3 Brightness Levels

WARRANTY AND SUPPORT

Your Yeaki Selfie Stick Tripod comes with a worry-free **1-year warranty**. For any questions, technical assistance, or warranty claims, please contact our friendly customer service team. Refer to the contact information provided on the product packaging or visit the official Yeaki website for support details.

We are committed to providing excellent support and ensuring your satisfaction with our products.