

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Snap-On Zig Zag Presser Foot Instruction Manual for Euro Pro 9015 Sewing Machine

UpStart Components SM-5011-4-2PK-DL219

UpStart Components Snap-On Zig Zag Presser Foot Instruction Manual

For Euro Pro 9015 Sewing Machine (Compatible with Part #5011-4)

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your UpStart Components Snap-On Zig Zag Presser Foot. This product is designed as a replacement part to ensure optimal performance of your compatible sewing machine. Please read this manual thoroughly before use.

2. PRODUCT OVERVIEW

The Snap-On Zig Zag Presser Foot is an essential accessory for various sewing applications, particularly those requiring a zig-zag stitch. Its snap-on design allows for quick and easy attachment and removal, enhancing your sewing efficiency and ensuring professional-looking results.



Figure 2.1: Two UpStart Components Snap-On Zig Zag Presser Feet. These feet are designed for general sewing tasks, including zig-zag stitching.

3. COMPATIBILITY

This UpStart Components Snap-On Zig Zag Presser Foot is specifically designed for compatibility with the **Euro Pro 9015 Sewing Machine**. It is a replacement for original part number **5011-4**.

4. SETUP AND INSTALLATION

Follow these steps to properly install the Snap-On Zig Zag Presser Foot onto your sewing machine:

1. **Power Off:** Ensure your sewing machine is turned off and unplugged from the power outlet for safety.
2. **Raise Needle and Presser Foot Lifter:** Use the handwheel to raise the needle to its highest position. Then, raise the presser foot lifter lever.
3. **Remove Existing Presser Foot (if applicable):** Locate the small lever or button at the back of the presser foot holder. Press it to release the current presser foot. If your machine uses a screw, loosen the screw to detach the foot.
4. **Position New Presser Foot:** Place the new Snap-On Zig Zag Presser Foot directly under the presser foot holder, aligning the crossbar of the foot with the groove on the holder.
5. **Lower Presser Foot Lifter:** Slowly lower the presser foot lifter. The holder should snap securely onto the presser foot's crossbar. You should hear a click, indicating it is locked in place.
6. **Verify Installation:** Gently try to pull the presser foot off to ensure it is firmly attached. It should not come off easily.

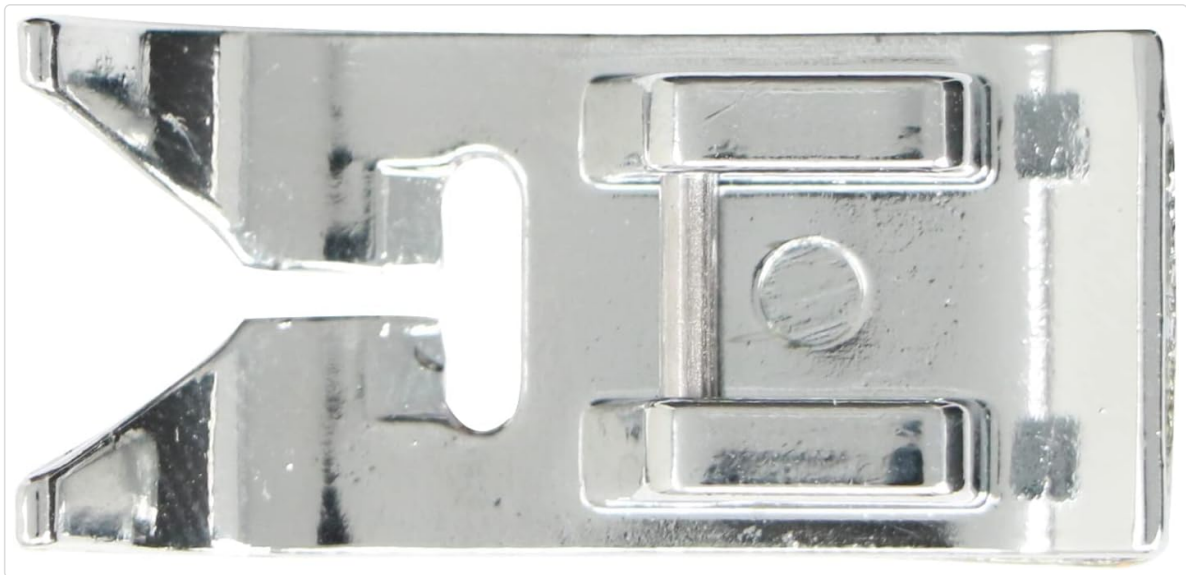


Figure 4.1: Top view of the presser foot, highlighting the snap-on bar for attachment to the machine's presser foot holder.

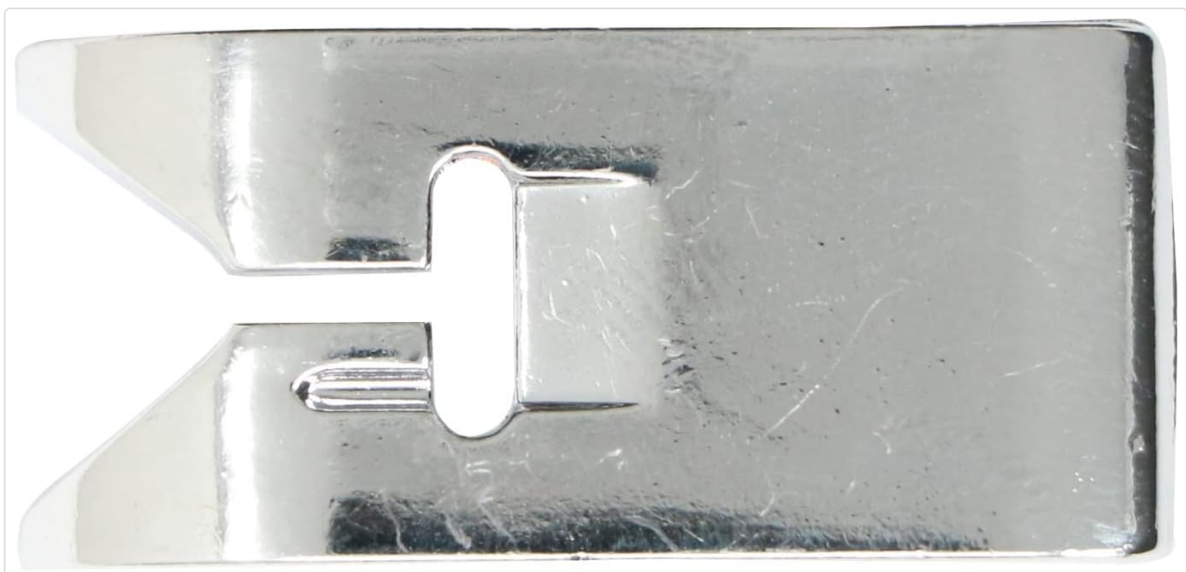


Figure 4.2: Bottom view of the presser foot, showing the wide opening for zig-zag stitching and fabric feed.

5. OPERATING INSTRUCTIONS

Once installed, the Snap-On Zig Zag Presser Foot is ready for use with your Euro Pro 9015 Sewing Machine. This foot is versatile for various sewing tasks:

- **General Sewing:** Ideal for straight stitches and basic construction.
- **Zig Zag Stitching:** The wide opening allows the needle to move freely from side to side, making it suitable for zig-zag stitches, appliqué, and decorative stitching.
- **Utility Stitches:** Can be used for various utility stitches offered by your sewing machine, such as mending or reinforcing seams.

Always refer to your sewing machine's primary instruction manual for specific stitch settings, tension adjustments, and fabric handling guidelines.

6. MAINTENANCE

To ensure the longevity and optimal performance of your presser foot:

- **Cleaning:** Periodically wipe the presser foot with a soft, dry cloth to remove lint and dust. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the presser foot in a clean, dry place to prevent damage or corrosion.
- **Inspection:** Regularly inspect the foot for any signs of wear or damage. Replace if necessary to maintain sewing quality.

7. TROUBLESHOOTING

If you encounter issues while using the presser foot, consider the following:

- **Skipped Stitches:** Ensure the presser foot is correctly installed and securely snapped onto the holder. Check your needle for bends or dullness.
- **Uneven Feeding:** Verify that the presser foot is lowered properly and applying even pressure to the fabric. Adjust presser foot pressure if your machine allows.
- **Foot Not Attaching:** Confirm that the presser foot holder is aligned correctly with the foot's crossbar. Apply gentle pressure to snap it into place.

For persistent issues, consult your Euro Pro 9015 Sewing Machine's main instruction manual or contact a qualified sewing machine technician.

8. SPECIFICATIONS

Specification	Detail
Product Type	Snap-On Zig Zag Presser Foot
Brand	UpStart Components
Compatible Machine	Euro Pro 9015 Sewing Machine
Compatible Part Number	5011-4

Model Number	SM-5011-4-2PK-DL219
Quantity	2-Pack

9. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Battery. This product is not affiliated with any original manufacturers, and their warranties do not cover this replacement part.

For support or warranty inquiries, please refer to the contact information provided with your purchase or visit the UpStart Battery official website.