

[Manuals.plus](#) /

› [UpStart Components](#) /

› Instruction Manual for Snap On Zig Zag Presser Foot

UpStart Components SM-5011-4-DL334

Instruction Manual

Snap On Zig Zag Presser Foot Replacement

Model: SM-5011-4-DL334 | Brand: UpStart Components

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your UpStart Components Snap On Zig Zag Presser Foot, compatible with Kenmore 385.15208400 Sewing Machines and Part #5011-4. This replacement presser foot is designed to restore or enhance the functionality of your sewing machine for various sewing applications, improving efficiency and professional results.

SETUP AND INSTALLATION

Follow these steps to properly install the Snap On Zig Zag Presser Foot onto your sewing machine:

- Power Off:** Ensure your sewing machine is turned off and unplugged from the power outlet before beginning installation. This prevents accidental operation and ensures safety.
- Raise Needle and Presser Foot Lifter:** Use the handwheel to raise the needle to its highest position. Then, raise the presser foot lifter lever to lift the existing presser foot.
- Remove Old Presser Foot:** Locate the small lever or button at the back of the presser foot holder. Press or lift this to release the current presser foot. Carefully slide the old foot off.
- Align New Presser Foot:** Position the UpStart Components Snap On Zig Zag Presser Foot directly under the presser foot holder. Ensure the crossbar of the presser foot aligns with the groove on the presser foot holder.
- Snap On:** Lower the presser foot lifter lever. The presser foot holder should snap securely onto the crossbar of the new presser foot. You should hear a click, indicating it is properly attached.
- Verify Installation:** Gently try to pull the presser foot off to ensure it is firmly attached. If it moves, repeat step 5.



UPStart components



Image: The UpStart Components Snap On Zig Zag Presser Foot, showing its design and the brand logo. This image helps identify the product.



Image: A detailed view of the Snap On Zig Zag Presser Foot, highlighting its snap-on mechanism and the zig-zag opening. This view is crucial for understanding how it attaches and functions.

OPERATING INSTRUCTIONS

Once installed, the Snap On Zig Zag Presser Foot is ready for use. This foot is primarily designed for zig-zag stitching, but can also be used for straight stitching and other basic sewing tasks.

- **Select Stitch:** On your Kenmore 385.15208400 sewing machine, select the desired stitch pattern (e.g., zig-zag, straight stitch). Ensure the stitch width is appropriate for the opening of the presser foot to prevent needle breakage.
- **Place Fabric:** Position your fabric under the presser foot, aligning the edge as needed for your seam allowance.
- **Lower Presser Foot:** Lower the presser foot lifter lever to bring the presser foot down onto the fabric.
- **Begin Sewing:** Start sewing at a moderate speed. The wide opening of the zig-zag foot allows the needle to move freely from side to side for zig-zag stitches without hitting the foot.
- **Adjust Settings:** Adjust stitch length and width as required for your project. Always test on a scrap piece of fabric first.



Image: The underside view of the presser foot, showing the flat surface that glides over fabric and the needle opening. This perspective is useful for understanding fabric feed.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your presser foot.

- **Cleaning:** After each use, especially if sewing with lint-producing fabrics, use a small brush or lint roller to remove any thread fibers or dust accumulated on and around the presser foot.
- **Storage:** Store the presser foot in a clean, dry place when not in use, preferably in a sewing machine accessory box, to prevent dust accumulation and damage.
- **Inspection:** Periodically inspect the presser foot for any signs of wear, bending, or damage. A damaged presser foot can affect stitch quality or even damage your machine.

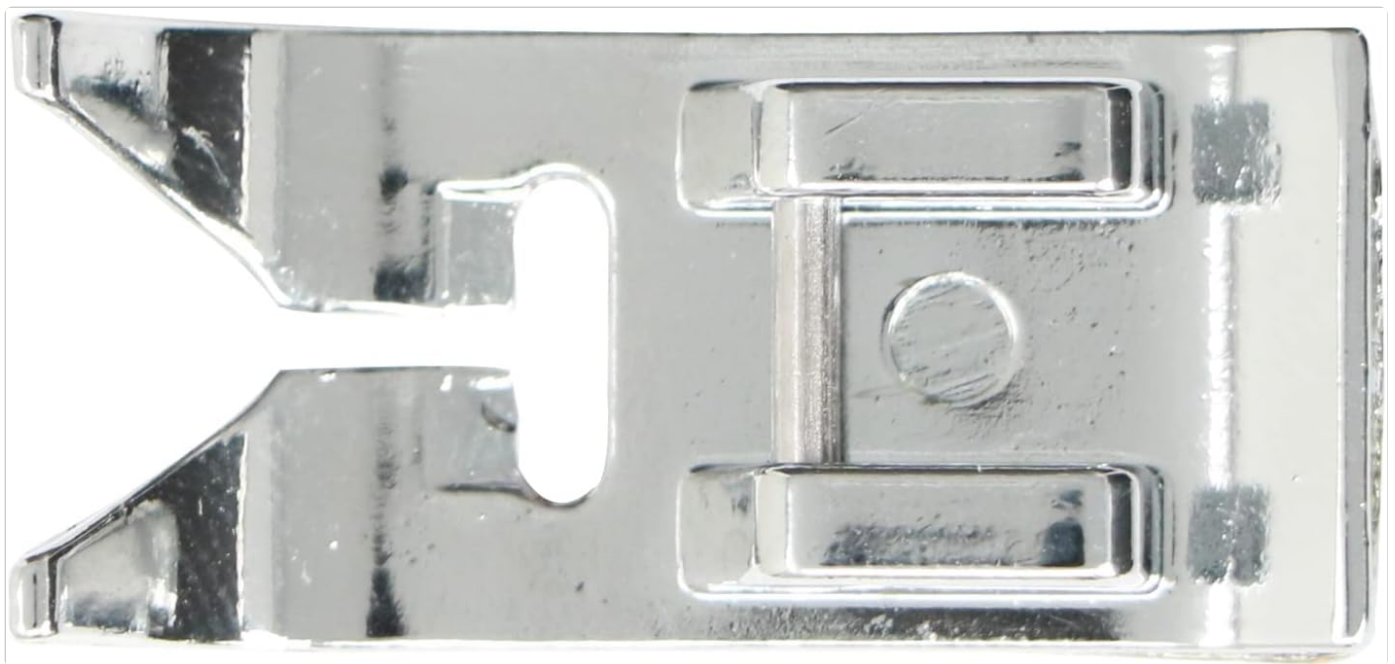


Image: The top view of the presser foot, showing the attachment point and the overall shape. This view helps in understanding how it connects to the machine.

TROUBLESHOOTING

If you encounter issues while using your presser foot, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Needle hitting presser foot	Incorrect stitch width setting; Foot not properly installed.	Reduce stitch width; Re-install presser foot ensuring it snaps securely.
Fabric not feeding smoothly	Lint buildup; Presser foot not lowered.	Clean presser foot and feed dogs; Ensure presser foot is fully lowered.
Loose or uneven stitches	Tension issues; Damaged presser foot.	Check sewing machine tension settings; Inspect presser foot for damage and replace if necessary.

SPECIFICATIONS

Key specifications for the UpStart Components Snap On Zig Zag Presser Foot:

- **Product Type:** Replacement Snap On Zig Zag Presser Foot
- **Compatibility:** Kenmore 385.15208400 Sewing Machine
- **Part Number:** Compatible with Part #5011-4
- **Brand:** UpStart Components
- **Model Number:** SM-5011-4-DL334
- **ASIN:** B09LB5ZYMV
- **Features:** Easy to replace and use, suitable for various sewing applications, enhances efficiency.

WARRANTY INFORMATION

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Battery. Please refer to the seller's return policy or contact UpStart Battery directly for specific warranty details and claims.

Note: This product is NOT an OEM product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers.

SUPPORT

For further assistance or inquiries regarding your UpStart Components Snap On Zig Zag Presser Foot, please contact the seller or visit the UpStart Components official website. Ensure you have your product model number (SM-5011-4-DL334) and ASIN (B09LB5ZYMV) ready when seeking support.

You can typically find contact information for the seller on your purchase receipt or through the platform where the product was purchased (e.g., Amazon.ca).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09LB5ZYMV>

More documents and user manuals: <https://manuals.plus/>