



[Manuals.plus](#) /

- › [UpStart Components](#) /
- › User Manual for UpStart Components Snap On Zig Zag Presser Foot

## UpStart Components SM-5011-4-2PK-DL279

# User Manual: Snap On Zig Zag Presser Foot

Brand: UpStart Components | Model: SM-5011-4-2PK-DL279

## 1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your UpStart Components Snap On Zig Zag Presser Foot. This product is designed as a replacement part for the Janome JA1512 Sewing Machine and is compatible with Part #5011-4. Please read this manual thoroughly before use to ensure proper function and longevity of the product.



Image 1.1: Two UpStart Components Snap On Zig Zag Presser Feet. These are shiny, metallic, and designed for sewing machines.

## 2. PRODUCT OVERVIEW

The UpStart Components Snap On Zig Zag Presser Foot is a high-quality replacement part engineered to restore or enhance the performance of your compatible sewing machine. It is specifically designed for zig-zag stitching but can also be used for various other sewing applications.

### Key Features:

- Quantity: This package includes two (2) Snap On Zig Zag Presser Feet.
- Compatibility: Specifically designed for Janome JA1512 Sewing Machine and compatible with original Part #5011-4.
- Ease of Use: Features a snap-on design for quick and straightforward replacement.
- Versatility: Suitable for a wide range of sewing applications, improving efficiency and professional results.

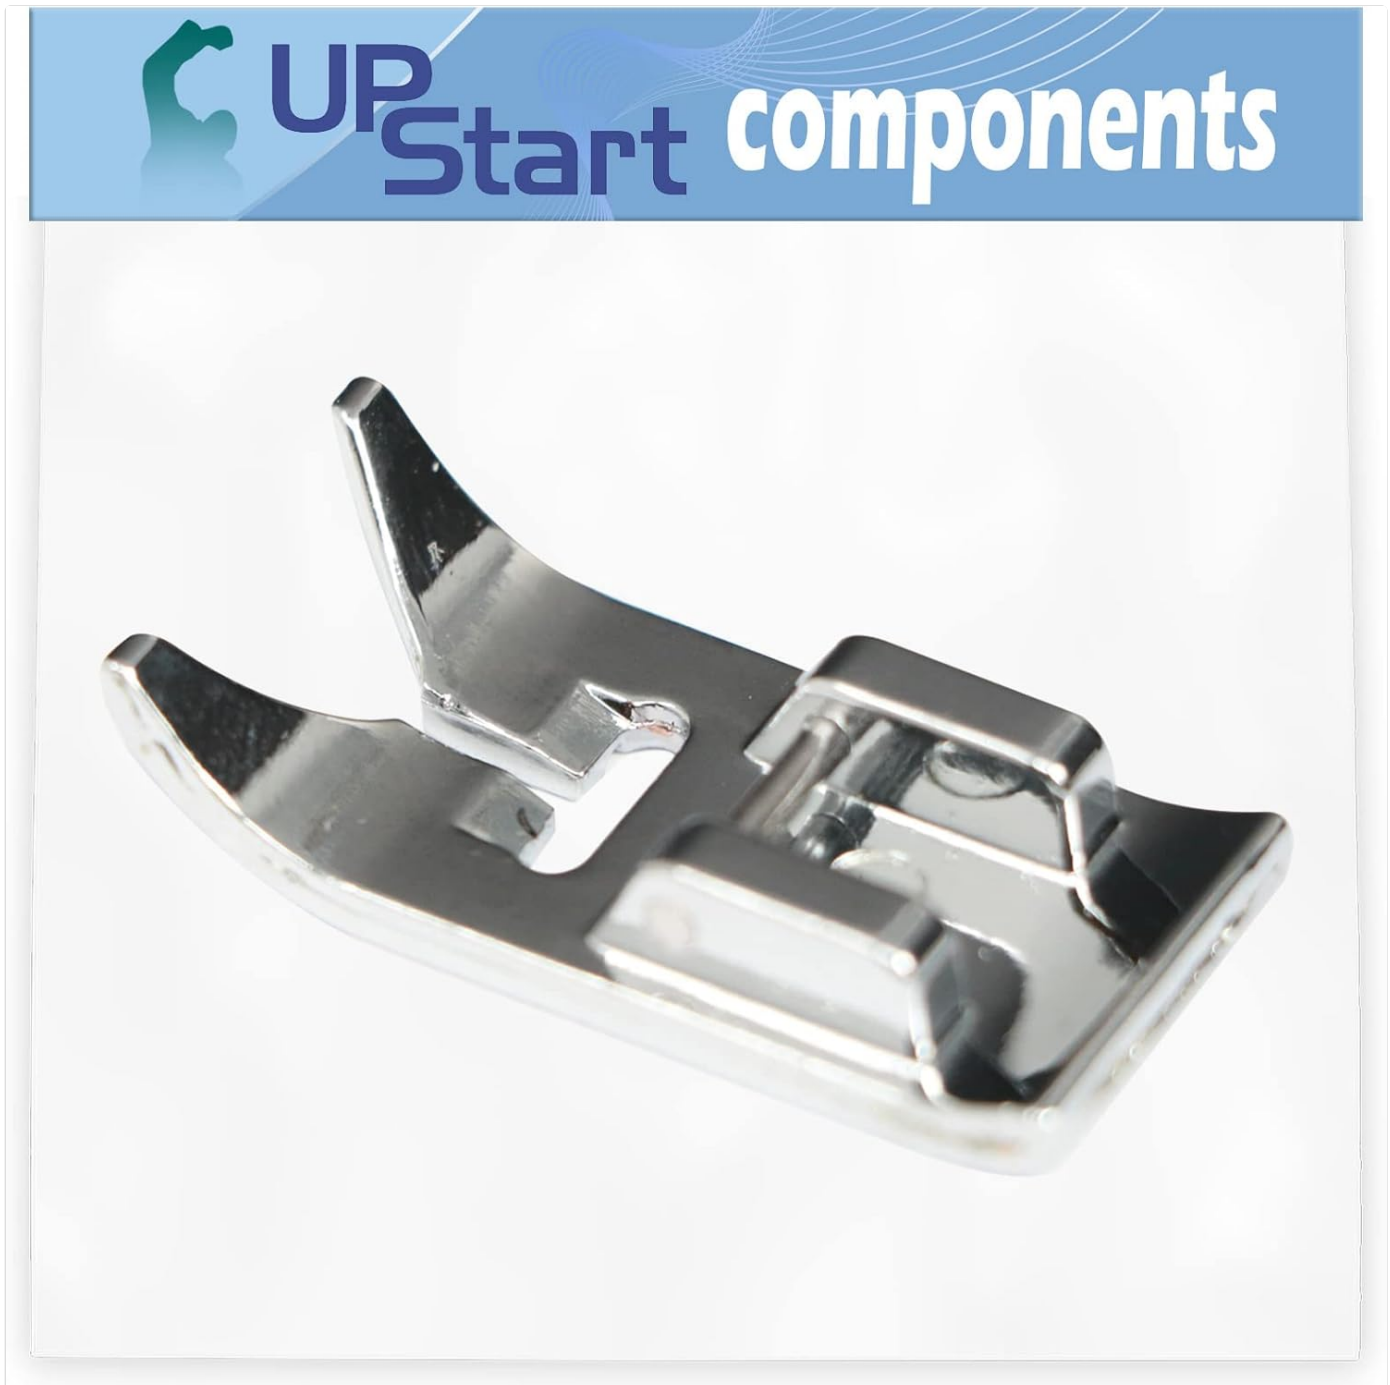 


Image 2.1: A single UpStart Components Snap On Zig Zag Presser Foot, shown with the brand's logo in the background. The foot is metallic and has a standard snap-on mechanism.

## 3. SETUP AND INSTALLATION

Replacing your sewing machine's presser foot is a simple process. Always ensure your sewing machine is turned off and unplugged before attempting any installation or removal of parts.

## Installation Steps:

1. **Power Off:** Turn off your sewing machine and unplug it from the power outlet.
2. **Raise Needle:** Use the handwheel to raise the needle to its highest position.
3. **Raise Presser Foot Lever:** Lift the presser foot lever to raise the current presser foot.
4. **Remove Old Foot:** Locate the small lever or button at the back of the presser foot holder. Press this to release the existing presser foot. Gently slide the old foot off.
5. **Attach New Foot:** Position the new UpStart Components Snap On Zig Zag Presser Foot directly under the presser foot holder, aligning the crossbar of the foot with the groove on the holder.
6. **Snap On:** Lower the presser foot lever slowly. The holder should snap onto the crossbar of the new presser foot. You may hear a click.
7. **Verify Installation:** Gently try to lift the presser foot by hand to ensure it is securely attached.

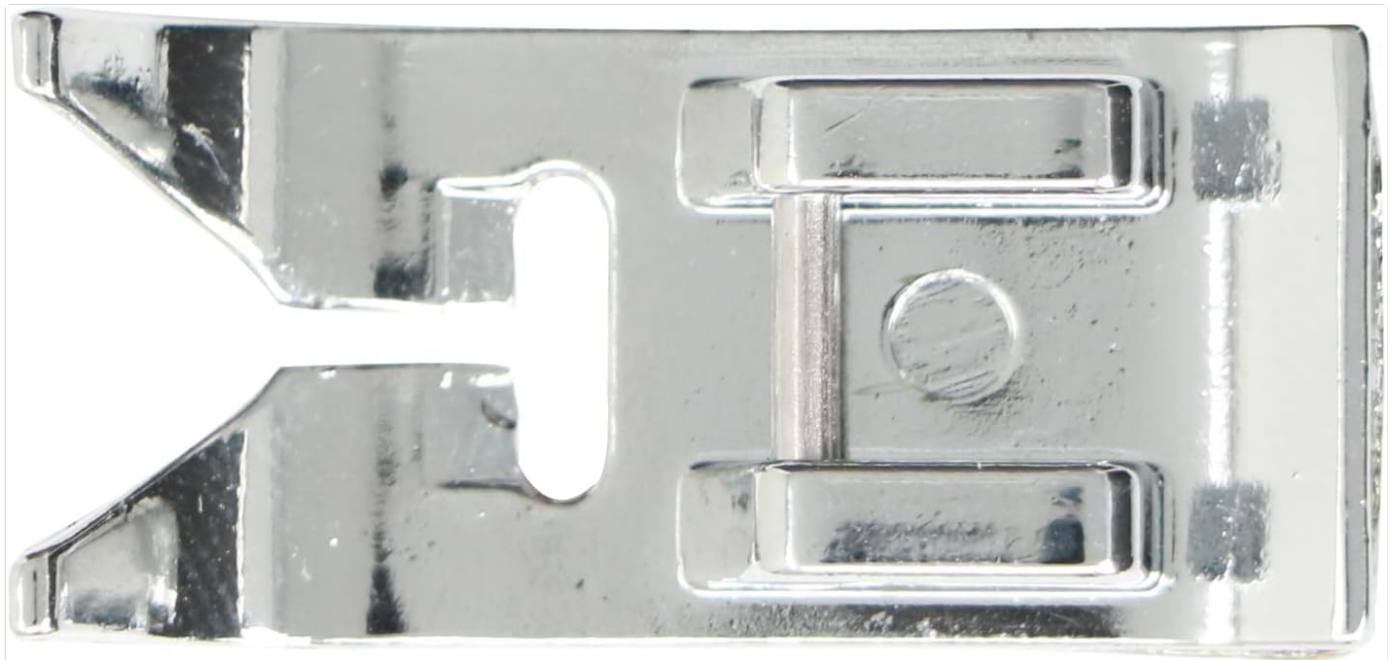 


Image 3.1: Top view of the Snap On Zig Zag Presser Foot, showing the attachment mechanism. The metallic foot has a central bar for snapping onto the machine's holder.

## 4. OPERATING INSTRUCTIONS

Once the Snap On Zig Zag Presser Foot is installed, you can proceed with your sewing projects. This foot is versatile and can be used for various stitches, including straight stitch, zig-zag stitch, and decorative stitches, depending on your machine's capabilities.

### General Usage Tips:

- **Needle Compatibility:** Ensure your needle is appropriate for the fabric and thread you are using.
- **Stitch Selection:** Select the desired stitch pattern (e.g., zig-zag, straight) on your Janome JA1512 sewing machine.
- **Stitch Length and Width:** Adjust stitch length and width settings as needed for your project. For zig-zag stitches, ensure the needle clears the foot's opening on both sides.
- **Fabric Placement:** Place your fabric under the presser foot, aligning the edge as necessary.
- **Lower Presser Foot:** Lower the presser foot lever to hold the fabric firmly in place before beginning to sew.

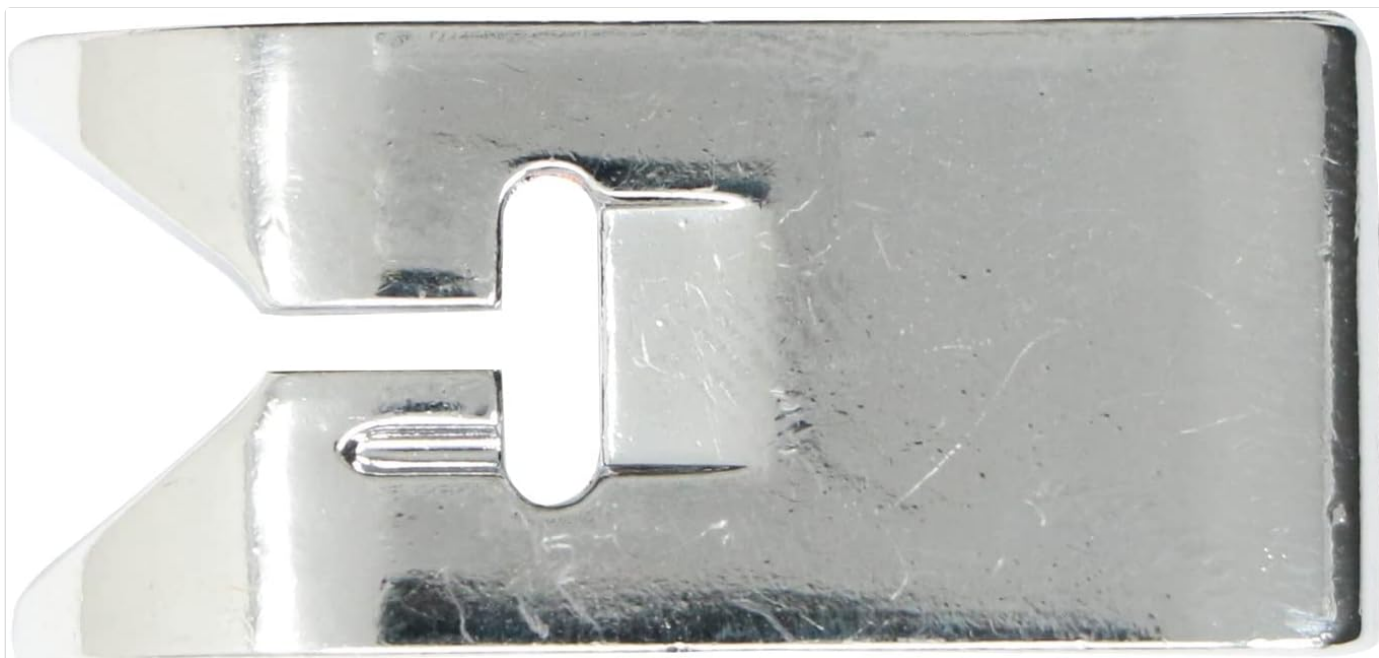 


Image 4.1: Bottom view of the Snap On Zig Zag Presser Foot, showing the wide opening for zig-zag stitching and the feed dog grooves. The underside is smooth and metallic.

## 5. MAINTENANCE

Proper maintenance will extend the life of your presser foot and ensure consistent sewing performance.

- **Cleaning:** Periodically wipe the presser foot with a soft, dry cloth to remove lint and dust. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the presser foot in a clean, dry place, preferably in its original packaging or a dedicated sewing accessory box, to prevent scratches or damage.
- **Inspection:** Before each use, inspect the presser foot for any signs of wear, bending, or damage. A damaged foot can affect stitch quality.

## 6. TROUBLESHOOTING

If you encounter issues while using your presser foot, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Stitches are uneven or skipped.	Presser foot not properly installed; needle bent or dull; incorrect tension settings.	Re-install the presser foot securely; replace the needle; adjust upper and lower thread tension.
Fabric is not feeding smoothly.	Presser foot pressure too low; lint build-up under the foot or around feed dogs.	Adjust presser foot pressure (if your machine allows); clean the area around the feed dogs and presser foot.
Needle hits the presser foot.	Incorrect stitch width selected for the foot; foot not aligned correctly.	Ensure stitch width is appropriate for the zig-zag foot's opening; re-attach the presser foot, ensuring it is centered.

If problems persist, consult your Janome JA1512 sewing machine's user manual or contact a qualified sewing machine technician.

## 7. SPECIFICATIONS

Attribute	Detail
Product Name	Snap On Zig Zag Presser Foot
Brand	UpStart Components
Model Number	SM-5011-4-2PK-DL279
Compatible Machine	Janome JA1512 Sewing Machine
Compatible Part #	5011-4
Quantity	2 per pack
ASIN	B09LBC6D7Q
Date First Available	November 8, 2021

## 8. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Battery (the seller, Certified Battery, is likely related to UpStart Battery). This product is not affiliated with any other brands and is not covered under any warranties offered by the original manufacturers of compatible machines. For support or warranty inquiries, please contact the seller, Certified Battery, directly through the platform where the purchase was made. The standard return policy allows for refunds or replacements within 30 days of purchase. For general information or to explore other products, you may visit the [UpStart Components brand page](#).

© 2024 UpStart Components. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.