

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Snap On Zig Zag Presser Foot Instruction Manual for Brother VX-1400 Sewing Machine

UpStart Components SM-5011-4-2PK-DL115

UpStart Components Snap On Zig Zag Presser Foot Instruction Manual for Brother VX-1400 Sewing Machine

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the UpStart Components Snap On Zig Zag Presser Foot, designed as a replacement part for the Brother VX-1400 Sewing Machine. This accessory is intended to enhance your sewing experience by providing a reliable and efficient solution for various sewing applications.



Image 1: Two UpStart Components Snap On Zig Zag Presser Feet, showing their snap-on mechanism.

2. SAFETY INFORMATION

Always ensure your sewing machine is turned off and unplugged before installing or removing any accessories, including the presser foot. Keep small parts away from children. Handle the presser foot carefully to avoid injury or damage to the product.

3. PACKAGE CONTENTS

Your package should contain the following items:

- 2 x UpStart Components Snap On Zig Zag Presser Foot

4. COMPATIBILITY

This replacement presser foot is compatible with the **Brother VX-1400 Sewing Machine** and is designed to replace part number **5011-4**. It is a snap-on type presser foot.

5. SETUP AND INSTALLATION

Follow these steps to install the Snap On Zig Zag Presser Foot:

1. **Turn off and unplug your sewing machine:** For safety, always disconnect power before handling machine parts.
2. **Raise the presser foot lever:** Lift the presser foot lever to its highest position.
3. **Remove the existing presser foot:** Locate the small lever or button at the back of the presser foot holder. Press it to release the current presser foot. If your machine uses a screw, loosen the screw to detach the foot.
4. **Position the new presser foot:** Place the UpStart Components Snap On Zig Zag Presser Foot directly under the presser foot holder, aligning the pin on the foot with the groove on the holder.
5. **Lower the presser foot lever:** Slowly lower the presser foot lever. The presser foot should snap into place securely. You may hear a click.
6. **Verify installation:** Gently try to pull the presser foot off to ensure it is firmly attached.



Image 2: Close-up of the UpStart Components Snap On Zig Zag Presser Foot, highlighting the snap-on mechanism.

6. OPERATING INSTRUCTIONS

The Snap On Zig Zag Presser Foot is designed for general-purpose sewing, particularly for zig-zag stitches, but also suitable for straight stitches and decorative stitches. Its wide opening allows for various stitch patterns without obstruction.

- **Stitch Selection:** Select your desired stitch pattern (e.g., zig-zag, straight) on your Brother VX-1400 sewing machine.
- **Fabric Placement:** Place your fabric under the presser foot, aligning the edge as needed.
- **Sewing:** Begin sewing at a moderate speed. The design of this foot helps to feed the fabric smoothly and evenly, contributing to professional-looking results.



Image 3: Underside view of the presser foot, showing the needle opening and feed dog clearance.

7. MAINTENANCE

To ensure the longevity and optimal performance of your presser foot:

- **Cleaning:** Periodically clean the presser foot with a soft, dry cloth to remove lint and dust. Avoid using harsh chemicals.
- **Storage:** Store the presser foot in a dry, safe place when not in use, preferably in its original packaging or a dedicated sewing accessory box, to prevent damage or loss.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Presser foot does not snap on.	Not aligned correctly with the holder.	Ensure the pin on the foot is directly under the groove of the holder before lowering the lever.
Uneven stitching.	Incorrect tension settings on the sewing machine or fabric not feeding properly.	Check your machine's tension settings. Ensure the fabric is placed flat and guided gently.

9. SPECIFICATIONS

Feature	Detail
Product Type	Snap On Zig Zag Presser Foot
Brand	UpStart Components
Compatibility	Brother VX-1400 Sewing Machine
Replaces Part #	5011-4
Model Number	SM-5011-4-2PK-DL115
Quantity	2-Pack

10. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Battery. For warranty claims or support inquiries, please refer to the contact information provided with your purchase or visit the UpStart Battery official website.