

- Manuals.plus /
- › UpStart Components /
 - › Snap On Zig Zag Presser Foot Replacement for Singer 5525 Sewing Machine - Compatible with Part #5011-4

UpStart Components SM-5011-4-DL412

Instruction Manual: Snap On Zig Zag Presser Foot

Brand: UpStart Components | Model: SM-5011-4-DL412

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your UpStart Components Snap On Zig Zag Presser Foot. This replacement part is designed to be compatible with the Singer 5525 Sewing Machine and is an alternative to Part #5011-4. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW

The Snap On Zig Zag Presser Foot is a versatile accessory for sewing machines, primarily used for creating zig-zag stitches, but also suitable for straight stitches, decorative stitches, and other applications requiring a wider needle opening. Its snap-on design allows for quick and easy attachment and removal from compatible sewing machines.



Figure 1: Front view of the UpStart Components Snap On Zig Zag Presser Foot.



UPStart components



Figure 2: The presser foot shown with the UpStart Components branding.

COMPATIBILITY

This UpStart Components Snap On Zig Zag Presser Foot is specifically designed as a replacement part for the **Singer 5525 Sewing Machine**. It is also compatible with sewing machines that use a presser foot equivalent to **Part #5011-4**. Please verify your sewing machine's compatibility before installation.

SETUP AND INSTALLATION

Follow these steps to properly install the Snap On Zig Zag Presser Foot on your compatible sewing machine:

1. **Power Off:** Ensure your sewing machine is turned off and unplugged from the power outlet for safety.
2. **Raise Needle and Presser Foot Lever:** Raise the needle to its highest position and lift the presser foot lever.
3. **Remove Old Presser Foot (if applicable):** Locate the small lever or button at the back of the presser foot holder. Press it to release the current presser foot.

4. **Position New Presser Foot:** Place the UpStart Components Snap On Zig Zag Presser Foot directly under the presser foot holder, ensuring the pin on the foot aligns with the groove on the holder.
5. **Lower Presser Foot Lever:** Slowly lower the presser foot lever. The foot should snap securely into place. You may hear a click.
6. **Verify Installation:** Gently try to pull the presser foot off to ensure it is firmly attached. If it detaches, repeat the installation steps.

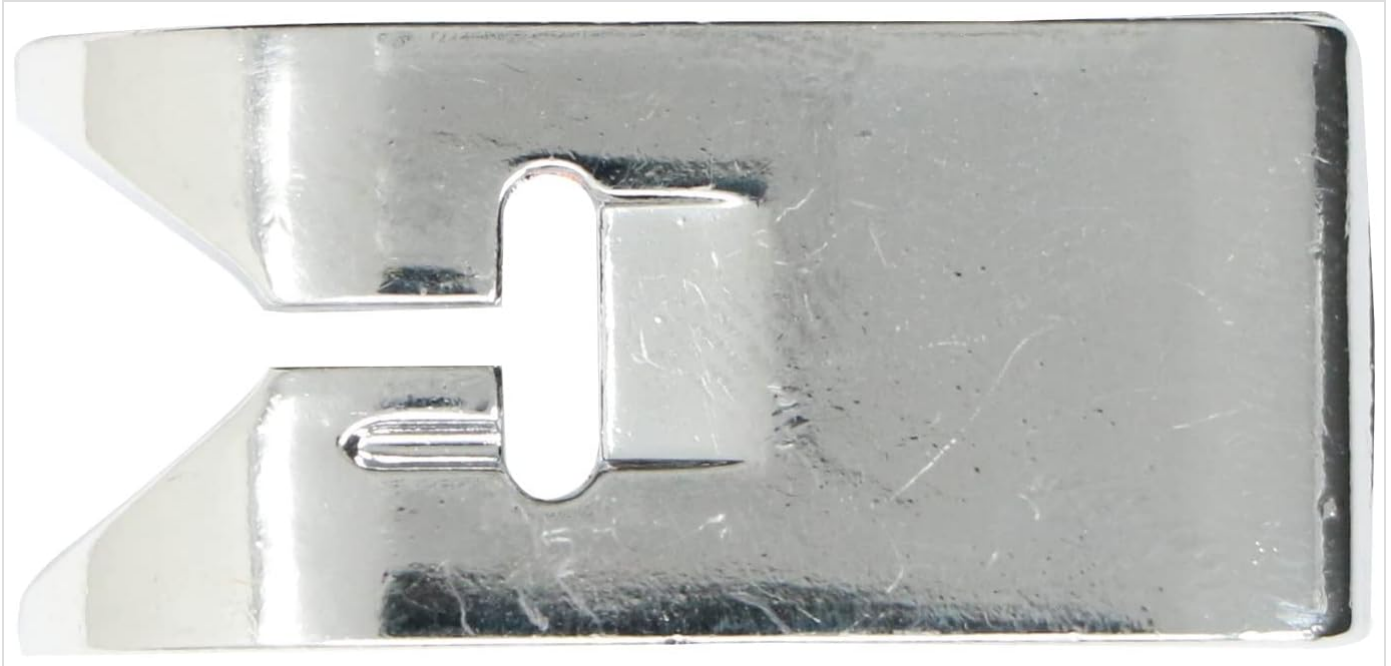


Figure 3: Top view of the presser foot, highlighting the snap-on bar for attachment.

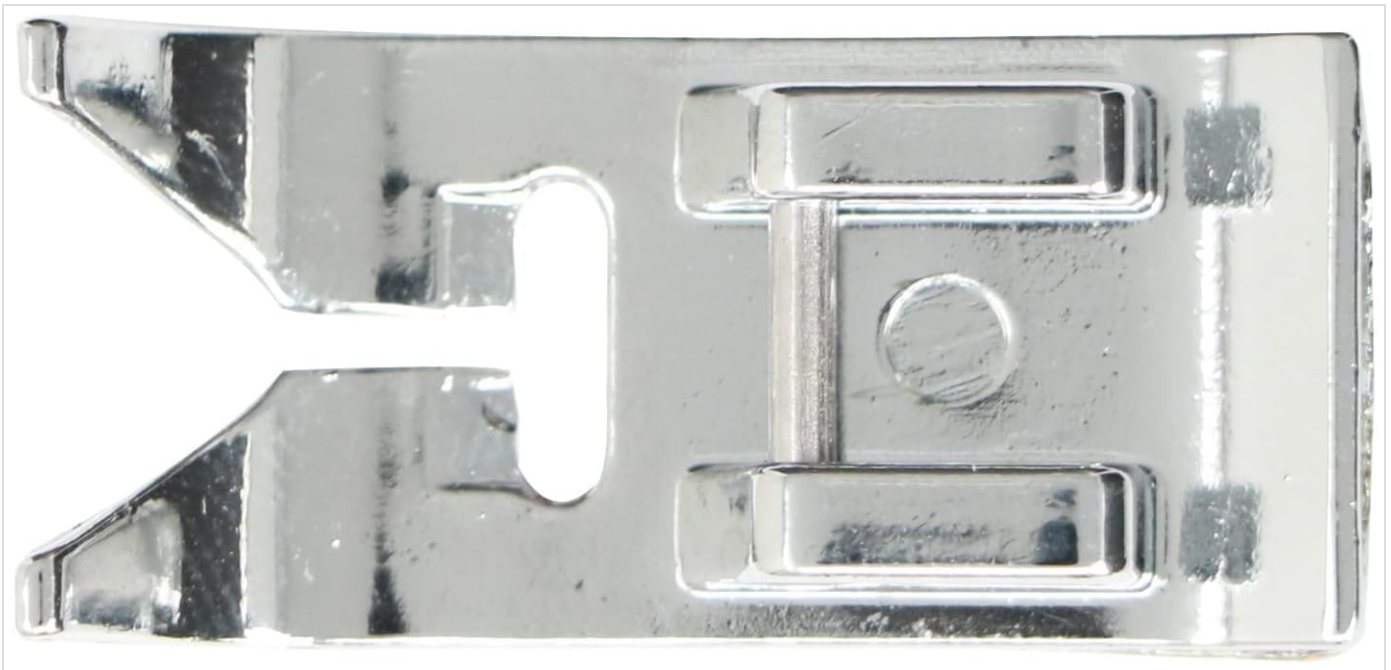


Figure 4: Bottom view of the presser foot, showing the wide opening for zig-zag stitches and feed dog clearance.

OPERATING INSTRUCTIONS

Once installed, the Snap On Zig Zag Presser Foot functions like any standard zig-zag foot. Here are general guidelines for its use:

- **Zig-Zag Stitching:** Select the zig-zag stitch setting on your sewing machine. Adjust the stitch width and length as

desired. The wide opening of this foot allows the needle to move freely from side to side.

- **Straight Stitching:** This foot can also be used for straight stitching. Ensure your needle is centered in the foot's opening to prevent it from striking the foot.
- **Decorative Stitches:** Many decorative stitches involve side-to-side needle movement, making this foot suitable for such applications.
- **Fabric Feeding:** Ensure the fabric is placed flat under the foot and guided gently. The foot's design allows for smooth feeding of various fabric types.

MAINTENANCE

To ensure the longevity and optimal performance of your presser foot, follow these simple maintenance tips:

- **Cleaning:** Periodically wipe the presser foot with a soft, dry cloth to remove lint, dust, and fabric fibers. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the presser foot in a clean, dry place, preferably in a sewing accessory box, to prevent damage or loss.
- **Inspection:** Before each use, quickly inspect the foot for any signs of damage, bending, or wear that could affect its performance or your sewing machine.

TROUBLESHOOTING

If you encounter issues while using the presser foot, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Foot does not snap on securely.	Incorrect alignment or debris in holder.	Ensure the pin on the foot is perfectly aligned with the groove on the holder. Clean any debris from the holder.
Needle hits the presser foot.	Incorrect stitch setting or foot not fully engaged.	Verify that the stitch width is appropriate for the foot's opening. Re-install the foot to ensure it is fully snapped into place.
Fabric not feeding smoothly.	Lint accumulation or incorrect foot pressure.	Clean the underside of the foot and the feed dogs of your machine. Adjust presser foot pressure if your machine allows.

SPECIFICATIONS

Key specifications for the UpStart Components Snap On Zig Zag Presser Foot:

Attribute	Detail
Brand	UpStart Components
Model Number	SM-5011-4-DL412
Compatibility	Singer 5525 Sewing Machine, Part #5011-4
Type	Snap On Zig Zag Presser Foot
Material	Metal (typically steel or alloy)

WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. It is not an OEM (Original Equipment Manufacturer) product. All brand names and logos mentioned are registered trademarks of their respective owners and are used solely to illustrate compatibility.

Any warranties for this specific product are offered solely by **UpStart Battery**, the seller of this UpStart Components brand replacement part. This product is not covered under any warranties offered by the original manufacturers of the sewing machines it is compatible with.

For warranty claims or support inquiries, please contact the seller, Certified Battery, directly through your purchase platform or their provided contact information. Please retain your proof of purchase for any warranty-related requests.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question