

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Bobbin Case Instruction Manual for Singer 5805 Sewing Machine (Model SM-421326-DL141)

UpStart Components SM-421326-DL141

UpStart Components Bobbin Case Instruction Manual for Singer 5805 Sewing Machine

Model: SM-421326-DL141 | Compatible with Singer #421326

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your new UpStart Components Bobbin Case. This replacement part is designed for use with the Singer 5805 Sewing Machine and is compatible with Singer part number #421326. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product.

2. PRODUCT OVERVIEW

The UpStart Components Bobbin Case is a high-quality replacement part engineered to restore optimal performance to your Singer 5805 sewing machine. It is designed for durability and precise thread tension control.

- Easy to replace and use, designed to make your sewing machine operate efficiently.
- Suitable for various types of sewing applications.
- Engineered to increase efficiency and contribute to professional-looking project results.
- Directly compatible with Singer part #421326.



UPStart components



Image 2.1: Top view of the UpStart Components Bobbin Case. This image shows the general shape and opening for the bobbin.



Image 2.2: Angled view of the UpStart Components Bobbin Case, highlighting the tension spring and latch mechanism.

3. SETUP AND INSTALLATION

Follow these steps carefully to replace the bobbin case in your Singer 5805 sewing machine.

1. **Power Off Machine:** Ensure your sewing machine is turned off and unplugged from the power outlet to prevent accidental operation.
2. **Access Bobbin Area:** Open the bobbin cover plate on your sewing machine. This is typically located on the needle plate or in a front-loading compartment, depending on your specific Singer 5805 model.
3. **Remove Old Bobbin Case:** Carefully remove the existing bobbin case. If a bobbin is inside, remove it first. Note the orientation of the old bobbin case as you remove it, as the new one will be installed in the same manner.
4. **Inspect New Bobbin Case:** Before installation, visually inspect the new UpStart Components Bobbin Case for any manufacturing defects or damage. Ensure the tension spring is properly seated.
5. **Insert New Bobbin Case:** Hold the new bobbin case by its latch. Align it correctly with the bobbin housing in your sewing machine. Gently push it into place until it clicks or seats firmly. It should not feel loose.
6. **Close Bobbin Area:** Close the bobbin cover plate.
7. **Test Functionality:** Plug in and power on your sewing machine. Perform a few test stitches on scrap fabric to ensure the bobbin case is correctly installed and the machine is stitching properly.

4. OPERATING INSTRUCTIONS

Once the bobbin case is installed, follow these steps to load a bobbin and prepare for sewing.

1. **Wind Bobbin:** Wind a bobbin with your desired thread according to your sewing machine's instructions.
2. **Insert Bobbin into Case:** Hold the bobbin case in one hand. Place the wound bobbin into the bobbin case. Ensure the

thread unwinds in the correct direction (usually counter-clockwise when viewed from the top, but refer to your sewing machine manual for specifics).

- 3. **Thread Bobbin Case:** Guide the bobbin thread through the tension spring slot on the bobbin case. Pull the thread gently to ensure it moves smoothly and has appropriate tension.
- 4. **Place Bobbin Case in Machine:** Open the bobbin compartment of your sewing machine. Hold the bobbin case by its latch and insert it into the shuttle hook area. Ensure it is seated securely. The latch should release, holding the case in place.
- 5. **Draw Up Bobbin Thread:** Lower the needle into the needle plate hole, turn the handwheel one full revolution to pick up the bobbin thread, and pull both the bobbin and upper threads to the back of the machine before starting to sew.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your bobbin case.

- **Cleaning:** Periodically remove the bobbin case from the machine. Use a small brush or lint remover to clean any lint, dust, or thread fragments that may accumulate around the tension spring and inside the case. Accumulation can affect thread tension.
- **Inspection:** Regularly inspect the bobbin case for any signs of wear, damage, or burrs, especially on the edges and around the tension spring. A damaged bobbin case can cause thread breakage or poor stitch quality.
- **Lubrication:** Refer to your Singer 5805 sewing machine manual for specific lubrication instructions for the bobbin area. Generally, the bobbin case itself does not require lubrication, but the surrounding shuttle hook mechanism might.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Thread tangling or nesting under fabric	Incorrect bobbin tension; improper bobbin insertion; lint in bobbin case.	Ensure bobbin is inserted correctly and thread is through the tension spring. Clean the bobbin case. Adjust upper thread tension if necessary.
Bobbin thread breaking	Too much bobbin tension; damaged bobbin case; burrs on bobbin case.	Check for burrs on the bobbin case and replace if damaged. Ensure thread is not snagging.
Skipped stitches	Bobbin case not seated correctly; incorrect needle; lint accumulation.	Re-seat the bobbin case. Ensure the correct needle type and size for your fabric. Clean the bobbin area.

7. SPECIFICATIONS

- **Product Type:** Replacement Bobbin Case
- **Brand:** UpStart Components
- **Model Number:** SM-421326-DL141
- **Compatibility:** Singer 5805 Sewing Machine
- **Replaces Part Number:** Singer #421326

8. WARRANTY AND SUPPORT

This UpStart Components Bobbin Case is a replacement part. Any warranties for this product are offered solely by UpStart Battery. For support or warranty inquiries, please contact UpStart Battery directly through their official channels. This product is not affiliated with any original equipment manufacturers, and their warranties do not apply to this replacement part.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question