

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Snap-On Zig Zag Presser Foot Instruction Manual for Brother BS-2430 Sewing Machine (Part #5011-4)

UpStart Components SM-5011-4-DL42

UpStart Components Snap-On Zig Zag Presser Foot Instruction Manual

For Brother BS-2430 Sewing Machine (Compatible with Part #5011-4)

Brand: UpStart Components | Model: SM-5011-4-DL42

1. PRODUCT OVERVIEW

This manual provides instructions for the installation, operation, and maintenance of your UpStart Components Snap-On Zig Zag Presser Foot, designed as a replacement part for the Brother BS-2430 Sewing Machine and compatible with Part #5011-4.



Figure 1: Top view of the UpStart Components Snap-On Zig Zag Presser Foot.

Key Features:

- Direct replacement for Brother BS-2430 Sewing Machine presser foot.
- Snap-on design for easy installation and removal.
- Enables various zig-zag stitch patterns.
- Designed to improve sewing efficiency and professional finish.
- Compatible with original Part #5011-4.

2. SAFETY INFORMATION

Always observe the following safety precautions when working with sewing machine accessories:

- Ensure the sewing machine is turned off and unplugged before installing or removing the presser foot.
- Keep fingers clear of the needle and presser foot area during operation.

- Use the correct presser foot for the intended stitch type to prevent damage to the machine or injury.
- Store accessories safely when not in use to prevent loss or damage.

3. SETUP AND INSTALLATION

Follow these steps to properly install the Snap-On Zig Zag Presser Foot onto your Brother BS-2430 sewing machine:

1. **Turn off and unplug the sewing machine:** For safety, ensure the machine is completely powered down and disconnected from the electrical outlet.
2. **Raise the presser foot lever:** Lift the presser foot lever to its highest position.
3. **Remove the existing presser foot (if applicable):** Locate the small lever or button at the back of the presser foot holder. Press or push this to release the current presser foot.
4. **Position the new presser foot:** Place the UpStart Components Snap-On Zig Zag Presser Foot directly under the presser foot holder, aligning the crossbar of the foot with the groove on the holder.



Figure 2: Bottom view of the presser foot, highlighting the crossbar for attachment.

5. **Lower the presser foot lever:** Slowly lower the presser foot lever. The presser foot should snap securely into place on the holder. You may hear a click.
6. **Verify secure attachment:** Gently try to pull the presser foot off to ensure it is firmly attached. If it moves, repeat step 5.

4. OPERATING INSTRUCTIONS

Once installed, the Zig Zag Presser Foot is ready for use with your Brother BS-2430 sewing machine. This foot is primarily used for stitches that move from side to side, such as zig-zag stitches, decorative stitches, and some utility stitches.

General Usage:

- **Select Stitch:** Choose the desired zig-zag or decorative stitch pattern on your sewing machine.
- **Adjust Settings:** Refer to your sewing machine's manual for recommended stitch length and width settings for the chosen stitch. The wide opening of the zig-zag foot accommodates various stitch widths.
- **Position Fabric:** Place your fabric under the presser foot, ensuring the needle is aligned with the desired starting point.
- **Begin Sewing:** Lower the presser foot and begin sewing at a consistent speed. The foot will guide the fabric while

allowing the needle to move freely from side to side.

For specific stitch applications and advanced techniques, consult your Brother BS-2430 sewing machine's comprehensive instruction manual.

5. MAINTENANCE

Proper care and maintenance will extend the life of your presser foot and ensure optimal performance.

- **Cleaning:** Periodically wipe the presser foot with a soft, dry cloth to remove lint, dust, and fabric fibers. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the presser foot in a clean, dry place, preferably in a sewing accessory box, to prevent scratches or damage.
- **Inspection:** Regularly inspect the presser foot for any signs of wear, bending, or damage. A damaged foot can affect stitch quality and potentially harm your sewing machine.

6. TROUBLESHOOTING

If you encounter issues while using the presser foot, consider the following common solutions:

- **Presser Foot Not Attaching Securely:** Ensure the presser foot lever is fully lowered and the crossbar is correctly aligned with the holder's groove. Apply gentle pressure to snap it into place.
- **Uneven Stitches or Fabric Not Feeding Properly:**
 - Check if the presser foot is installed correctly and securely.
 - Verify that the needle is not bent or dull.
 - Ensure the fabric is positioned flat and not being pulled or pushed excessively.
 - Confirm that the stitch settings (length, width, tension) on your sewing machine are appropriate for your fabric and stitch type.
- **Needle Hitting the Presser Foot:** This indicates incorrect installation or an incompatible needle/stitch setting. Immediately stop sewing. Re-install the presser foot, ensuring it is centered. Check your machine's manual for correct needle and stitch width settings for zig-zag stitches.

If problems persist, consult your Brother BS-2430 sewing machine's manual or contact a qualified sewing machine technician.

7. SPECIFICATIONS

Attribute	Detail
Brand	UpStart Components
Model Number	SM-5011-4-DL42
Compatible Sewing Machine	Brother BS-2430
Compatible Part #	5011-4
Type	Snap-On Zig Zag Presser Foot

8. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Battery. Please refer to your purchase documentation or contact UpStart Battery directly for specific warranty terms and support inquiries.

For assistance with your Brother BS-2430 sewing machine, please consult its original manufacturer's documentation or support channels.

© 2026 UpStart Components. All rights reserved.
This manual is for informational purposes only. UpStart Components is not affiliated with Brother International Corporation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question