

Manuals.plus /

› UpStart Components /

› UpStart Components Snap-On Zig Zag Presser Foot Instruction Manual for Janome 910 Sewing Machine (Model SM-5011-4-2PK-DL262)

UpStart Components SM-5011-4-2PK-DL262

UpStart Components Snap-On Zig Zag Presser Foot

Model: SM-5011-4-2PK-DL262

INTRODUCTION

This manual provides instructions for the UpStart Components Snap-On Zig Zag Presser Foot, designed as a replacement part for the Janome 910 Sewing Machine. This accessory is intended to enhance your sewing experience by providing a reliable zig-zag stitching capability for various fabric types and projects.

SAFETY INFORMATION

- Always turn off and unplug your sewing machine before installing or removing any accessories.
- Keep fingers clear of the needle area when operating the machine.
- Ensure the presser foot is securely attached before beginning to sew.
- Use only with compatible sewing machines, such as the Janome 910.

PACKAGE CONTENTS

- 2 x UpStart Components Snap-On Zig Zag Presser Foot (Compatible with Part #5011-4)

SETUP AND INSTALLATION

1. Step 1: Prepare Your Sewing Machine

Turn off and unplug your Janome 910 sewing machine from the power outlet. Raise the needle to its highest position using the handwheel.

2. Step 2: Remove the Existing Presser Foot (if applicable)

Locate the small lever or button at the back of the presser foot holder. Press it to release the current presser foot. If your machine uses a screw-on foot, loosen the screw to remove it.

3. **Step 3: Attach the New Presser Foot**

Align the crossbar of the UpStart Components Snap-On Zig Zag Presser Foot with the groove on the presser foot holder. Lower the presser foot lever so that the holder snaps onto the foot's crossbar. Ensure it is firmly attached.

4. **Step 4: Verify Installation**

Gently try to pull the presser foot off to confirm it is securely locked in place. Plug in and turn on your sewing machine.

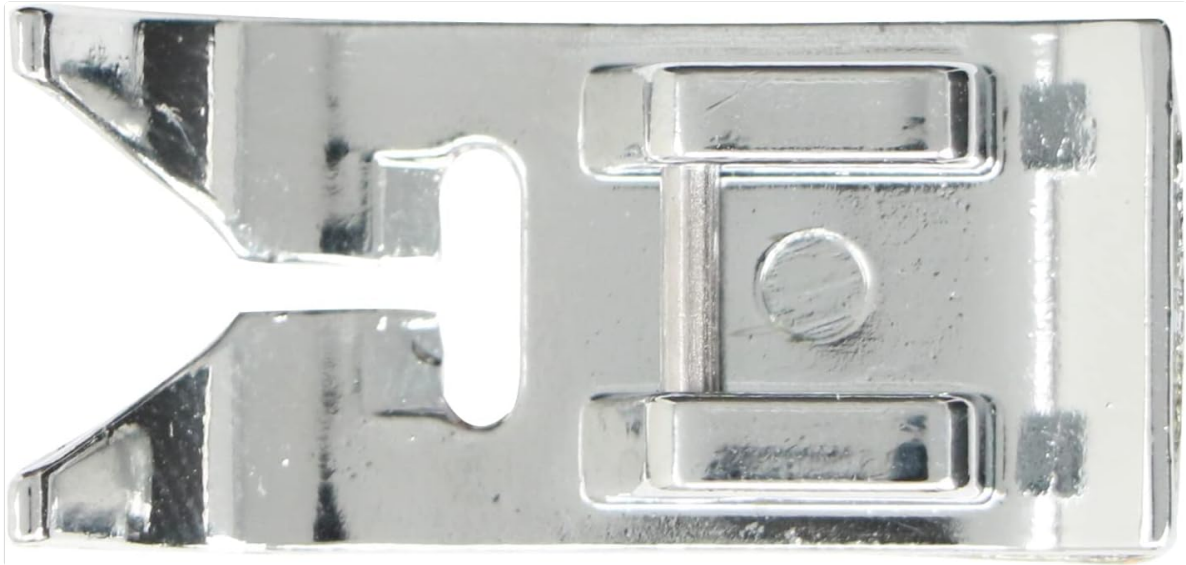


Figure 1: View of the presser foot showing the snap-on attachment point. This is where the presser foot holder connects to the foot.

OPERATING INSTRUCTIONS

The Snap-On Zig Zag Presser Foot is designed for general-purpose sewing, particularly for zig-zag stitches, but is also suitable for straight stitches and decorative stitches on your Janome 910 sewing machine.

1. **Step 1: Select Stitch Type**

On your Janome 910 sewing machine, select the desired stitch pattern (e.g., zig-zag, straight stitch) and adjust the stitch length and width settings according to your fabric and project requirements.

2. **Step 2: Position Fabric**

Place your fabric under the presser foot, ensuring the raw edge is aligned with the desired seam allowance guide on the needle plate.

3. **Step 3: Begin Sewing**

Lower the presser foot lever. Slowly press the foot pedal to begin sewing. Guide the fabric gently, allowing the feed dogs to move the fabric evenly.

4. **Step 4: Finishing**

When finished, raise the needle to its highest position, lift the presser foot, and remove your fabric.



Figure 2: Top view of the UpStart Components Snap-On Zig Zag Presser Foot. This view shows the general shape and needle opening.

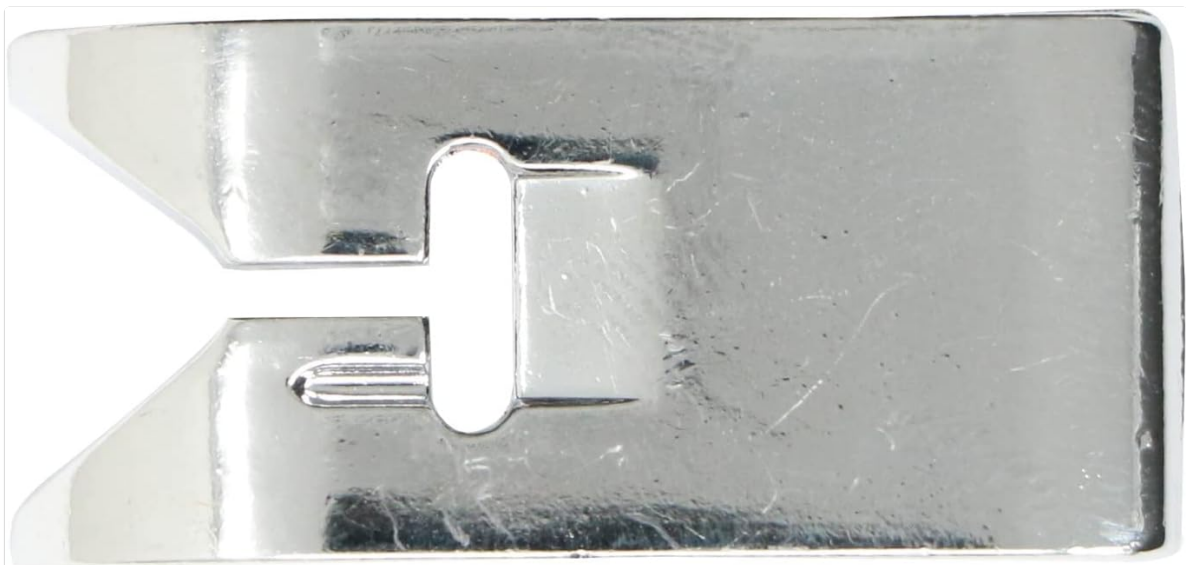


Figure 3: Bottom view of the UpStart Components Snap-On Zig Zag Presser Foot. This view highlights the grooves that allow fabric to feed smoothly.

- **Cleaning:** Regularly clean the presser foot with a soft brush to remove lint and thread buildup.
- **Storage:** Store the presser foot in a dry, safe place when not in use to prevent damage.
- **Inspection:** Periodically inspect the presser foot for any signs of wear or damage. Replace if necessary to ensure optimal sewing performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fabric not feeding smoothly	Lint buildup under foot or feed dogs	Clean the presser foot and feed dogs thoroughly.
Uneven stitches	Presser foot not securely attached	Re-attach the presser foot, ensuring it snaps firmly into place.
Needle hitting foot	Incorrect stitch width setting on machine	Adjust stitch width to ensure the needle clears the foot opening. Consult your sewing machine manual for proper settings.

SPECIFICATIONS

- **Product Type:** Snap-On Zig Zag Presser Foot
- **Brand:** UpStart Components
- **Model Number:** SM-5011-4-2PK-DL262
- **Compatibility:** Janome 910 Sewing Machine (Compatible with Part #5011-4)
- **Material:** Metal
- **Quantity:** 2 per pack

WARRANTY AND SUPPORT

This product is a replacement part provided by UpStart Components. For specific warranty information or support inquiries, please refer to the documentation provided by UpStart Components at the time of purchase or contact their customer service directly.

Note: This product is not affiliated with Janome. Any warranties for this product are offered solely by UpStart Components.