

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER BXAFO1200E 12L Air Fryer Oven Instruction Manual

BLACK+DECKER BXAFO1200E

BLACK+DECKER BXAFO1200E 12L Air Fryer Oven

Instruction Manual

INTRODUCTION

Thank you for choosing the BLACK+DECKER BXAFO1200E 12L Air Fryer Oven. This appliance is designed to provide a versatile and healthy cooking experience, allowing you to fry, roast, bake, and dehydrate with little to no oil. Please read this manual thoroughly before first use to ensure safe operation and optimal performance. Keep this manual for future reference.



Image: Front view of the BLACK+DECKER BXAF01200E 12L Air Fryer Oven, showcasing its sleek black design, transparent door, and internal cooking racks.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 - Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
 - Do not use appliance for other than intended use.
 - Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
 - A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
 - Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
 - Extreme caution should be exercised when using containers constructed of other than metal or glass.
 - Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
 - Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
 - Do not cover the air vents while the appliance is in operation.
-

PRODUCT COMPONENTS AND ACCESSORIES

The BLACK+DECKER BXAFO1200E comes with several accessories to enhance your cooking versatility.

- **Main Unit:** The air fryer oven with digital touch control panel and transparent door.
- **Mesh Racks (2):** For air frying, dehydrating, and general cooking.
- **Drip Tray:** Collects excess oil and food particles for easy cleaning.
- **Rotisserie Spit:** For roasting whole chickens or larger cuts of meat.
- **Rotisserie Handle:** For safely inserting and removing the rotisserie spit.
- **Rotating Mesh Basket:** Ideal for fries, nuts, or other small items that require tumbling for even cooking.



Image: A collection of accessories for the air fryer oven, including two mesh racks, a drip tray, a rotisserie spit, a rotisserie handle, and a rotating mesh basket.

CONTROL PANEL OVERVIEW

The appliance features an intuitive digital touch screen for easy operation.



Image: A close-up of a hand interacting with the digital touch control panel of the BLACK+DECKER BXAFO1200E, showing various icons for preset programs, temperature, and time settings.

- **Power Button:** Turns the unit on/off and starts/pauses cooking.
- **Temperature Control:** Adjusts cooking temperature (40°C - 200°C).
- **Time Control:** Adjusts cooking time (up to 6 hours).
- **Preset Programs (8):** Dedicated icons for common foods like fish, seafood, pizza, fries, meat, vegetables, chicken, and dehydrate.
- **Rotisserie Function:** Activates the rotating function for the rotisserie spit or mesh basket.
- **Light Button:** Turns the internal light on/off to view cooking progress.

SETUP

Before First Use

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the unit with a damp cloth.

3. Wash all accessories (mesh racks, drip tray, rotisserie spit, rotating basket) with warm, soapy water. Rinse thoroughly and dry completely. All accessories are dishwasher safe.
 4. Place the air fryer oven on a stable, heat-resistant surface, ensuring adequate ventilation around the unit (at least 10 cm clearance on all sides).
 5. Plug the power cord into a grounded electrical outlet.
 6. It is recommended to run the appliance empty for about 10-15 minutes at 180°C to burn off any manufacturing residues. A slight odor may be present during this initial use; this is normal.
-

OPERATING INSTRUCTIONS

General Operation

1. Press the Power button to turn on the unit. The display will illuminate.
2. Select a preset program by touching the corresponding icon, or manually set the temperature and time using the dedicated controls.
3. Adjust temperature (40°C - 200°C) and time (up to 6 hours) as needed.
4. Place food inside the oven using the appropriate accessory (mesh rack, rotating basket, or rotisserie spit).
5. Press the Power button again to start cooking.
6. The internal light can be turned on/off to monitor cooking progress.
7. The unit will beep when cooking is complete. Carefully remove food using heat-resistant gloves.

Using the Rotating Mesh Basket

The rotating mesh basket is ideal for evenly cooking smaller items like fries or vegetables.



Image: The BLACK+DECKER BXAFO1200E air fryer oven in operation, with french fries cooking inside the rotating mesh basket, visible through the transparent door.

1. Place food into the rotating mesh basket. Close the basket securely.
2. Insert the rotating mesh basket into the oven, ensuring it is properly seated on the rotisserie hooks.
3. Select desired cooking settings or a preset program.
4. Press the Rotisserie button to activate the rotation function.
5. Start cooking.

Using the Rotisserie Spit

Perfect for roasting a whole chicken or other large items.



Image: A whole roasted chicken cooking on the rotisserie spit inside the BLACK+DECKER BXAFO1200E air fryer oven, visible through the transparent door.

1. Secure the food onto the rotisserie spit using the forks.
2. Using the rotisserie handle, carefully insert the spit into the oven, ensuring it engages with the rotisserie drive.
3. Select desired cooking settings or a preset program.
4. Press the Rotisserie button to activate the rotation function.
5. Start cooking.

Using Mesh Racks

The mesh racks are versatile for various cooking tasks, including baking, roasting, and dehydrating.



Image: A small pizza cooking on a mesh rack inside the BLACK+DECKER BXAFO1200E air fryer oven, visible through the transparent door.

1. Place food directly on the mesh rack or in an oven-safe dish on the rack.
2. Slide the rack into the desired level within the oven. Ensure the drip tray is at the bottom.
3. Select desired cooking settings or a preset program.
4. Start cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the unit and allow it to cool completely before cleaning.

Cleaning the Main Unit

- Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners.
- Clean the interior with a soft, damp cloth. For stubborn food residue, use a non-abrasive sponge with warm, soapy water.

- Do not immerse the main unit in water or any other liquid.

Cleaning Accessories

- All accessories (mesh racks, drip tray, rotisserie spit, rotating mesh basket) are dishwasher safe.
- Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge.
- Ensure all accessories are thoroughly dry before storing or reusing.

TROUBLESHOOTING

If you encounter any issues with your air fryer oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Overcrowding; incorrect temperature/time; food not rotated.	Do not overcrowd the oven. Ensure proper temperature and cooking time. Use the rotating basket or rotisserie function when appropriate, or manually turn food.
White smoke coming from the unit.	Excess oil/grease on heating element or drip tray.	Clean the drip tray and interior thoroughly. Ensure fatty foods are placed on the drip tray.
Appliance emits a strange odor during first use.	Manufacturing residues burning off.	This is normal for initial use. Ensure good ventilation. The odor will dissipate.
Rotisserie function not working.	Rotisserie spit/basket not properly engaged.	Ensure the rotisserie spit or basket is correctly seated on the drive mechanism.

If the problem persists after attempting these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	BLACK+DECKER
Model	BXAFO1200E
Color	Black
Product Dimensions (L x W x H)	33 x 37.5 x 32 cm

Feature	Specification
Capacity	12 Liters
Wattage	1700 watts
Voltage	240 Volts (AC)
Material	Aluminum
Special Features	Timer, Digital Touch Control, 8 Preset Programs, Rotisserie Function
Item Weight	4.55 Kilograms

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official BLACK+DECKER website. If you require technical assistance, have questions about your product, or need to report a fault, please contact BLACK+DECKER customer support through their official channels.

No official product videos were found in the provided data.