



Manuals.plus /

› Nictemaw /

› Nictemaw 150W 5-in-1 Electric Cheese Grater Instruction Manual

Nictemaw B09LCPCFKV

Nictemaw 150W 5-in-1 Electric Cheese Grater Instruction Manual

Model: B09LCPCFKV | Brand: Nictemaw

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nictemaw 150W 5-in-1 Electric Cheese Grater. Please read all instructions carefully before first use and retain this manual for future reference.

2. PRODUCT FEATURES

- **Powerful 150W Motor:** Designed for quick and efficient food preparation, cutting, and chopping ingredients to save cooking time.
- **5 Interchangeable Stainless Steel Cones:** Includes coarse grating, fine grating, thick slicing, thin slicing, and grinding cones to easily process vegetables, cheeses, fruits, and nuts.
- **Easy One-Button Control:** Simple and convenient operation for a streamlined cooking experience.
- **Safe Materials:** Food-contact areas are made from BPA-free plastic, ensuring food safety and health.
- **Easy to Store & Clean:** Detachable blade and chute components can be cleaned under running water or in a dishwasher.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and in good condition:

- Main Motor Unit
- Food Chute/Hopper
- Food Pusher
- 5 Interchangeable Stainless Steel Cones (Coarse Grating, Fine Grating, Thick Slicing, Thin Slicing, Grinding)
- Instruction Manual

5 in 1 food Processor



Image: All components of the Nictemaw Electric Cheese Grater, including the motor unit, food chute, pusher, and five different blades.

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all parts from the packaging.
2. **Clean:** Before first use, wash all detachable parts (food chute, pusher, and cones) with warm, soapy water. Rinse thoroughly and dry. The main motor unit should only be wiped with a damp cloth.
3. **Assemble the Chute:** Attach the transparent food chute to the motor unit. Align the tabs and twist clockwise until it locks securely into place.
4. **Insert Blade:** Select the desired stainless steel cone (blade) and insert it into the food chute. Ensure it is seated correctly.
5. **Attach Pusher:** Place the food pusher into the top opening of the food chute.
6. **Position:** Place the assembled unit on a stable, flat, and dry surface. Ensure the suction cups on the base are firmly attached to the countertop for stability.



Image: Visual guide demonstrating the step-by-step assembly of the electric grater, including attaching the chute and inserting a blade.

5. OPERATING INSTRUCTIONS

Ensure the unit is properly assembled and plugged into a power outlet before operation.

1. **Prepare Ingredients:** Cut food items into pieces that fit comfortably into the food chute opening. For best results with cheese, ensure it is firm and slightly chilled.
2. **Place Receptacle:** Position a bowl or plate directly under the output of the food chute to collect processed ingredients.
3. **Power On:** Press the power button to start the motor.
4. **Feed Ingredients:** Gently place the prepared food into the food chute. Use the food pusher to guide the ingredients down towards the rotating blade. **Do not use your fingers or other utensils to push food.**
5. **Process:** The machine will quickly slice, shred, or grind the food, dispensing it into your chosen receptacle.
6. **Power Off:** Once finished, release the power button to stop the motor. Unplug the appliance from the power outlet.

Blade Usage Guide:

- **Thick Slicing Blade:** Ideal for cucumbers, potatoes, carrots, and other vegetables for salads or garnishes.

- **Thin Slicing Blade:** Perfect for thinner slices of vegetables like potatoes, radishes, and carrots.
- **Fine Shredder Blade:** Suitable for finely shredded carrots, cabbage, or soft cheeses.
- **Coarse Shredder Blade:** Best for hard cheeses, potatoes, and zucchini for larger shreds.
- **Chopped Blade (Grinding Cone):** Use for nuts, chocolate, breadcrumbs, or hard spices.



Image: Demonstrates the output of thick/thin slicing blades with potatoes, carrots, cucumbers, and radishes.



Image: Shows the results from coarse/fine shredding blades with cheese, carrots, and cucumbers, and the chopped blade with nuts and chocolate.

Your browser does not support the video tag.

Video: Demonstrates the assembly and various functions of the Nictemaw Electric Cheese Grater, including slicing, shredding, and grinding different food items.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your appliance.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the food pusher, food chute, and the selected blade.
3. **Wash Detachable Parts:** The blades and chute are detachable and dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a brush to remove any food residue. Rinse thoroughly and dry completely.
4. **Clean Motor Unit:** Wipe the main motor unit with a damp cloth. **Do not immerse the motor unit in water or any other liquid.**

5. **Storage:** Store all parts in a dry, safe place. The blades can be stored in their holder for convenience.



Easy to clean, can also washed with a brush

Image: A hand washing one of the detachable blades under running water, demonstrating ease of cleaning.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power button not pressed; parts not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Press the power button firmly. Check that the food chute and blade are correctly locked into place.
Food is not processing efficiently.	Incorrect blade used; food pieces too large; blade is dull or clogged.	Select the appropriate blade for the food type. Cut food into smaller, manageable pieces. Clean the blade and chute to remove any blockages.
Motor sounds strained or stops.	Overloaded with food; hard ingredients; prolonged continuous use.	Reduce the amount of food being processed at once. Avoid processing extremely hard items. Allow the appliance to cool down if used continuously for more than 10 minutes.

8. SPECIFICATIONS

- **Model:** B09LCPCFKV
- **Power:** 150W
- **Color:** Silver Black
- **Material:** Plastic, Stainless Steel
- **Product Dimensions:** 6.8"L x 6"W x 7.5"H
- **Item Weight:** 4.24 pounds
- **Dishwasher Safe Parts:** Yes (Blades and Chute)
- **Manufacturer:** Nictemaw

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Nictemaw website. Keep your purchase receipt as proof of purchase for any warranty claims.