

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Zwilling](#) /

› [ZWILLING ENFINIGY Drip Coffee Maker 1.5L Glass Carafe Instruction Manual](#)

## Zwilling 1008909

# ZWILLING ENFINIGY Drip Coffee Maker

Model: 1008909

## INTRODUCTION

---

Thank you for choosing the ZWILLING ENFINIGY Drip Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.



*The ZWILLING ENFINIGY Drip Coffee Maker, featuring a sleek design and a 1.5L glass carafe.*

## **SAFETY INSTRUCTIONS**

---

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your ZWILLING ENFINIGY Drip Coffee Maker:

- **Water Tank:** For filling with fresh water.
- **Filter Basket:** Holds the coffee filter and ground coffee.
- **Glass Carafe:** Collects the brewed coffee, with a capacity of 1.5 liters (up to 12 cups).
- **Heating Plate:** Keeps the brewed coffee warm.
- **Control Panel:** For operating the coffee maker, including timer and descaling functions.
- **Stainless Steel Boiler:** Ensures optimal brewing temperature.



*The 1.5-liter glass carafe with its lid and ergonomic handle.*



*The removable filter basket, designed for standard No. 4 coffee filters.*

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and ensure all parts are present.
2. **First Use Cleaning:** Before first use, clean the glass carafe and filter basket with warm, soapy water. Rinse thoroughly. Run two full cycles with only water (no coffee) to clean the internal components.
3. **Placement:** Place the coffee maker on a stable, flat, heat-resistant surface, away from water sources and direct heat. Ensure adequate ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



*The ZWILLING ENFINIGY Drip Coffee Maker assembled and ready for use on a kitchen counter.*

## OPERATING INSTRUCTIONS

1. **Fill Water Tank:** Open the lid of the water tank and fill it with fresh, cold water up to the desired level. The carafe has markings for easy measurement. Do not exceed the maximum fill line.



*Water level markings on the glass carafe for precise filling.*

2. **Insert Filter and Coffee:** Place a No. 4 paper filter into the filter basket. Add your desired amount of ground coffee (approximately 7-8 grams per cup, adjust to taste). Close the filter basket securely.

3. **Place Carafe:** Ensure the glass carafe with its lid is correctly placed on the heating plate.
4. **Start Brewing:** Press the power button to start the brewing process. The coffee maker features a 'bloom' function, which pre-wets the coffee grounds to extract full flavor before the main brewing cycle begins.



*The 'bloom' function pre-wetting coffee grounds for optimal flavor extraction.*

5. **Keep Warm Function:** After brewing, the coffee maker will automatically switch to a keep-warm mode for up to 30 minutes. The heating plate will keep the coffee at an optimal serving temperature.
6. **Timer Function:** To program a delayed start, refer to the detailed instructions in the full user manual for setting the timer.
7. **Serving:** Carefully remove the carafe from the heating plate to pour coffee.



Pouring freshly brewed coffee from the carafe into a mug.

## MAINTENANCE

- Daily Cleaning:** After each use, discard the used coffee filter and grounds. Wash the glass carafe and filter basket with warm, soapy water. Rinse thoroughly and dry. The exterior of the coffee maker can be wiped with a damp cloth. Do not use abrasive cleaners or scourers.
- Descaling:** The ZWILLING ENFINIGY Drip Coffee Maker features a smart descaling function. When the descaling indicator light illuminates, it's time to descale the appliance. Follow these steps:
  - Fill the water tank with a descaling solution according to the manufacturer's instructions (e.g., a mixture of water and white vinegar or a commercial descaling agent).
  - Place an empty carafe on the heating plate.
  - Activate the descaling program (refer to the full manual for specific button presses).
  - After the descaling cycle is complete, run two to three cycles with fresh water only to rinse the system thoroughly.

Regular descaling is crucial for maintaining optimal performance and extending the lifespan of your coffee maker.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in the tank; appliance not plugged in; power outage.	Fill water tank; check power connection; check circuit breaker.
Coffee tastes weak.	Too little coffee; coffee too coarsely ground; carafe lid not properly closed.	Add more coffee; use finer grind; ensure carafe lid is secure.
Descaling indicator light is on.	Mineral buildup in the appliance.	Perform a descaling cycle as described in the Maintenance section.
Water overflows from filter basket.	Too much coffee; filter clogged; carafe not properly placed.	Reduce coffee amount; replace filter; ensure carafe is centered on heating plate.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

- **Brand:** Zwilling
- **Model:** 1008909
- **Capacity:** 1.5 Liters (approx. 12 cups)
- **Color:** Silver
- **Dimensions (L x W x H):** 15 cm x 33 cm x 35 cm (approximate, based on product details)
- **Weight:** 2.640 kg

- **Material:** Plastic, Stainless Steel (boiler interior)
- **Special Features:** Bloom function, Keep warm function (up to 30 minutes), Timer, Smart descaling function.
- **Filter Type:** No. 4 paper filters

## WARRANTY

---

This ZWILLING ENFINIGY Drip Coffee Maker is covered by a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official ZWILLING website for detailed information regarding warranty terms, conditions, and registration.

## SUPPORT

---

For further assistance, technical support, or to order replacement parts, please contact ZWILLING customer service. Contact information can typically be found on the ZWILLING official website or in the packaging materials.

You can also visit the [Zwilling Brand Store](#) for more product information.