



[Manuals.plus](#) /

> [PERFASCIN](#) /

> [PERFASCIN Replacement Voice Remote 280401011330 for RCA TV User Manual](#)

PERFASCIN 280401011330

PERFASCIN Replacement Voice Remote 280401011330 User Manual

Model: 280401011330

[Introduction](#)

[Setup](#)

[Operating
Instructions](#)

[Maintenance
Warranty &
Support](#)

[Troubleshooting](#)

[Specifications](#)

1. INTRODUCTION

This manual provides instructions for the PERFASCIN Replacement Voice Remote, model 280401011330. This remote is designed to be compatible with various RCA TV models, offering both standard button control and voice command functionality. Please read this manual thoroughly before use to ensure proper setup and operation.

Compatible TV Models:

- RTA3201
- RTA4302
- RTAU6504
- RTA4002
- RTAU5004
- RTAQ5033

2. SETUP

2.1 Battery Installation

The remote requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

2.2 Pairing the Remote (for Voice Functionality)

For the voice control feature to work, the remote must be paired with your RCA TV. The pairing process may vary slightly depending on your specific TV model. Generally, follow these steps:

1. Ensure your TV is powered on.
2. Navigate to your TV's settings menu. Look for options like "Remotes & Accessories," "Bluetooth Settings," or "Add Device."
3. On the PERFASCIN remote, press and hold the **Voice button** (often indicated by a microphone icon or Google Assistant logo) and the **OK button** simultaneously for a few seconds until an indicator light on the remote begins to flash.
4. On your TV screen, select the PERFASCIN remote when it appears in the list of discoverable devices.
5. Follow any on-screen prompts to complete the pairing process.

If you encounter issues, refer to your RCA TV's user manual for specific remote pairing instructions.

3. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your PERFASCIN replacement remote.



VOICE

Image: Front view of the remote control, showing all buttons and a specific callout for the voice control button.

3.1 Button Functions

- **Power ()**: Turns the TV on or off.
- **Voice Button (Microphone/Assistant Icon)**: Activates voice control. Press and hold to speak commands.
- **Number Pad (0-9)**: Direct channel input.
- **INFO**: Displays program information.
- **GUIDE**: Accesses the electronic program guide.
- **Netflix, YouTube, Freeview Play, Prime Video**: Dedicated buttons for quick access to streaming services.
- **HOME**: Returns to the TV's home screen.
- **MENU**: Opens the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **VOL (+/-)**: Adjusts the volume level.
- **Mute ()**: Mutes or unmutes the TV audio.
- **CH (▲/▼)**: Changes TV channels.
- **SOURCE**: Selects input sources (HDMI, AV, etc.).
- **Color Buttons (Red, Green, Yellow, Blue)**: Functionality varies by application or TV menu.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop)**: Controls media playback.
- **TEXT**: Accesses teletext (if supported by TV/broadcast).
- **SUBT**: Toggles subtitles on/off.
- **AUDIO**: Selects audio tracks or modes.

3.2 Using Voice Control

Once paired, the voice control feature allows you to issue commands to your TV using your voice:

1. Press and hold the **Voice button** (microphone/Assistant icon) on the remote.
2. Speak clearly into the microphone located on the remote.
3. Release the button when you have finished speaking your command.

Examples of voice commands may include:

- "Open Netflix"
- "Switch to HDMI 1"
- "Search for action movies"
- "What's the weather like?"
- "Turn up the volume"

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, abrasive cleaners, or immerse the remote in water.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** For standard IR functions, ensure there is a clear line of sight between the remote and the TV's IR receiver.
- **Re-pair Remote:** If the remote uses Bluetooth (for voice), try re-pairing it with your TV as described in Section 2.2.
- **TV Interference:** Ensure no objects are blocking the TV's remote sensor.

5.2 Voice Control Not Working

- **Pairing Status:** Confirm the remote is successfully paired with your TV for voice functionality (refer to Section 2.2).
- **Microphone Blockage:** Ensure the microphone on the remote is not covered.
- **Speak Clearly:** Speak clearly and directly into the remote's microphone.
- **TV Settings:** Check your TV's settings to ensure voice control is enabled.
- **Internet Connection:** Some voice commands require an active internet connection on your TV.

5.3 Specific Buttons Not Working

- **Battery Level:** Low batteries can cause intermittent button functionality.
- **Clean Remote:** Dirt or debris under buttons can prevent them from registering presses.

6. SPECIFICATIONS

Feature	Detail
Brand	PERFASCIN
Model Number	280401011330

Special Feature	Ergonomic
Max Number of Supported Devices	1
Compatible Devices	Television (RCA models: RTA3201, RTA4302, RTAU6504, RTA4002, RTAU5004, RTAQ5033)
Connectivity Technology	Bluetooth
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	AAA (x2)
Item Weight	2.9 Ounces

7. WARRANTY INFORMATION

Specific warranty details for this PERFASCIN replacement remote are not provided in the product information. Please refer to the retailer or your purchase documentation for any applicable warranty terms.

8. CUSTOMER SUPPORT

For any questions or issues not covered in this manual, please contact the seller or manufacturer directly. When contacting support, please have your product model number (280401011330) and your TV model information ready.