

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER BXCH120E Mini Chopper User Manual, 120W, 350ml Capacity

BLACK+DECKER BXCH120E

BLACK+DECKER BXCH120E Mini Chopper User Manual

Model: BXCH120E | 120W | 350ml Capacity

INTRODUCTION

Thank you for choosing the BLACK+DECKER BXCH120E Mini Chopper. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and keep them for future reference.

The BLACK+DECKER BXCH120E is designed for quick and easy chopping of various ingredients, featuring a 120W motor and a 350ml plastic bowl with durable stainless steel blades.



Image: The BLACK+DECKER BXCH120E Mini Chopper, fully assembled, showcasing its compact design.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always ensure the lid is securely locked in place before operating the chopper.

PRODUCT OVERVIEW

Familiarize yourself with the components of your BLACK+DECKER BXCH120E Mini Chopper:

- **Motor Unit:** Contains the 120W motor and control button.
- **Chopping Bowl:** 350ml capacity plastic bowl for ingredients.
- **Lid with Safety Lock:** Transparent lid that secures the bowl and activates the safety mechanism.
- **Stainless Steel Blades:** Sharp blades for efficient chopping.



Image: All components of the mini chopper laid out, including the motor unit, bowl, lid, and blade.

SETUP

Follow these steps to assemble your mini chopper before use:

1. Place the chopping bowl onto the motor unit base, ensuring it is seated correctly.
2. Carefully place the stainless steel blade assembly onto the central shaft inside the chopping bowl. Ensure it is fully seated.
3. Add your ingredients to the chopping bowl. Do not exceed the 'MAX' fill line indicated on the bowl.
4. Place the lid onto the chopping bowl, aligning the tabs on the lid with the slots on the bowl. Twist or press down until the lid is securely locked. The appliance will not operate if the lid is not properly secured.



Image: The mini chopper assembled with ingredients, showing the bowl, blade, and lid in place.

OPERATING INSTRUCTIONS

Once assembled, operating your mini chopper is straightforward:

1. Ensure the appliance is plugged into a suitable power outlet (240V AC).
2. With the ingredients in the bowl and the lid securely locked, press and hold the power button located on top of the motor unit. The blades will begin to rotate.
3. Chop ingredients to your desired consistency. For coarse chopping, use short pulses. For finer results, hold the button for a longer duration.
4. Release the power button to stop the chopping action.
5. Unplug the appliance from the power outlet.
6. Carefully remove the lid, then remove the blade assembly before emptying the chopped ingredients.



Image: A user's hand pressing the activation button on the motor unit to operate the chopper.



Image: The mini chopper in action, processing tomatoes to a fine consistency.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your mini chopper:

- Always unplug the appliance before cleaning.
- The chopping bowl, lid, and blade assembly are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately.
- **Caution:** The blades are very sharp. Handle them with extreme care during cleaning.
- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads on any part of the appliance.
- Store the assembled chopper or its components in a dry place.

TROUBLESHOOTING

If you encounter issues with your mini chopper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Lid not securely locked; Power outage.	Check power connection; Ensure lid is properly secured; Check household power.
Blades are not rotating.	Ingredients are too large or too much; Blade assembly not correctly placed.	Cut ingredients into smaller pieces; Do not overfill the bowl; Re-seat the blade assembly.
Motor sounds strained.	Overloading the bowl; Processing hard ingredients.	Reduce the amount of ingredients; Process hard ingredients in smaller batches.
Chopping results are uneven.	Ingredients not evenly distributed; Not pulsing correctly.	Ensure ingredients are cut to similar sizes; Use pulsing action for better control.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	BLACK+DECKER
Model Name	BXCH120E
Power (Wattage)	120 W
Capacity	350 ml (Plastic Bowl)
Number of Speeds	1
Voltage	240 Volt (AC)
Material (Blades)	Stainless Steel
Material (Body/Bowl)	Plastic
Product Dimensions (DxWxH)	11.3P x 17.3I x 15H cm
Dishwasher Safe Parts	Yes (Bowl, Lid, Blades)

WARRANTY AND SUPPORT

This BLACK+DECKER BXCH120E Mini Chopper comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official BLACK+DECKER website.

Always retain your proof of purchase for warranty validation.

