

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER BXPC1100E Popcorn Maker User Manual](#)

BLACK+DECKER BXPC1100E

BLACK+DECKER BXPC1100E Popcorn Maker User Manual

Model: BXPC1100E

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended household use.
- Never add oil, butter, or other liquids to the popping chamber. This is a hot air popcorn maker and is designed to operate without oil. Adding these substances can cause a fire hazard.
- Ensure the popcorn maker is placed on a stable, heat-resistant surface during operation.
- Do not cover the machine during operation, as this can lead to overheating and a fire hazard.
- Be careful when handling the butter container to avoid spills.

PRODUCT OVERVIEW

The BLACK+DECKER BXPC1100E Popcorn Maker is designed for quick and easy preparation of delicious popcorn using hot air, eliminating the need for oil. Its compact design makes it a convenient addition to any

kitchen.

Key Components:

- Popping Chamber: Where the popcorn kernels are heated.
- Lid with Chute: Directs popped corn into your bowl and includes a viewing window.
- Measuring Cup: Used for precise kernel measurement.
- Power Button: To turn the appliance on and off.

Features:

- **Hot Air System:** Pops corn using circulating hot air for a healthier snack.
- **1100W Power:** Ensures fast and efficient popping.
- **Quick Preparation:** Popcorn is ready in approximately 3 minutes.
- **250g Capacity:** Allows for a generous batch of popcorn.
- **Viewing Lid:** A transparent lid allows you to monitor the popping process.



The BLACK+DECKER BXPC1100E Popcorn Maker, shown in black, efficiently pops corn directly into a serving bowl.



The hot air system ensures efficient popping, with corn being ejected through the chute.



The transparent viewing lid allows you to observe the popping process.

SETUP

1. **Unpack:** Carefully remove all packaging materials from the popcorn maker.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the lid and measuring cup in warm, soapy water, then rinse and dry thoroughly. Do not immerse the main unit in water.
3. **Placement:** Place the popcorn maker on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure there is enough space for the popped corn to exit the chute into a bowl.

OPERATING INSTRUCTIONS

Follow these steps to make fresh, hot popcorn:

1. **Measure Kernels:** Use the provided measuring cup to measure one level scoop of popcorn kernels. Do not overfill or underfill the cup, and do not use more than one scoop per batch.
2. **Add Kernels:** Pour the measured kernels into the popping chamber. Do not add oil, butter, or any other ingredients to the popping chamber.
3. **Place Lid:** Securely place the lid onto the popcorn maker, ensuring it is properly aligned.
4. **Position Bowl:** Place a large, heat-resistant bowl directly under the popcorn chute to collect the popped corn. For best results and to minimize flying kernels, you may place a clean tea towel over the bowl (not over the machine itself).
5. **Plug In and Start:** Plug the power cord into a standard electrical outlet. Press the power button to turn on the appliance.
6. **Popping Process:** The popcorn will begin to pop within a few minutes. The popping process typically takes about 3 minutes. Once popping slows down significantly, press the power button to turn off the appliance.
7. **Unplug and Serve:** Unplug the popcorn maker from the outlet. Carefully remove the lid and measuring cup. Pour the freshly popped corn into a serving bowl.
8. **Add Toppings:** If desired, add melted butter, salt, or other seasonings to your popped corn after it has been removed from the machine.



Use the provided measuring cup to add kernels to the popping chamber.



The popcorn maker is designed to have your popcorn ready in approximately 3 minutes.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your popcorn maker.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior of the popcorn maker with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
3. **Lid and Measuring Cup:** The lid and measuring cup can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or next use.
4. **Popping Chamber:** The popping chamber should be wiped clean with a dry cloth to remove any unpopped kernels or debris. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Store the cleaned and dried popcorn maker in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your BLACK+DECKER BXPC1100E Popcorn Maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Popcorn not popping well / Many unpopped kernels	Old or dry kernels; incorrect kernel quantity.	Use fresh popcorn kernels. Ensure you are using exactly one level measuring cup of kernels.
Popcorn flying out of the bowl	Bowl not positioned correctly; small bowl size.	Ensure the bowl is directly under the chute. Use a larger bowl. A clean tea towel placed over the bowl (not the machine) can help contain errant kernels.
Appliance does not turn on	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet. Check the power button is pressed.
Burning smell	Residue in popping chamber; overheating.	Unplug immediately and allow to cool. Clean the popping chamber thoroughly. Ensure proper ventilation around the unit.

SPECIFICATIONS

- **Model:** BXPC1100E
- **Power:** 1100 Watts
- **Capacity:** 250 Grams of kernels
- **Dimensions (L x W x H):** Approximately 6.3 x 5.31 x 10.04 inches (16 x 13.5 x 25.5 cm)
- **Item Weight:** Approximately 1.85 pounds (0.84 Kilograms)
- **Material:** Plastic
- **Included Components:** Measuring Cup



The popcorn maker operates at 1100 Watts for efficient popping.



Compact dimensions of approximately 25.5 cm (height) x 13.5 cm (depth) x 16 cm (width).

WARRANTY AND SUPPORT

This BLACK+DECKER BXPC1100E Popcorn Maker comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For product support, troubleshooting assistance, or to inquire about replacement parts, please visit the official BLACK+DECKER website or contact their customer service department. Contact information can typically be found on the product packaging or the official brand website.

Online Support: www.blackanddecker.com

