

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ROBOTIME](#) /

› [ROBOTIME WCF01 Wooden Play Kitchen Instruction Manual](#)

ROBOTIME WCF01

ROBOTIME WCF01 Wooden Play Kitchen Instruction Manual

Model: WCF01

Package

[Safety Information](#) [Contents](#)

Operating

[Setup & Assembly](#) [Instructions](#)

[Maintenance](#)

[Troubleshooting](#) [Specifications](#)

INTRODUCTION

Thank you for choosing the ROBOTIME WCF01 Wooden Play Kitchen. This manual provides essential information for the safe assembly, operation, and maintenance of your new play kitchen. Please read these instructions carefully before assembly and retain them for future reference.



Image: The ROBOTIME WCF01 Wooden Play Kitchen, fully assembled, with a child interacting with it. This image provides an overview of the product's appearance and scale.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult assembly required. Keep small parts and packaging materials away from children during assembly.
- Ensure all screws and fasteners are securely tightened before use. Periodically check for loose hardware and tighten as necessary.
- Do not allow children to climb on or hang from the play kitchen.
- Place the play kitchen on a flat, stable surface to prevent tipping.
- Inspect the product regularly for any damage or wear. Discontinue use if any parts are broken or missing.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged. If any

parts are missing or damaged, please contact customer support.

All Accessories

Pots	x5
Kitchen Shovel	x2
Kitchen Knife	x1
Seasoning	x4



Image: A top-down view of the various accessories included with the play kitchen, such as pots, pans, spatulas, knives, and seasoning bottles, laid out on a neutral background.

- Wooden Play Kitchen Frame Components
- Assembly Hardware (screws, dowels, etc.)
- Instruction Manual
- **Accessories:**
 - Pots x5
 - Kitchen Shovel x2
 - Kitchen Knife x1
 - Seasoning Bottles x4

SETUP & ASSEMBLY

Assembly requires a Phillips head screwdriver (not included). Please follow the step-by-step diagrams provided in the separate assembly guide for detailed instructions. Ensure you have adequate space for assembly.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Identify all parts according to the parts list in the assembly guide.
3. Attach the side panels to the base using the provided screws and dowels.
4. Install the back panel, ensuring it aligns correctly with the grooves.
5. Assemble the upper sections, including shelves and the clock piece.
6. Attach the doors for the oven, microwave, and storage compartments. Ensure hinges are secure.
7. Install the sink, stovetop, and faucet components.
8. Attach all knobs and handles.
9. Once fully assembled, check all connections to ensure they are tight and secure.



Image: A clear, front-facing view of the ROBOTIME WCF01 Wooden Play Kitchen, showcasing its complete structure and features after assembly.

OPERATING INSTRUCTIONS

The ROBOTIME WCF01 Play Kitchen is designed for imaginative play. Here's how to interact with its features:

- **Knobs:** The stove and oven knobs are designed to turn and produce a clicking sound, simulating real appliance operation.
- **Doors:** The oven, microwave, and storage cabinet doors open and close, allowing children to store play food and accessories.
- **Sink & Faucet:** The sink basin is removable for easy cleaning, and the faucet can be turned.
- **Storage:** Use the shelves and cabinets to organize play kitchen accessories.



Real Kitchen Experience



Doors

Doors are able to be opened for its realistic design.



Knobs

Knobs makes a click – Click sound when it turned.



Image: A detailed view highlighting the functional doors and the rotatable, clicking knobs on the play kitchen, demonstrating interactive elements.



Image: Two children engaged in pretend play with the ROBOTIME WCF01 Wooden Play Kitchen, illustrating typical usage and interaction.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the wood finish.
- **Inspection:** Regularly check all screws and fasteners to ensure they remain tight. Tighten any loose hardware to maintain structural integrity.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading of the wood.
- **Repair:** If any wooden parts become damaged, discontinue use and contact customer support for advice on repair or replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Play kitchen feels wobbly or unstable.	Loose screws or uneven placement.	Ensure all assembly screws are tightened. Place the kitchen on a flat, level surface.
Doors do not close properly.	Hinges are loose or misaligned.	Check and tighten hinge screws. Adjust door alignment if necessary.
Missing parts during assembly.	Packaging error or parts overlooked.	Carefully re-check all packaging materials. Contact customer support with the parts list.

SPECIFICATIONS

Specification

Material: Wood

Item Weight: 37 pounds

Recommended Age: 3+



Image: A visual representation of the play kitchen with key dimensions (height, width, depth) indicated for reference.

- **Model Number:** WCF01
- **Material:** Wood
- **Product Dimensions (L x W x H):** 37.2 x 11.2 x 32 inches (approximately 94.5 x 28.4 x 81.3 cm)

- **Item Weight:** 39.8 pounds (approximately 18.05 kg)
- **Recommended Age:** 3+ years
- **Manufacturer:** ROBOTIME

WARRANTY INFORMATION

ROBOTIME products are manufactured with quality and care. This product comes with a limited warranty against manufacturing defects. Please retain your proof of purchase. For specific warranty terms and conditions, or to make a warranty claim, please contact ROBOTIME customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact ROBOTIME customer support. Refer to the contact information provided on the product packaging or the official ROBOTIME website.

Website: [ROBOTIME Official Store](#)