

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack Reflex Tunes Wireless On Ear Headphones - User Manual

Fastrack FO2BLA03

Fastrack Reflex Tunes Wireless On Ear Headphones

Model: FO2BLA03 - User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Fastrack Reflex Tunes Wireless On Ear Headphones (Model: FO2BLA03). Please read this manual carefully before using the product to ensure optimal performance and longevity.



Image: Fastrack Reflex Tunes Wireless On Ear Headphones in blue, showcasing the overall design.

PRODUCT FEATURES

- **Active Noise Cancellation (ANC):** Immerse yourself in music with minimal external noise.
- **Long Battery Life:** Up to 20 hours of music playtime, or 15 hours with ANC activated.
- **Voice Assistant Support:** Compatible with Google Assistant and Siri for hands-free control.
- **Comfortable Design:** Adjustable ear shells for extended wear comfort.
- **Durable Construction:** Features IPX4 sweat resistance, suitable for various activities.
- **Extended Bluetooth Range:** Reliable wireless connection up to 10 meters (33 feet).

PACKAGE CONTENTS

Ensure all items are present in the package:

- Fastrack Reflex Tunes Wireless On Ear Headphones
- Charging Cable
- Audio Cable (3.5 mm Jack)
- User Manual (this document)

SETUP

Charging the Headphones

Before first use, fully charge the headphones. Connect the provided charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show charging status and turn off or change color when fully charged.

Pairing via Bluetooth

1. Ensure the headphones are powered off.
2. Press and hold the power button until the LED indicator flashes rapidly (usually blue and red), indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Fastrack Reflex Tunes" from the list of found devices.
5. Once connected, the LED indicator will typically show a solid blue light or flash slowly.

If prompted for a password, enter "0000".



Image: Illustration highlighting the 15-hour battery life of the headphones with Active Noise Cancellation enabled.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the power button for 3 seconds.
- **Power Off:** Press and hold the power button for 5 seconds.

Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the Volume Up button.
- **Previous Track:** Press and hold the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.

Active Noise Cancellation (ANC)

To activate or deactivate ANC, press the dedicated ANC button. The LED indicator for ANC will illuminate when active.



Image: The headphones with text indicating Active Noise Cancellation feature.

Voice Assistant

Double-press the Multi-function button to activate your device's voice assistant (Google Assistant or Siri).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.

- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the headphones regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.
- **Water Resistance:** The headphones are IPX4 sweat resistant. Avoid submerging them in water or exposing them to heavy rain.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode; enable Bluetooth on device; move closer to device (within 10m).
No sound or poor sound quality.	Volume too low; headphones not connected; audio source issue.	Increase volume on headphones and device; re-pair headphones; check audio source.
ANC not working effectively.	ANC not activated; very loud or irregular noises.	Ensure ANC is turned on; ANC is most effective against consistent low-frequency noise.

SPECIFICATIONS

Feature	Detail
Model Name	Reflex
Item Model Number	FO2BLA03
Connectivity Technology	Wireless (Bluetooth)
Headphones Jack	3.5 mm Jack
Battery Life	Up to 20 hours (15 hours with ANC)
Bluetooth Range	10 meters (33 feet)
Water Resistance Level	IPX4 (Sweat Resistant)
Item Weight	240 Grams
Product Dimensions (LxWxH)	17.8 x 80 x 18.8 cm
Control Type	Google Assistant, Voice
Noise Control	Active Noise Cancellation
Earpiece Shape	Over-Ear Cup

WARRANTY INFORMATION

Your Fastrack Reflex Tunes Wireless On Ear Headphones come with **a1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. Please retain your purchase receipt as proof of purchase for warranty claims.

The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. For detailed warranty terms and conditions, please refer to the warranty card included with your product or contact Fastrack customer support.

CUSTOMER SUPPORT

For any queries, technical assistance, or warranty claims, please contact Fastrack customer support. Visit the official Fastrack website for the most up-to-date contact information.

You can also refer to the [Fastrack Store on Amazon](#) for additional product information and support resources.

© 2024 Fastrack. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question