

Electrolux E6AF1-6ST

Electrolux Explore 6 Air Fryer E6AF1-6ST User Manual

Model: E6AF1-6ST

INTRODUCTION

The Electrolux Explore 6 Air Fryer E6AF1-6ST is a versatile kitchen appliance designed for frying, grilling, roasting, and baking with minimal oil. This manual provides essential information for safe and efficient use of your appliance.



Image: The Electrolux Explore 6 Air Fryer E6AF1-6ST, a stainless steel appliance with a digital touchscreen display.

Key features include:

- Versatile cooking functions: fry, grill, roast, and bake.
- Hot air circulation technology for crisp results with less oil.
- Intuitive touchscreen interface.
- Eight preset cooking programs for convenience.
- Large 5.4-liter removable basket for family-sized meals.

IMPORTANT SAFETY INFORMATION

Before using the appliance, read all instructions carefully. Keep this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface.

- Ensure adequate ventilation around the air fryer during operation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents.
- Unplug the appliance when not in use and before cleaning.
- Use only original Electrolux accessories.
- The appliance operates at high temperatures; use oven mitts when handling hot parts.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, clean the removable basket and pan with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface, away from walls and other appliances to allow for proper airflow. Ensure there is at least 10 cm (4 inches) of free space on all sides.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is designed for 220 Volts.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: Front view of the Electrolux Explore 6 Air Fryer, showing the digital touchscreen display with temperature and time settings, and various preset icons.

The air fryer features an intuitive touchscreen display. The main display shows temperature and time. Icons represent various preset programs.



Image: A hand touching the digital display of the air fryer, demonstrating interaction with the touchscreen controls.

Basic Operation

1. **Prepare Food:** Place your ingredients into the removable basket. For best results, ensure food is not overcrowded. A small amount of oil can be added for extra crispiness, as shown in the image below.



Image: A spoon drizzling oil over sweet potato fries in the air fryer basket, illustrating preparation for cooking.

2. **Insert Basket:** Slide the basket firmly into the air fryer until it clicks into place.



Image: The Electrolux Explore 6 Air Fryer with its basket partially pulled out, revealing cooked food inside.

3. **Power On:** Press the power icon () on the touchscreen to turn on the appliance.
4. **Select Program:** Choose one of the eight preset programs by tapping the corresponding icon. The display will show default temperature and time settings.
5. **Adjust Settings (Optional):** Use the temperature and time adjustment arrows (^ / v) to customize settings if needed.
6. **Start Cooking:** Press the start/pause icon to begin the cooking cycle.
7. **Shake Reminder:** For some foods, the air fryer may beep to remind you to shake the basket for even cooking. Carefully remove the basket, shake, and reinsert.
8. **Cooking Completion:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.

Cooking Capacity

The 5.4-liter capacity basket is suitable for preparing meals for families. For example, it can accommodate a whole chicken.



Image: A whole roasted chicken with herbs and vegetables inside the air fryer basket, demonstrating the appliance's cooking capacity.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Cleaning the Basket and Pan:** The removable basket and pan are dishwasher safe. Alternatively, wash them with warm water and a non-abrasive sponge.



Image: The air fryer basket and its inner pan placed in the top rack of a dishwasher, indicating they are dishwasher-safe.

3. **Cleaning the Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
4. **Heating Element:** Use a soft brush to remove any food residue from the heating element, located inside the top of the appliance.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Electrolux Explore 6 Air Fryer, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If problem persists, contact customer support.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket overcrowded; food not shaken during cooking.	Do not overcrowd the basket. Shake the basket halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and pan thoroughly after each use. For high-fat foods, drain excess fat from the pan during cooking.
Food is not crispy.	Too much moisture; insufficient cooking time/temperature.	Pat food dry before air frying. Increase cooking time or temperature slightly. Ensure food is not overcrowded.

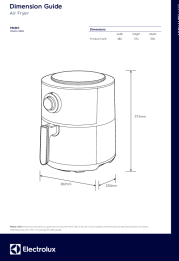


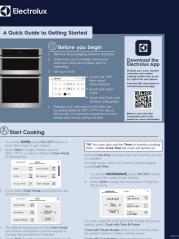


SPECIFICATIONS

Feature	Detail
Brand	Electrolux
Model Number	E6AF1-6ST (910003612)
Capacity	5.4 Liters
Power / Wattage	1800 Watts
Voltage	220 Volts
Material	Stainless Steel
Product Dimensions (WxDxH)	31.2 cm x 37.3 cm x 41.5 cm (approximate)
Item Weight	7.3 Kilograms
Special Features	Temperature Control, Touchscreen, 8 Preset Programs

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Electrolux website. Contact details for customer service can typically be found on the Electrolux regional support pages.

Online Resources: www.electrolux.com

 <p>Dimension Guide E6AF1-220K</p>	<p>Electrolux E6AF1-220K Air Fryer Dimensions Product Size Guide</p> <p>Find precise dimensions for the Electrolux E6AF1-220K 3L Air Fryer. This guide provides width, height, and depth measurements essential for installation and space planning.</p>
 <p>Electrolux Air Fryer E6AF1-520K</p>	<p>Electrolux E6AF1-520K Air Fryer Instruction Manual</p> <p>Comprehensive instruction manual for the Electrolux E6AF1-520K Air Fryer, covering setup, usage, cleaning, troubleshooting, and preset menus.</p>
 <p>Electrolux Explore 6 High Power Blender User Manual</p>	<p>Electrolux Explore 6 High Power Blender User Manual</p> <p>User manual for the Electrolux Explore 6 High Power Blender (models E6TB1-6ST, E6TB1-8ST), providing instructions on operation, cleaning, safety, and troubleshooting.</p>
 <p>Electrolux</p>	<p>Electrolux Wall Oven and Microwave Combination: Quick Start Guide</p> <p>A concise guide to getting started with your Electrolux Wall Oven and Microwave Combination, covering initial setup, cooking modes, care, and frequently asked questions.</p>
 <p>Electrolux Instruction Book E5K1-6ST E5EK1-50ST K5EK1-50BP Water Kettle</p>	<p>Electrolux Water Kettle Instruction Manual - E5K1-6ST, E5EK1-50ST, K5EK1-50BP</p> <p>User manual for Electrolux water kettles (models E5K1-6ST, E5EK1-50ST, K5EK1-50BP). Includes operating instructions, safety advice, maintenance, and troubleshooting. Learn how to use your Electrolux appliance effectively.</p>
 <p>Electrolux Instruction Book E5CM1-6ST E5CM1-80ST Coffee Maker</p>	<p>Electrolux E5CM1-6ST / E5CM1-80ST Coffee Maker Instruction Manual</p> <p>Official instruction manual for the Electrolux E5CM1-6ST and E5CM1-80ST coffee makers. Learn how to set up, operate, clean, and maintain your appliance for the best coffee experience.</p>