

[Manuals.plus](#) /

› [Philips Sonicare](#) /

› Philips Sonicare 4100 Rechargeable Electric Toothbrush User Manual

## Philips Sonicare HX3681/26

# Philips Sonicare 4100 Rechargeable Electric Toothbrush User Manual

Brand: Philips Sonicare

Model: HX3681/26

## PRODUCT OVERVIEW

---

The Philips Sonicare 4100 electric toothbrush is designed to enhance your oral hygiene routine. It offers a powerful yet gentle cleaning action, clinically proven to remove up to 7 times more plaque compared to a manual toothbrush, promoting gum health. Key features include a pressure sensor, two intensity settings, a SmarTimer, and a QuadPacer to ensure effective and dentist-recommended brushing.

This model, HX3681/26, comes in a deep pink color and includes a C2 Optimal Plaque Control brush head and a USB charger. Its long-lasting lithium-ion battery provides up to two weeks of use on a single charge, making it convenient for both home and travel.



Image: Philips Sonicare 4100 Deep Pink Electric Toothbrush in its retail packaging.

## SETUP

### Components and Initial Assembly

Your Philips Sonicare 4100 package includes the toothbrush handle, one C2 Optimal Plaque Control brush head, and a USB charging base. To assemble, simply align the brush head with the metal shaft on the handle and push it down until it clicks into place.







Image: Philips Sonicare 4100 Deep Pink Toothbrush.





Image: C2 Optimal Plaque Control brush head.

## **Charging the Toothbrush**

Before first use, fully charge your toothbrush. Place the handle on the USB charging base. The battery indicator light on the handle will show the charging status. A full charge can last up to 14 days with regular use.

# USB charger

## with 2 week battery life



wall adaptor not included

Image: USB charger base for Philips Sonicare toothbrush.

## OPERATING INSTRUCTIONS

---

### Powering On and Intensity Settings

Press the power button once to turn on the toothbrush. The Philips Sonicare 4100 offers two intensity settings. Press the power button a second time to switch between the lower and higher intensity modes. The toothbrush will remember your last selected intensity setting for future use.

# Two intensity settings



Image: Philips Sonicare toothbrush with two intensity settings.

## Brushing Technique

Apply a small amount of toothpaste to the brush head. Place the brush head against your teeth at a slight angle towards the gumline. Press the power button to start brushing. There is no need to scrub; let the sonic technology do the work for you. Gently move the brush head slowly across each tooth, focusing on one area at a time.



Image: Proper brushing technique with Philips Sonicare.



Image: Couple using Philips Sonicare toothbrushes.

### **SmarTimer and QuadPacer**

The built-in SmarTimer ensures you brush for the dentist-recommended two minutes. The QuadPacer feature divides your brushing time into four 30-second intervals, signaling you to move to the next quadrant of your mouth for a thorough and even clean.

# 2 minute timer

with QuadPacer



Image: 2-minute timer with QuadPacer feature.

## **Pressure Sensor**

The integrated pressure sensor protects your teeth and gums. If you apply too much pressure, the toothbrush will automatically reduce its vibrations and emit a pulsating sound to alert you, helping to prevent damage to your gums and enamel.

# Pressure sensor

protects teeth and gums



Image: Pressure sensor feature for gum protection.

## Official Usage Guide Video

Watch the official Philips Sonicare video for a visual guide on how to use your 3000/4000 Series toothbrush, including proper technique and features.

Your browser does not support the video tag.

Video: Philips Sonicare 3000/4000 Series - How to use.

## MAINTENANCE

### Brush Head Replacement

For optimal performance and hygiene, it is recommended to replace your brush head every three months, or sooner if the bristles appear frayed or worn. The BrushSync replacement reminder on your handle will also alert you when it's time to replace the brush head.

# Compatible with all Philips Sonicare **click-on brush heads**



Image: Compatible Philips Sonicare click-on brush heads.

## Cleaning

After each use, rinse the brush head and handle thoroughly under running water. Wipe the handle with a damp cloth. Do not submerge the handle or charger in water. Ensure the charging base is dry before plugging it in.

## TROUBLESHOOTING

If you encounter any issues with your Philips Sonicare 4100 toothbrush, please refer to the official [Troubleshooting Guide \(PDF\)](#) for detailed solutions and common problem-solving steps.

## SPECIFICATIONS

Product Dimensions	2.48 x 4.29 x 8.66 inches; 8.64 ounces
Item Model Number	HX3681/26

<b>Batteries</b>	1 Lithium Ion batteries required. (included)
<b>Manufacturer</b>	Philips Sonicare
<b>Brand</b>	Philips Sonicare
<b>Age Range (Description)</b>	Adult
<b>Special Feature</b>	Pressure Sensor, Brushing Timer, Rechargeable, Lightweight, Ergonomic
<b>Power Source</b>	Battery Powered
<b>Item Firmness Description</b>	Soft

## WARRANTY AND SUPPORT

---

For comprehensive product information, warranty details, and customer support, please consult the official [User Manual \(PDF\)](#) provided by Philips Sonicare.

### Safety Information

To ensure safe use, avoid submerging the charger in water and only use the provided charging base with the specified voltage.

### Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.