



[Manuals.plus](#) /

> [Promixx](#) /

> Promixx Original Shaker Bottle Instruction Manual

Promixx PRO-VM-ORG-AA-BLK

Promixx Original Shaker Bottle Instruction Manual

Model: PRO-VM-ORG-AA-BLK

INTRODUCTION

The Promixx Original Shaker Bottle is a battery-powered vortex mixer designed to create smooth protein shakes without lumps. Its patented X-Blade technology ensures efficient mixing, providing a better taste experience. The bottle is constructed from durable, odorless, BPA/DEHP-free materials and features a detachable motor for easy cleaning and portability.



Image: The Promixx Original Shaker Bottle displayed next to its retail packaging, highlighting its sleek design and key features.

SETUP

- Unpack Components:** Carefully remove all components from the packaging. Ensure you have the bottle, lid, and detachable motor base.
- Install Batteries:** The Promixx Original Shaker Bottle requires 2xAA batteries (not included). To install, gently pull the rubber bottom of the motor base to detach it. Insert the batteries according to the polarity indicators (+/-). Reattach the rubber bottom securely.





Image: A close-up view of the detachable motor base, illustrating the battery compartment and how to access it for battery installation.

- 3. Initial Cleaning:** Before first use, wash the bottle and lid with warm water and mild detergent. The motor base should be wiped clean with a damp cloth; *do not submerge the motor base in water.*

4. **Assemble:** Ensure the motor base is securely attached to the bottom of the bottle. The lid should fit snugly on top.



Image: The Promixx shaker bottle with its motor base detached, demonstrating the modular design for easy assembly and cleaning.

OPERATING INSTRUCTIONS

1. **Add Liquid First:** Pour the desired amount of liquid (water, milk, etc.) into the bottle. The bottle has measurement markings in milliliters and ounces for convenience.

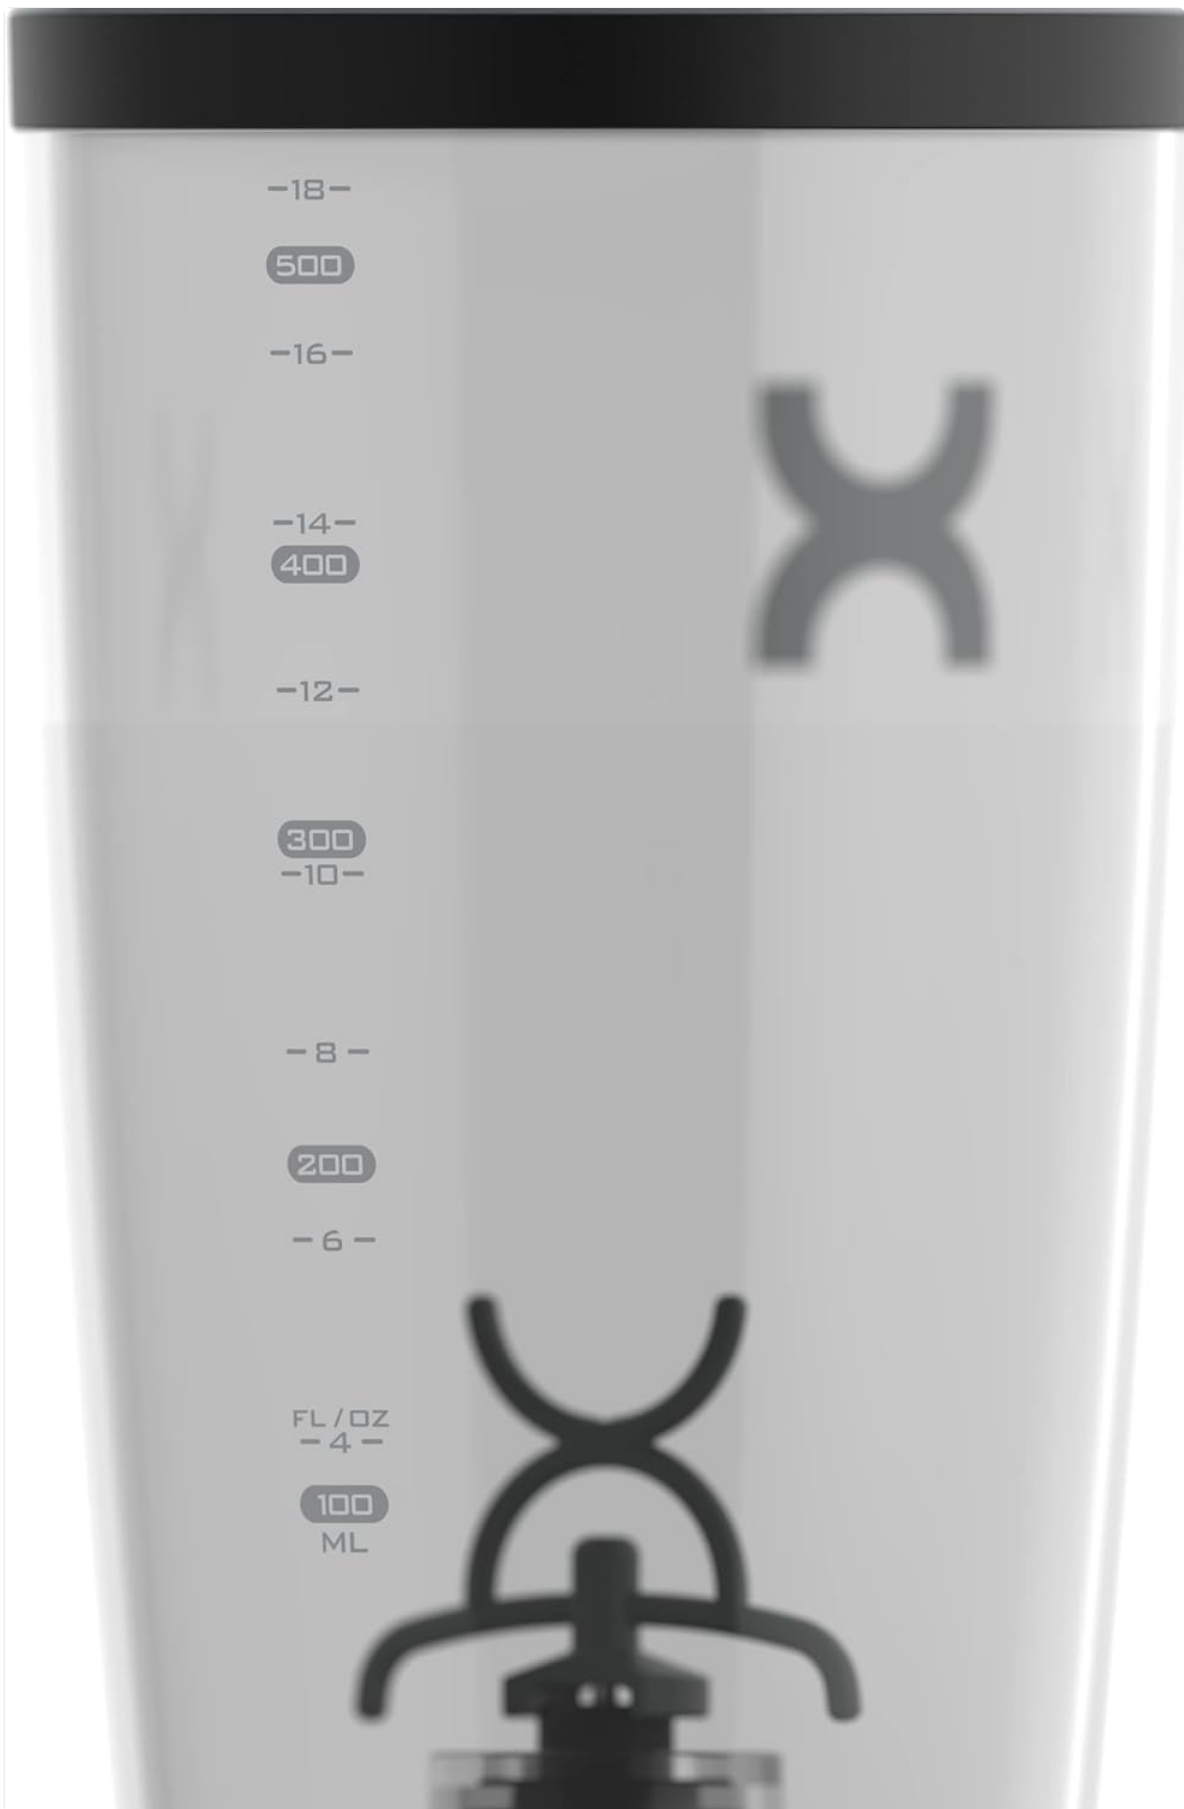


Image: A detailed view of the Promixx shaker bottle's side, showing clear measurement indicators for accurate liquid volume.

2. **Activate Motor:** Press the power button on the motor base to start the vortex.
3. **Add Powder:** While the motor is running and creating a vortex, slowly add your protein powder or other supplements. This method helps prevent clumping and ensures a smooth mix.







Image: The Promixx shaker bottle in action, demonstrating the powerful vortex created by the motor for efficient mixing of liquids and powders.

4. **Mix Thoroughly:** Allow the mixer to run until your ingredients are fully dissolved and the shake is smooth. This typically takes 10-30 seconds depending on the powder.
5. **Enjoy:** Once mixed, turn off the motor, open the flip-cap, and enjoy your shake.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your Promixx Shaker Bottle.

1. **Self-Cleaning Function:** For quick and easy cleaning, add warm water and a drop of dish detergent to the bottle. Reattach the motor base and turn it on for 10-20 seconds. The vortex action will clean the interior.
2. **Hand Wash Components:** Detach the motor base from the bottle. Hand wash the bottle and lid thoroughly with warm, soapy water. Use a bottle brush if necessary to reach all areas.



Image: The Promixx shaker bottle separated into its main components (bottle and motor base) to illustrate how to prepare it for thorough hand washing.

- Clean Motor Base:** Wipe the exterior of the motor base with a damp cloth. *Never submerge the motor base in water or place it in a dishwasher*, as this will damage the electronic components.
- Drying:** Allow all components to air dry completely before reassembling or storing to prevent odor and bacterial growth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor not turning on or weak mixing.	Low or dead batteries; motor blades are stuck.	Replace batteries with fresh AA alkaline batteries. If blades are stuck, gently move them with your fingers to free them, then try again. Ensure the motor base is securely attached.
Shake contains clumps.	Powder added before liquid; too much powder for liquid volume; powder type.	Always add liquid first, then start the motor to create a vortex, and then slowly add powder. Reduce the amount of powder or increase liquid. Some powders may require longer mixing times.
Bottle leaks.	Lid not properly sealed; damaged seal.	Ensure the lid is screwed on tightly and the flip-cap is securely closed. Check the silicone seal within the lid for any damage or misalignment.
Unpleasant odor in bottle.	Improper or infrequent cleaning.	Clean the bottle immediately after each use. Use the self-cleaning function, then hand wash thoroughly. Ensure all components are completely dry before storage.

SPECIFICATIONS

- Model Name:** PRO-VM-ORG-AA-BLK
- Capacity:** 600 Milliliters (approx. 20.3 Ounces)
- Material:** Acrylonitrile Butadiene Styrene (BPA/DEHP-free)
- Color:** Black
- Product Dimensions:** Approximately 4"W x 9"H
- Item Weight:** 13.1 ounces
- Power Source:** 2xAA Batteries (not included)
- Special Features:** Airtight, Detachable Motor, Patented X-Blade Technology
- Care Instructions:** Hand Wash Only (bottle and lid); Wipe motor base clean.

WARRANTY AND SUPPORT

The Promixx Original Shaker Bottle comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. For warranty claims, technical support, or any product-related inquiries, please visit the official Promixx website or contact their customer service department.

For more information, visit: [Promixx Official Store](#)

