Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Masterbuilt /
- Masterbuilt Gravity Series 1050 Digital Charcoal Grill Smoker Combo Instruction Manual

Masterbuilt Gravity Series 1050

Masterbuilt Gravity Series 1050 Digital Charcoal Grill Smoker Combo User Manual

Model: Gravity Series 1050

IMPORTANT SAFETY INFORMATION

Please read this entire manual before assembly and use of your Masterbuilt Gravity Series 1050 Digital Charcoal Grill Smoker Combo. Failure to follow these instructions could result in property damage, bodily injury, or death. Keep this manual for future reference.

- Always operate the grill on a flat, stable, non-combustible surface.
- Maintain a minimum distance of 10 feet (3 meters) from combustible materials.
- Never use gasoline, alcohol, or other highly volatile fuels to light or relight charcoal.
- Keep children and pets away from the grill at all times.
- Do not move the grill while in use or while it contains hot charcoal.
- Always use heat-resistant gloves when handling hot surfaces or charcoal.

1. SETUP AND INITIAL USE

1.1 Unpacking and Assembly

Carefully remove all components from the packaging. It is recommended to assemble the grill on a clean, flat surface. Follow the detailed assembly instructions provided in the separate assembly guide included with your product. Ensure all bolts, nuts, and screws are securely tightened before first use.



Image: Front view of the Masterbuilt Gravity Series 1050 Digital Charcoal Grill Smoker Combo, showcasing its digital control panel and charcoal hopper.

1.2 Initial Burn-In

Before cooking food for the first time, perform an initial burn-in to remove any manufacturing oils or residues. Load the charcoal hopper, ignite the charcoal, and operate the grill at 350°F (175°C) for at least one hour. This process helps season the grill and ensures optimal performance.



Image: The Masterbuilt Gravity Series 1050 with its lid open, revealing the cooking grates and internal structure.

1.3 Connecting to Smart Device

Your Masterbuilt Gravity Series 1050 can be controlled via WiFi or Bluetooth using a compatible smart device. Download the Masterbuilt app from your device's app store. Follow the in-app instructions to pair your grill and begin controlling temperature and cook time remotely.

2. OPERATING INSTRUCTIONS

2.1 Loading Charcoal

Open the charcoal hopper lid and fill with lump charcoal or briquettes. Ensure the charcoal grate is clear of ash before loading. The Gravity Series design feeds charcoal automatically, maintaining consistent heat.

2.2 Igniting Charcoal

Place a fire starter in the designated area at the bottom of the charcoal hopper. Ignite the starter. Once the charcoal begins to ash over, close the hopper lid and the ash door. The DigitalFan will then regulate airflow to reach your desired temperature.

2.3 Temperature Control

Use the digital control panel on the grill or the Masterbuilt app on your smart device to set the desired cooking temperature. The DigitalFan system precisely controls airflow to maintain the set temperature. The grill can reach 225°F (107°C) in approximately 10 minutes and 700°F (371°C) in approximately 15 minutes.



DIMENSIONS & CAPACITY

GRAVITY SERIES 1050

Image: The Masterbuilt Gravity Series 1050 in operation, with food cooking on the grates.

3. MAINTENANCE AND CARE

3.1 Cleaning the Grill

Regular cleaning is essential for optimal performance and longevity. After each use, allow the grill to cool completely. Remove cooking grates and clean with a grill brush. Empty the ash pan and charcoal hopper of any remaining ash. Wipe down exterior surfaces with a damp cloth.

3.2 Using the Protective Cover

To protect your grill from the elements, use the included Masterbuilt protective cover. The cover features durable, double-stitched seams to prevent leaking and an interior PVC liner to prevent tearing. UV additives help prevent fading. An adjustable drawstring ensures the cover stays securely in place.



Image: The Masterbuilt Gravity Series 1050 grill with its black protective cover fully installed, shielding it from outdoor elements.

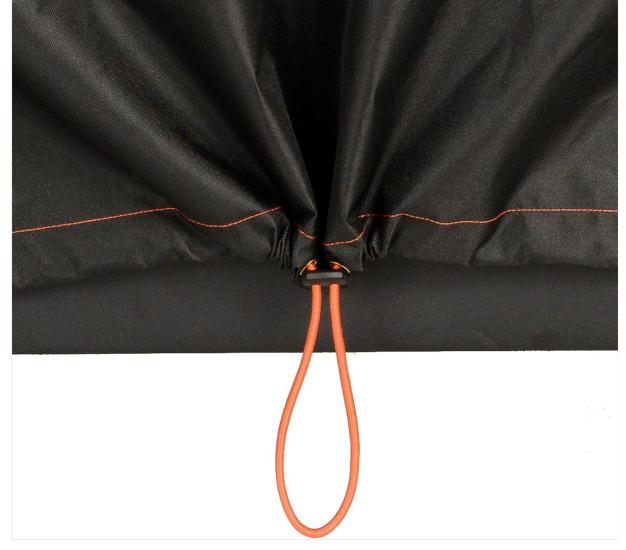


Image: A close-up view of the adjustable drawstring at the bottom of the Masterbuilt grill cover, designed to secure it tightly.

4. TROUBLESHOOTING

If you encounter issues with your Masterbuilt Gravity Series 1050, refer to the following common troubleshooting tips:

- **Grill not reaching desired temperature:** Ensure the charcoal hopper is adequately filled and the ash door is fully closed. Check for any blockages in the airflow system. Verify the DigitalFan is operating.
- **Digital control panel not responding:** Check power connections. Ensure the power cord is securely plugged into a grounded outlet. If using battery power (if applicable), check battery levels.
- Smart device connectivity issues: Ensure your grill is within range of your WiFi network or Bluetooth device. Restart both the grill and your smart device. Re-pair the device through the Masterbuilt app.
- Excessive smoke: This can be normal during initial ignition or when adding wood chunks. If persistent, ensure proper airflow and that no grease is accumulating and burning.

For more detailed troubleshooting or issues not listed here, please contact Masterbuilt customer support.

5. Specifications

Brand	Masterbuilt	

Model Name	Gravity Series 1050
Power Source	Charcoal
Fuel Type	Charcoal
Color	Charcoal
Outer Material (Cover)	PVC
Manufacturer	Masterbuilt

5.1 Dimensions and Capacity

Height: 61 inches

Depth: 33 inches

Width: 52 inches

Cooking Area: 1050 square inches

Capacity: Fits 45 burgers, 7 racks of ribs, or 17 chickens



Image: A visual representation of the Masterbuilt Gravity Series 1050's dimensions and its cooking capacity for various food items.

6. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Masterbuilt website. If you require technical assistance, replacement parts, or have any questions regarding your Masterbuilt Gravity Series 1050, please contact Masterbuilt customer support.

Masterbuilt Support: Visit Masterbuilt Contact Us Page

Related Documents - Gravity Series 1050



Masterbuilt Gravity Series 1150 Digital Charcoal Grill and Smoker Manual

Assembly, operation, and maintenance guide for the Masterbuilt Gravity Series 1150 Digital Charcoal Grill and Smoker. Learn how to safely set up, use, and care for your grill.



 
Masterbuilt Gravity Series Griddle™ Digital Charcoal Grill + Smoker Manual

This manual provides essential assembly, operation, and safety instructions for the Masterbuilt Gravity Series Griddle™ (Model MB20042221), a digital charcoal grill and smoker designed for outdoor household use. Learn how to safely set up, use, and maintain your grill for optimal performance.



Masterbuilt Gravity Series 560 Digital Charcoal Grill + Smoker User Manual

Comprehensive user manual and assembly guide for the Masterbuilt Gravity Series 560 Digital Charcoal Grill + Smoker (Model MB20041020). Includes safety instructions, parts list, operating procedures, and troubleshooting tips.



Masterbuilt Gravity Series Grill Assembly Instructions - MB20040221

Comprehensive assembly guide for the Masterbuilt Gravity Series digital charcoal grill, model MB20040221. Follow these step-by-step instructions to build your grill.



Masterbuilt Gravity Series XT Digital Charcoal Grill and Smoker - Assembly & Operation Manual

Get started with your Masterbuilt Gravity Series XT Digital Charcoal Grill and Smoker. This manual covers assembly, operation, safety, and troubleshooting for the MB20043024 model.



<u>Masterbuilt Gravity Series 560 Digital Charcoal Grill + Smoker: Assembly and Operation Manual</u> Comprehensive guide for assembling, operating, and maintaining the Masterbuilt Gravity Series 560 Digital Charcoal Grill + Smoker, including safety instructions and troubleshooting.