

## Bimar HP126

# Bimar HP126 Ceramic Column Heater User Manual

Model: HP126

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Bimar HP126 Ceramic Column Heater. Please read this manual thoroughly before using the appliance and retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or

flammable liquids are used or stored.

- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an automatic tip-over switch for safety. If the heater is accidentally knocked over, it will automatically shut off.

## PRODUCT OVERVIEW

---

The Bimar HP126 is a ceramic column heater designed for efficient heating with multiple control options, including voice control.


### Components

- Ceramic Heating Element
- Control Panel with Digital Display
- Remote Control
- Oscillation Function
- Tip-over Safety Switch

### Visual Reference



**Figure 1:** Front view of the Bimar HP126 Ceramic Column Heater, showing the digital display and control buttons at the top.

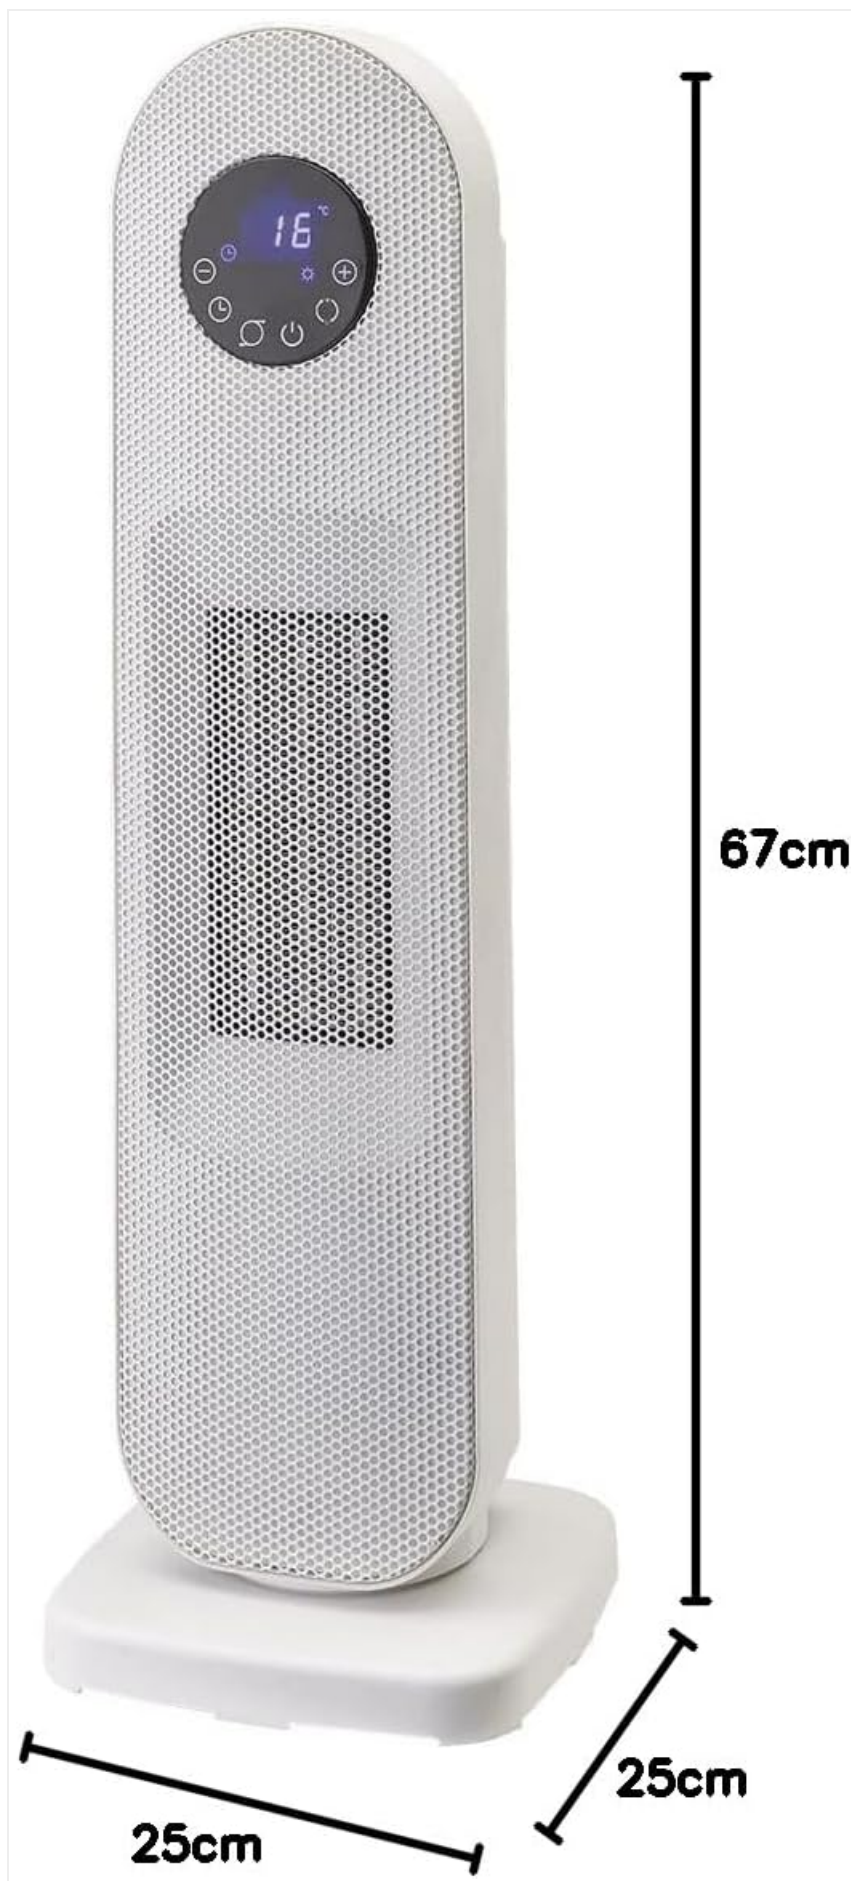

**Figure 2:** Front view of the Bimar HP126 Ceramic Column Heater, illustrating its approximate dimensions: 67cm height and 25cm width/depth at the base.



**Figure 3:** Side view of the Bimar HP126 Ceramic Column Heater, showing its slim profile.



**Figure 4:** Rear view of the Bimar HP126 Ceramic Column Heater, showing the main power switch at the bottom.



**Figure 5:** Remote control for the Bimar HP126, featuring buttons for Power, Mode, Temperature Up/Down, Timer, and Oscillation.

## SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater to allow for proper air circulation and to prevent fire hazards. Do not place it near curtains, furniture, or other flammable materials.
3. **Power Connection:** Ensure the main power switch on the back of the heater is in the OFF position. Plug the power cord into a suitable 240V electrical outlet. Do not use extension cords.
4. **Initial Power On:** Flip the main power switch on the back of the heater to the ON position. The heater will

enter standby mode.

## OPERATING INSTRUCTIONS

---

### Control Panel Operation

The heater can be operated using the touch-sensitive control panel located on the top of the unit.

- **Power Button ( ):** Press to turn the heater ON or OFF from standby mode.
- **Mode Button (≡):** Press to cycle through heating modes (e.g., Low Heat, High Heat, Fan Only).
- **Temperature Up (+) / Down (-) Buttons:** Adjust the desired temperature setting between 15°C and 40°C.
- **Timer Button ( ):** Set the operating timer for up to 12 hours. Each press increases the timer by one hour.
- **Oscillation Button (↶):** Activate or deactivate the automatic oscillation function to distribute heat across a wider area.

### Remote Control Operation

The included remote control provides the same functionality as the control panel.

- Ensure batteries are correctly inserted into the remote control.
- Point the remote control towards the heater's display panel for optimal response.
- Buttons on the remote correspond to the functions described for the control panel: ON/OFF, MODE, UP, DOWN, TIMER, WING (Oscillation).

### Voice and App Control

The Bimar HP126 heater supports voice control via Alexa and Google Assistant, and can be managed through a dedicated smartphone application.

1. **Download the App:** Download the Bimar smart home application from your device's app store (compatible with iOS and Android devices).
2. **Pairing:** Follow the in-app instructions to pair your Bimar HP126 heater with your smartphone. This typically involves putting the heater into pairing mode (refer to app for specific steps).
3. **Connect to Voice Assistant:** Once paired with the app, link the Bimar app to your Alexa or Google Assistant account through their respective applications.
4. **Voice Commands:** You can now use voice commands to control the heater, such as turning it on/off, adjusting temperature, changing modes, or setting the timer.
5. **Advanced Features:** The app allows for scheduling heating periods (0-12 hours timer), sharing device control with multiple users, and integration with IFTTT for advanced automation.

## MAINTENANCE

---

Regular maintenance ensures the longevity and efficient operation of your heater.

- **Cleaning:**
  - Always unplug the heater and allow it to cool completely before cleaning.
  - Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
  - Use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles.
  - Do not immerse the heater in water or allow water to drip into the interior.



- **Storage:**
  - If storing the heater for an extended period, clean it thoroughly.
  - Store the heater in its original packaging in a cool, dry place.
  - Do not place heavy objects on top of the heater during storage.

## TROUBLESHOOTING

Before contacting customer service, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Heater does not turn on.	<ul style="list-style-type: none"><li>• No power to the unit.</li><li>• Main power switch is OFF.</li><li>• Tip-over switch activated.</li></ul>	<ul style="list-style-type: none"><li>• Check if the power cord is securely plugged into a working outlet.</li><li>• Ensure the main power switch on the back is ON.</li><li>• Place the heater on a flat, stable surface.</li></ul>
Heater stops working unexpectedly.	<ul style="list-style-type: none"><li>• Overheat protection activated.</li><li>• Tip-over switch activated.</li><li>• Timer has expired.</li></ul>	<ul style="list-style-type: none"><li>• Unplug the heater, let it cool for 30 minutes, then restart. Ensure air vents are not blocked.</li><li>• Ensure the heater is upright on a stable surface.</li><li>• Check the timer setting.</li></ul>
Remote control not working.	<ul style="list-style-type: none"><li>• Dead batteries.</li><li>• Obstruction between remote and heater.</li></ul>	<ul style="list-style-type: none"><li>• Replace batteries.</li><li>• Ensure a clear line of sight to the heater's display panel.</li></ul>
Voice control not responding.	<ul style="list-style-type: none"><li>• Heater not connected to Wi-Fi.</li><li>• App or voice assistant not linked.</li><li>• Incorrect voice commands.</li></ul>	<ul style="list-style-type: none"><li>• Check Wi-Fi connection and app status.</li><li>• Verify linking in Alexa/Google Assistant app.</li><li>• Refer to app for correct voice commands.</li></ul>

## SPECIFICATIONS

Feature	Detail
Brand	Bimar
Model Number	HP126
Product Dimensions	67.01 x 24.99 x 24.99 cm
Weight	2.5 kg
Power	2000 Watts
Voltage	240 Volts
Material	Ceramic
Automatic Shut-off	Yes (Tip-over switch)

Feature	Detail
Compatible Devices	Smartphones (iOS, Android), Alexa, Google Assistant
Special Features	On/Off Timer (0-12h), Voice Control, Oscillation
Temperature Range	15°C to 40°C
Heating Coverage	Up to 20 square units (e.g., m²)


## WARRANTY AND SUPPORT




The Bimar HP126 Ceramic Column Heater is covered by an official 24-month warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact Bimar customer service. Please have your purchase receipt and product model number (HP126) available when contacting support.

You can find more information and contact details on the official Bimar website or through your retailer.

## Related Documents - HP126
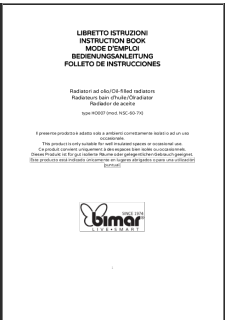
<div><p>LIBRETTO ISTRUZIONI INSTRUCTION BOOKLET BEDRUKINGSANLEIUNG NOTICE D'INSTRUCTIONS</p><p>Termoventilatore Murale PTC Wall PTC Heater Mantelheizkörper Termoventilator (mod. PICK) Bimar HP126 (mod. HP126-001-001)</p><p>Il presente prodotto è adatto solo a uso residenziale e deve essere installato in un ambiente residenziale. The product is only suitable for residential use and must be installed in a residential environment. Dieses Produkt ist nur für den Einsatz in Wohngebäuden geeignet und muss in einem Wohngebäude installiert werden. Ce produit n'est conçu que pour un usage domestique et doit être installé dans un environnement domestique.</p><p><b>bimar</b> LIVIGNO</p></div>	<p><a href="#">Bimar HP131 Wall PTC Fan Heater User Manual</a></p> <p>Comprehensive instructions for the Bimar HP131 Wall PTC Fan Heater, covering installation, operation, safety precautions, and smart features via the Bimar Live Smart app. Learn how to safely and effectively use your new heater.</p>
<div><p>LIBRETTO ISTRUZIONI INSTRUCTION BOOK MODE D'EMPLOI BEDRUKINGSANLEIUNG FOLLETO DE INSTRUCCIONES</p><p>Riscaldatori ad olio/Öl filled radiators Radiateurs à huile/Ölheizkörper Radiador de aceite</p><p>Type HO427 (mod. HO 427-001-001) Type HO429 (mod. HO 429-001-001) Type HO431 (mod. HO 431-001-001)</p><p>Il presente prodotto è adatto solo a uso residenziale e deve essere installato in un ambiente residenziale. The product is only suitable for residential use and must be installed in a residential environment. Dieses Produkt ist nur für den Einsatz in Wohngebäuden geeignet und muss in einem Wohngebäude installiert werden. Este producto está diseñado únicamente para uso doméstico y debe instalarse en un entorno doméstico.</p><p><b>bimar</b> LIVIGNO</p></div>	<p><a href="#">Bimar Oil-Filled Radiator User Manual and Instructions</a></p> <p>This comprehensive manual provides essential information for the safe and effective use of Bimar oil-filled radiators, including models HO427, HO429, and HO431. It covers assembly, operation, safety precautions, maintenance, and disposal guidelines.</p>
<div><p>LIBRETTO ISTRUZIONI INSTRUCTION BOOKLET NOTICE D'INSTRUCTIONS BEDRUKINGSANLEIUNG FOLLETO DE INSTRUCCIONES</p><p>TERMOVENTILATORE FAN HEATER TERMOVENTILATOR MODULFÖN TERMOVENTILADOR</p><p>Mod. HF208 (mod. PICK) Bimar HF208 (mod. HF208-001-001)</p><p>Il presente prodotto è adatto solo a uso residenziale e deve essere installato in un ambiente residenziale. The product is only suitable for residential use and must be installed in a residential environment. Dieses Produkt ist nur für den Einsatz in Wohngebäuden geeignet und muss in einem Wohngebäude installiert werden. Este producto está diseñado únicamente para uso doméstico y debe instalarse en un entorno doméstico.</p><p><b>bimar</b> LIVIGNO</p></div>	<p><a href="#">Bimar HF208 Termoventilatore: Manuale Utente e Istruzioni</a></p> <p>Scopri il manuale completo per il termoventilatore Bimar HF208 (mod. PICK). Trova istruzioni dettagliate per l'uso sicuro, l'installazione, la pulizia e la manutenzione. Visita <a href="http://www.bimaritaly.it">www.bimaritaly.it</a> per aggiornamenti.</p>

	<p><a href="#">Bimar HO007 Oil-Filled Radiator User Manual and Instructions</a></p> <p>Comprehensive user manual for the Bimar HO007 (NSC-60-7X) oil-filled radiator, covering safety instructions, installation, operation, cleaning, maintenance, and disposal.</p>
	<p><a href="#">Bimar B301 Prontoforno Multi Oven Instruction Booklet</a></p> <p>Comprehensive instruction booklet for the Bimar B301 Prontoforno Multi oven, covering setup, operation, safety, troubleshooting, and maintenance.</p>
	<p><a href="#">Bimar B301 Forno Elettrico - Libretto Istruzioni</a></p> <p>Manuale di istruzioni completo per il forno elettrico Bimar B301 (mod. AFO-07D), che copre installazione, uso, sicurezza, programmi di cottura, pulizia e manutenzione.</p>

Documents - Bimar – HP126



[pdf] Instructions

Riccardo Cherubini libretto istruzioni instruction booklet notice d Konyks Il presente prodotto è adatto solo a ambienti correttamente isolati o ad un uso occasionale This product is only suitable for well insulated spaces or HP126 konyks 2022 01 |||

LIBRETTO ISTRUZIONI INSTRUCTION BOOKLET NOTICE D INSTRUCTIONS BEDIENUNGSANLEITUNG FOLLETO DE INSTRUCCIONES TERMOVENTILATORE PTC PTC FAN HEATER THERMO-VENTILATEUR EN CERAMIQUE KERAMISCHE HEIZLFTER TERMOVENTILADOR type **HP126/AMA10** mod. BHN2010R-1 Il presente prodotto adatto solo a ambienti corretta... lang:it score:32 filesize: 756.04 K page\_count: 60 document date: 2021-06-11






[pdf]

HP125 SC WI FI TYPE HP 126 TERMOVENTILATORE PTC BIMAR S R L Via G Amendola 16 18 25019 SIRMIONE BS Tel 39 030 9904555 Fax 9904733 bimar spa it C F P I HP126 melchioni ready media assets files hp126 sc reference |||

WI-FI 2 HEATING POWERS ADJUSTABLE THERMOSTAT VENTILATION  
FUNCTION LEFT-RIGHT OSCILLATION ANDROID IOS/APPLE C 2 TERMOSTATO  
FUNZIONE OSCILLAZIONE ANDROID REGOLABILE VENTILAZIONE DX/SX  
IOS/APPLE TYPE HP 126 - TERMOVENTILATORE PTC WI-FI OMOLOGAZIONE:  
220/240V- 50Hz 2000W Termoventilato...

lang:it score:23 filesize: 1.9 M page\_count: 1 document date: 2021-04-13

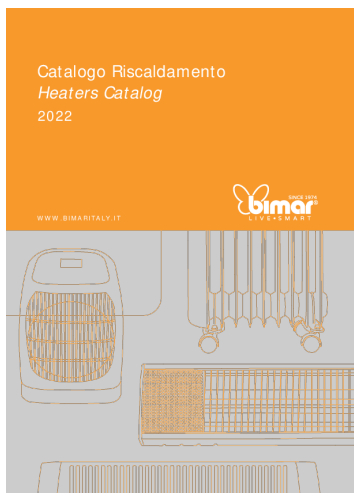

[pdf] Catalog

untitled Heaters Catalog Bimar prieš 1 dieną — 15° 40°C adjustable room thermostat 12h timer Right Left automatic swing Stand by ON button O I switch Tip over Catalogo Riscaldamento 2022 bimaritaly it storage app media Cataloghi |||

Catalogo Riscaldamento Heaters Catalog 2022 W W W . B I M A R I T A L Y . I T  
ommario Storia - His ... LARGER PLACES 40m CAMPER UTILIZZO ARTICOLI  
RISCALDAMENTO MODELLO/MODEL DESCRIZIONE/DESCRIPTION **HP126**  
HP110 HP121 HP104 HP108 HP116 HP118 HF201 HF200 HF204 HF198 HF190  
HF195 HF207 HR301 HR315 HR30...

lang:i-klngon score:19 filesize: 4.84 M page\_count: 68 document date: 2022-05-23



[pdf] Catalog

Catalogo Riscaldamento 22 monica gazzurelli bimar HP126 Fűtőventilátor Fehér Conrad adatlap 2617609 hp126 futoventilator feher asset conrad media10 add 160267 c1 gl 002617609DS00 |||

...

lang:i-klngon score:16 filesize: 1.23 M page\_count: 1 document date: 2022-07-11



[\[pdf\]](#) Catalog

Catalogo Riscaldamento 22 monica gazzurelli Podatkovna tablica 2617609 bimar HP126 ventilatorski grijač nije relevantno EENRPS00 20 m² bijela AC group webshop    podatkovna hp126 grijač eenrps00 m asset conrad media10 add 160267 c1 gl 002617609DS00 |||

• • •

lang:i-klingon score:14 filesize: 1.23 M page\_count: 1 document date: 2022-07-11