

PayLessHere 47 Inch Computer Desk

PayLessHere 47 Inch Computer Desk Instruction Manual

Model: 47 Inch Computer Desk (Black)

INTRODUCTION

Thank you for choosing the PayLessHere 47 Inch Computer Desk. This manual provides detailed instructions for assembly, usage, and maintenance to ensure optimal performance and longevity of your desk. Designed for versatility, this desk is suitable for various environments including home offices, study areas, and gaming setups.

PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- **A:** Desktop (1 pc)
- **B:** Side Frames (2 pcs)
- **C:** Crossbar (1 pc)
- **D:** Crossbar (1 pc)
- **E:** Support Rods (2 pcs)
- **F:** Allen Wrench (1 pc)
- **G:** Adjustable Feet (4 pcs)
- **H:** Screws for Support Rods (8 pcs)
- **I:** Screws for Desktop (6 pcs)
- **J:** Screws for Frame (8 pcs)
- **K:** Triangular Brackets (2 pcs)

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your desk. An Allen wrench (F) is included for your convenience.

1. **Assemble the Frame Base:** Connect the side frames (B) with the crossbars (C and D). Use screws (J) to secure these connections. *Do not fully tighten the screws at this stage.* Repeat this process for all four corners of the base frame.
2. **Install Triangular Brackets:** Attach the triangular brackets (K) to the corners of the frame using screws (H). These brackets provide additional stability.
3. **Attach Support Rods:** Connect the support rods (E) to the side frames (B) using screws (J). Ensure these are aligned correctly.
4. **Install Adjustable Feet:** Screw the adjustable feet (G) into the bottom of each leg. These can be adjusted later to level the desk on uneven surfaces.
5. **Attach Desktop:** Carefully place the desktop (A) onto the assembled frame. Align the pre-drilled holes on the desktop with the holes on the frame. Secure the desktop using screws (I).
6. **Final Tightening:** Once all components are in place and loosely assembled, gradually tighten all screws (J, H, I) to 100% to ensure a secure and stable structure. Avoid overtightening to prevent damage to the desktop.

Your browser does not support the video tag.

Video: Assembly guide for the computer desk, demonstrating step-by-step installation of the frame and desktop.



SPACIOUS DESKTOP



Waterproof



Smooth Surface



Scratch-Proof

Image: Detail of the triangular connection design, highlighting the reinforced metal frame for enhanced stability.

ADJUSTABLE SCREW FEET

Anti-slip and noise reduction, reduce the noise caused by pushing and pulling the furniture



Image: Adjustable screw feet, designed to prevent wobbling and reduce noise when moving the desk.

OPERATING AND USAGE

The PayLessHere 47 Inch Computer Desk is designed for multi-functional use and durability.

- **Versatile Use:** This desk can serve as a computer desk, gaming table, writing desk, or study table. Its compact design makes it suitable for small spaces, bedrooms, dorms, or home offices.
- **Adjustable Stability:** The adjustable feet allow you to level the desk on uneven floors, ensuring a stable and wobble-free workspace.
- **Durable Surface:** The desktop features a water-resistant and scratchproof surface, protecting it from daily wear and tear.



Image: The 47-inch computer desk integrated into a modern home office, showcasing its spacious desktop for multiple devices.



Image: A close-up view of the desk surface, illustrating its smooth texture and suitability for work or study.

MAINTENANCE

To keep your PayLessHere Computer Desk in excellent condition, follow these simple maintenance guidelines:

- **Cleaning:** The water-resistant surface allows for easy cleaning. Wipe spills immediately with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Protection:** Although the surface is scratchproof, using coasters for drinks and protective mats for heavy or sharp objects is recommended to prolong its lifespan.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain stability.

TROUBLESHOOTING

If you encounter any issues with your desk, refer to the following common solutions:

- **Wobbling Desk:** If the desk wobbles, adjust the height of the adjustable feet (G) on each leg until the desk is stable on your floor. Ensure all assembly screws are fully tightened.
- **Screws Protruding Through Desktop:** This can occur if screws are overtightened or if incorrect screw lengths are used during assembly. Always follow the assembly instructions carefully and ensure screws are tightened only until snug, not forced. If damage occurs, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	20"D x 47"W x 30"H

Item Weight	38 Pounds
Maximum Weight Recommendation	220 Pounds
Top Material Type	Engineered Wood
Base Material	Metal (Alloy Steel)
Color	Black
Special Feature	Adjustable Height (feet)
Assembly Required	Yes, all tools included
Tabletop Thickness	1.5 Centimeters



Image: Visual representation of the desk's dimensions: 20 inches deep, 47 inches wide, and 30 inches high.

WARRANTY AND SUPPORT

This PayLessHere Computer Desk comes with a **90-day manufacturer's warranty**. For warranty claims, missing parts, or any other support needs, please refer to the contact information provided with your purchase or visit the official PayLessHere website.