

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [EKO](#) /

> [EKO Aroma Touchless Automatic Soap Dispenser EK6088L-MT User Manual](#)

## EKO EK6088L-MT

# EKO Aroma Touchless Automatic Soap Dispenser EK6088L-MT User Manual

Model: EK6088L-MT | Brand: EKO

## 1. INTRODUCTION

Thank you for choosing the EKO Aroma Touchless Automatic Soap Dispenser. This device provides a hygienic and convenient solution for dispensing liquid soap in your kitchen or bathroom. Designed for ease of use and durability, it features touch-free operation, adjustable dispensing volumes, and a rechargeable battery. Please read this manual thoroughly before use to ensure proper operation and maintenance.

## 2. SAFETY INFORMATION

- Use only liquid soap, hand sanitizer gel, dish soap, shampoo, or body wash. Do not use foaming soap or thick, granular, or abrasive liquids, as these may clog the dispenser.
- Do not immerse the dispenser in water or place it under running water. The device is water-resistant but not waterproof for submersion.
- Keep out of reach of children unless supervised.
- Ensure the USB charging port is completely dry before charging.
- Avoid direct sunlight or strong light exposure to the sensor, as this may affect its performance.

## 3. PACKAGE CONTENTS

Verify that all items are included in your package:

- EKO Aroma Touchless Automatic Soap Dispenser (Stainless Steel)
- USB Charging Cord
- Instruction Guide (this manual)

## 4. PRODUCT OVERVIEW

The EKO Aroma Touchless Automatic Soap Dispenser is designed for convenience and hygiene. Key features include:

- **Touch-Free Sensor:** Detects hands within 3 inches (8 cm) for quick, hygienic dispensing.
- **Adjustable Dispensing Volume:** Three settings to customize the amount of soap dispensed.
- **USB-Rechargeable:** Long-lasting battery, providing up to three months of use on a single charge.
- **Transparent Window:** Easily monitor the liquid soap level.
- **Self-Cleaning Mode:** Maintains the internal mechanism for longevity.
- **Water-Resistant Design:** Suitable for wet environments like kitchens and bathrooms.

## Components



Figure 1: Front view of the EKO Aroma Touchless Automatic Soap Dispenser, showing the dispenser nozzle, sensor, and transparent liquid level window.



## USB-rechargeable

A single full charge lasts for up to 2 months.

*Figure 2: Rear view of the dispenser, highlighting the power button and USB-C charging port.*

## 5. SETUP

### 5.1 Initial Charging

1. Locate the USB-C charging port on the back of the dispenser, covered by a rubber flap.
2. Gently open the rubber flap and connect the provided USB charging cord.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included).
4. The indicator light will show charging status (refer to the 'Light Indicator Guide' in the Operating Instructions). A full charge provides up to three months of continuous use.
5. Once fully charged, disconnect the cable and securely close the rubber flap to maintain water resistance.

## Refill Efficiently with the Air Vent Design



*Figure 3: The dispenser's USB-C charging port, located on the back, ensures convenient power replenishment.*

### 5.2 Filling the Dispenser

1. Ensure the dispenser is turned off before filling.
2. Gently press down on the top lid until it pops up. Remove the lid.
3. Pour liquid soap into the reservoir, being careful not to overfill. The transparent window allows you to monitor the liquid level.
4. Replace the lid by aligning it and pressing down firmly until it clicks into place.



Figure 4: Refilling the dispenser is made easy with its pop-up lid design.

### 5.3 Initial Priming

After filling, it may take a few activations for the soap to dispense consistently. Wave your hand under the sensor several times until soap flows out smoothly.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Power On/Off

- To turn on: Press and hold the power button (located on the back) for 2 seconds. The blue indicator light will illuminate.
- To turn off: Press and hold the power button for 2 seconds. The red indicator light will illuminate briefly, then turn off.

### 6.2 Dispensing Soap

Simply place your hand under the dispenser nozzle. The infrared sensor will detect your hand within 3 inches (8 cm) and

dispense liquid soap automatically in approximately 0.2 seconds.



Figure 5: Experience hygienic, hands-free soap dispensing with infrared sensor technology.

### 6.3 Adjusting Dispensing Volume

The dispenser offers three adjustable settings for the amount of soap dispensed:

1. With the dispenser on, briefly press the power button once. The blue light will flash once, indicating the lowest volume setting (approx. 0.8ml).
2. Press the power button again. The blue light will flash twice, indicating the medium volume setting (approx. 1.4ml).
3. Press the power button a third time. The blue light will flash three times, indicating the highest volume setting (approx. 2.0ml).

The setting will cycle back to the lowest volume after the third press.

### USB-rechargeable

A single full charge lasting 2 hours provides up to 3 months of continuous use.

**Light Indicator Guide:**

		
Blue: Power-On	No: Standby Mode	Red: Power-Off



Figure 6: Customize your soap volume with a simple touch of the power button. The blue light flashes indicate the selected volume setting.

### 6.4 Self-Cleaning Mode

To activate the self-cleaning mode:

1. Ensure the dispenser is powered on.
2. Quickly double-press the power button. The blue indicator light will flash repeatedly.
3. The dispenser will run a cleaning cycle for approximately 20 seconds, flushing out any residue.

4. After the cycle, the dispenser will automatically return to standby mode.

## Self-Cleaning Feature

Press the power button twice to activate.  
Auto-returns to standby after 20 seconds.

### Indicator Lights



**Blue:**  
**Power-On/Standby**



**Blue, Flashing:**  
**Cleaning Mode**



**Red:**  
**Power-Off**



Figure 7: Activate self-cleaning by double-pressing the power button. The blue flashing light indicates cleaning mode.

### 6.5 Light Indicator Guide


Indicator Light	Status
Blue (Solid)	Power-On / Standby
Blue (Flashing)	Cleaning Mode / Dispensing Volume Adjustment
Red (Briefly)	Power-Off
Red (Flashing)	Low Battery

## 7. MAINTENANCE

---

### 7.1 Cleaning the Exterior

Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

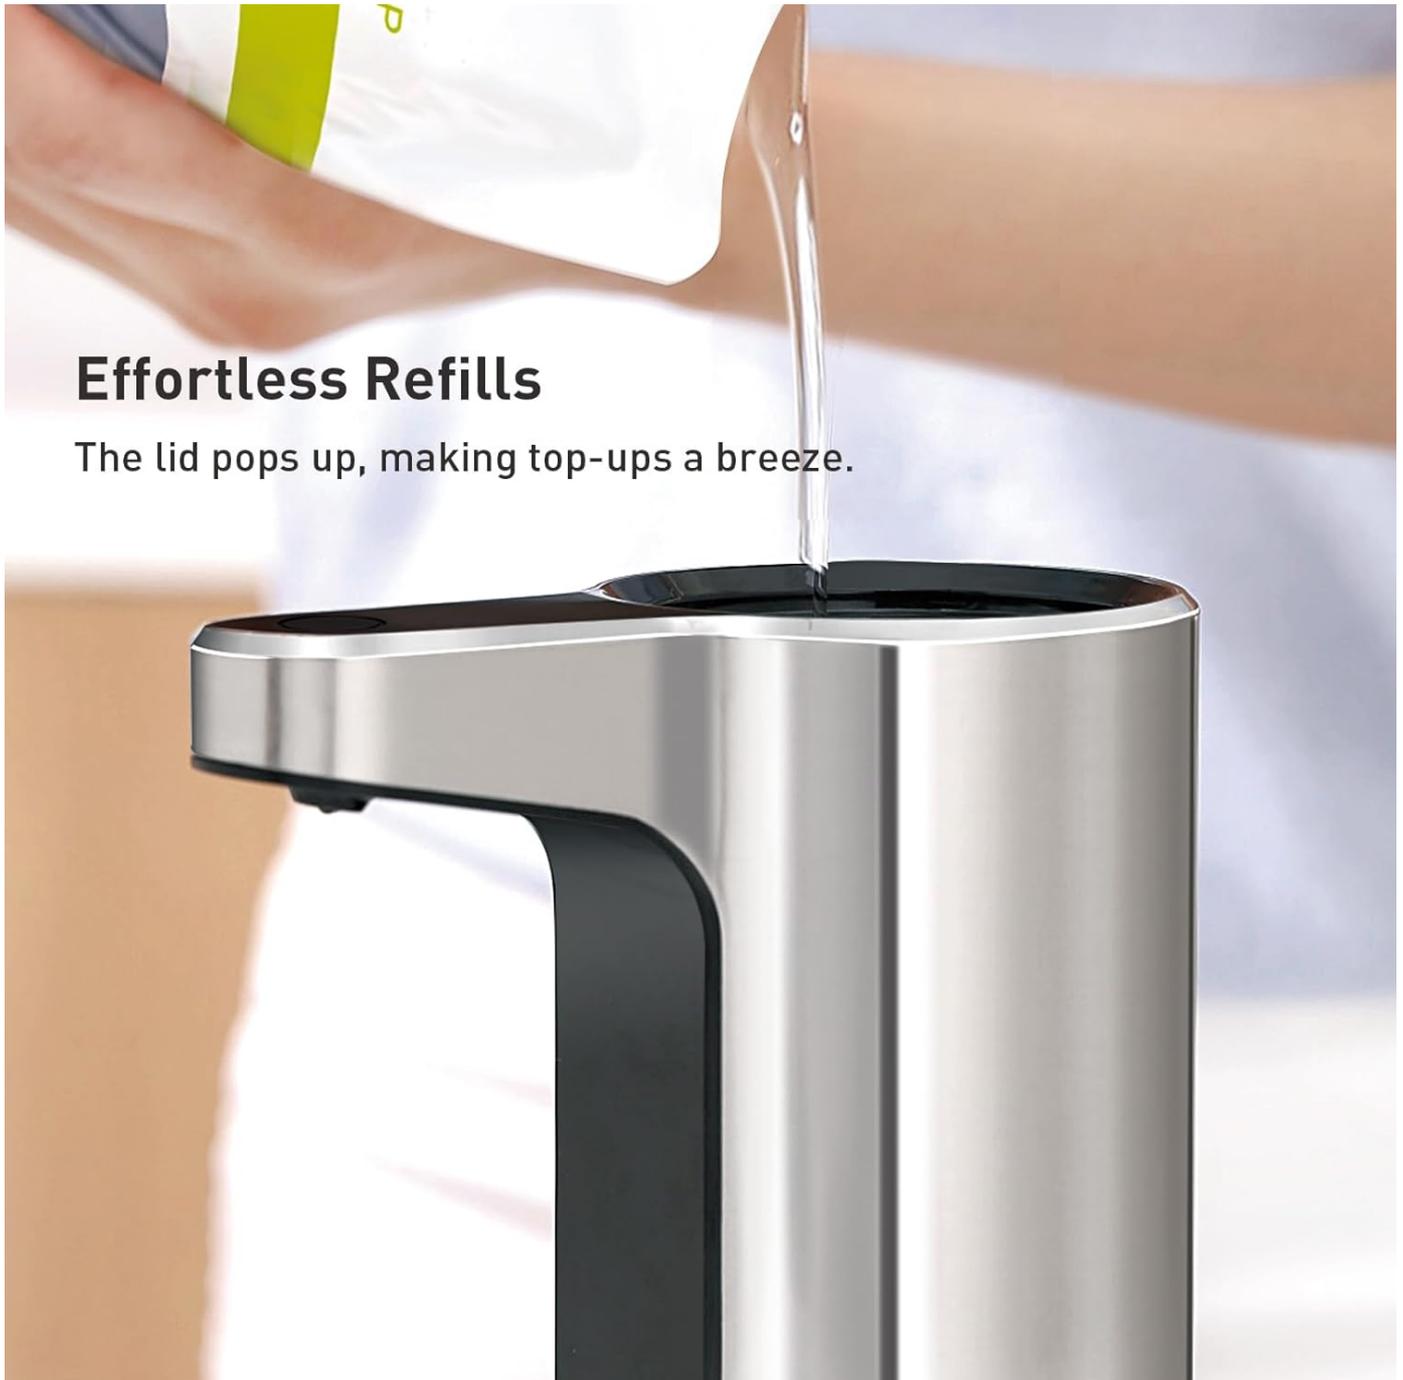

### Effortless Refills

The lid pops up, making top-ups a breeze.

*Figure 8: The enhanced water-resistant design allows for easy cleaning of the exterior.*

### 7.2 Refilling

Refer to section 5.2 for detailed instructions on refilling the dispenser. Ensure you use appropriate liquid soap types as mentioned in the safety information.

### 7.3 Self-Cleaning

Regularly use the self-cleaning mode (Section 6.4) to prevent clogs and maintain optimal performance, especially when changing soap types.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not working / No soap dispensed	Low battery Soap reservoir empty Sensor obstructed Soap too thick/clogged nozzle	Charge the dispenser Refill with liquid soap Ensure nothing is blocking the sensor Run self-cleaning mode; dilute soap if too thick or use a different type
Soap dispenses too little/too much	Dispensing volume setting incorrect	Adjust the dispensing volume (Section 6.3)
Indicator light flashing red	Low battery	Recharge the dispenser
Dispenser activates unintentionally	Sensor interference	Ensure no objects are within 3 inches of the sensor when not in use. Avoid direct strong light on the sensor.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	EK6088L-MT
Brand	EKO
Color	Stainless Steel
Material	Plastic
Liquid Volume	9 Fluid Ounces (approx. 266 ml)
Product Dimensions	4.72"L x 2.75"W x 6.89"H (12cm L x 7cm W x 17.5cm H)
Item Weight	0.634 ounces (approx. 18g)
Power Source	Rechargeable Battery (USB-C)
Sensor Range	Up to 3 inches (8 cm)
Dispensing Speed	0.2 seconds
Care Instructions	Wipe clean with a damp cloth



Figure 9: Product dimensions for the EKO Aroma Touchless Automatic Soap Dispenser.

## 10. OFFICIAL PRODUCT VIDEOS

---

### 10.1 How the Dispenser Sensor Works - Demo

Video 1: A short demonstration of the EKO Aroma Soap Dispenser's sensor in action, showing how it detects a hand and dispenses soap.

### 10.2 Aroma Smart Soap Dispenser Operation

Video 2: An overview of the EKO Aroma Smart Soap Dispenser's operational features, including dispensing and general use.

## 11. WARRANTY & SUPPORT

---

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official EKO website. Keep your purchase receipt for warranty claims.

