

[Manuals.plus](#) /

> [Maxax](#) /

> Maxax 65" 3-Light Boho Rattan Floor Lamp Instruction Manual

Maxax B09LHB673T

Maxax 65" 3-Light Boho Rattan Floor Lamp Instruction Manual

Model: B09LHB673T

Brand: Maxax

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Maxax 65" 3-Light Boho Rattan Floor Lamp. Please read this manual thoroughly before installation and use to ensure safe and efficient operation. Keep this manual for future reference.



Image: The Maxax 65" 3-Light Boho Rattan Floor Lamp, showcasing its design and height in a room.

2. WHAT'S IN THE BOX

Carefully unpack all components and check against the list below. Ensure all parts are present and undamaged before proceeding with assembly.

- Floor Lamp Base
- Lamp Pole Sections
- 3 Rattan Lampshades
- 3 Lamp Sockets (E26)
- Power Cord with Foot Switch



Image: A detailed diagram illustrating the lamp's dimensions and individual components, including the US plug, heavy-weight base, foot switch, and rattan lampshades.

3. SETUP AND ASSEMBLY

The Maxax 65" 3-Light Boho Rattan Floor Lamp features a simple structure for quick and easy assembly. No special tools are required.

1. **Assemble the Pole:** Carefully screw the lamp pole sections together, ensuring they are tightly connected.
2. **Attach to Base:** Securely attach the assembled lamp pole to the heavy-weight base.
3. **Install Lampshades:** Attach the three rattan lampshades to their respective lamp arms.
4. **Insert Bulbs:** Screw in three E26 base light bulbs (not included) into the lamp sockets. Ensure bulbs do not exceed 60 watts.
5. **Position the Lamp:** Place the lamp in your desired location, ensuring the power cord can reach an outlet without being stretched or obstructed.

For visual guidance on the lampshade, refer to the video below:

Your browser does not support the video tag.

Video: A close-up view of the cylinder woven rattan lampshade, highlighting its design and material.

4. OPERATING INSTRUCTIONS

The Maxax 65" 3-Light Boho Rattan Floor Lamp is designed for straightforward operation.

1. **Connect to Power:** Plug the power cord into a standard 110V electrical outlet.
2. **Turn On/Off:** Use the convenient foot switch located on the power cord to turn the lamp on or off. Press once to turn on, press again to turn off.

The lamp is compatible with various E26 light bulbs, including incandescent, LED, or CFL types, up to 60 watts per socket.



Image: An illustration of different E26 bulb shapes and types that can be used with the lamp.

Observe the lamp in different lighting conditions:

Your browser does not support the video tag.

Video: A demonstration of the 3-light rattan floor lamp illuminating a room.

5. SPECIFICATIONS

Feature	Detail
Brand	Maxax
Model Number	B09LHB673T
Product Dimensions	19"D x 19"W x 65"H
Item Weight	11.04 Pounds
Material Type	Metal, Rattan
Finish Type	Painted
Shade Material	Rattan
Number of Light Sources	3
Bulb Base	E26
Max Wattage per Bulb	60 Watts
Voltage	110 Volts
Switch Type	Foot Switch
Indoor/Outdoor Usage	Indoor Only

6. MAINTENANCE

To ensure the longevity and appearance of your Maxax floor lamp, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the lamp from power before cleaning. Use a soft, dry cloth to wipe down the metal frame and rattan shades. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Always ensure the lamp is unplugged and bulbs have cooled before attempting to replace them. Use only E26 base bulbs with a maximum of 60 watts.
- **Inspection:** Periodically check the power cord and plug for any signs of damage. Ensure all connections remain secure.

7. TROUBLESHOOTING

If you encounter any issues with your Maxax floor lamp, refer to the following troubleshooting tips:

- **Lamp Not Turning On:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the light bulbs are screwed in tightly and are not burnt out. Replace if necessary.
 - Verify that the foot switch is fully pressed to the 'ON' position.
- **Flickering Lights:**
 - Ensure bulbs are fully tightened.
 - Try replacing the bulbs with new ones to rule out faulty bulbs.
 - Check the power connection for looseness.

- **Unstable Lamp:**

- Ensure the lamp pole is securely screwed into the base and all pole sections are tightly connected.
- Place the lamp on a flat, stable surface. The heavy-weight base is designed for stability.

For a general overview of the lamp's appearance and functionality, please see the video below:

Your browser does not support the video tag.

Video: A comprehensive look at the Maxax Farmhouse Rattan Floor Lamp, showcasing its features and design.

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact the retailer.

If you receive the lamp with damaged, defective, or missing parts, or if you have any questions or concerns not addressed in this manual, please do not hesitate to contact our customer service team. We are committed to providing exclusive service to ensure your satisfaction.

Contact Information: Please refer to your purchase documentation or the manufacturer's website for the most current support contact details.