

## Sejoy EMK-760

# Sejoy Foot Massager Machine EMK-760 User Manual

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Sejoy Foot Massager Machine EMK-760. Retain this manual for future reference.

- Always unplug the massager from the electrical outlet immediately after use and before cleaning.
- Do not use while bathing or in a shower.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not immerse in water or other liquid.
- Never use pins or other metallic fasteners with this appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use on sensitive skin areas or where circulation is poor.
- The use of the massager should be pleasant and comfortable. Should pain or discomfort result, discontinue use and consult your physician.

## 2. PRODUCT OVERVIEW

The Sejoy Foot Massager Machine EMK-760 is designed to provide a comprehensive foot massage experience, combining shiatsu kneading, vibration, air compression, and heat functions.



Figure 1: Front view of the Sejoy Foot Massager Machine EMK-760.

## Components

- Foot massage areas with breathable fabric covers
- Integrated control panel
- Power adapter port

## Control Panel



Figure 2: Detailed view of the control panel.

The control panel features intuitive buttons for managing all massage functions:

- **Mode Button:** Toggles between massage modes (Vibration & Shiatsu, Vibration only).
- **On/Off Button:** Powers the unit on or off.
- **Heat Button:** Activates or deactivates the heat function and adjusts heat levels (Low, High, Off).
- **Air Button:** Controls air compression intensity (Low, High, Off).
- **Speed Button:** Adjusts the massage speed (Slow, Fast, Off).

### 3. SETUP

Follow these steps to set up your Sejoy Foot Massager Machine EMK-760:

1. **Unpack:** Carefully remove the massager and all accessories from the packaging.
2. **Inspect:** Check the unit and power adapter for any signs of damage. Do not use if damaged.
3. **Placement:** Place the massager on a flat, stable surface. Ensure there is enough space around the unit for comfortable use.

4. **Power Connection:** Connect the power adapter to the massager's power port, then plug the adapter into a suitable electrical outlet.



Figure 3: Contents of the Sejoy Foot Massager package.

## 4. OPERATING INSTRUCTIONS

Once the massager is set up, you can begin your massage session.

1. **Power On:** Sit comfortably and place your feet into the footrests. Press the **On/Off** button on the control panel to power on the unit. The default mode will activate.
2. **Select Mode:** Press the **Mode** button to cycle between the available massage modes:
  - Vibration & Shiatsu Kneading
  - Vibration Only
3. **Adjust Heat:** Press the **Heat** button to activate or adjust the heat level. Options typically include Low, High, or Off. The heat function provides soothing warmth to your feet.
4. **Control Air Compression:** Press the **Air** button to adjust the air compression intensity. You can select Low, High, or turn it Off. Air compression gently squeezes your feet for added relaxation.
5. **Set Speed:** Press the **Speed** button to change the massage speed. Options include Slow, Fast, or Off.

6. **Power Off:** When your massage session is complete, press the **On/Off** button again to turn off the unit. Unplug the massager from the power outlet.

# ENJOY A PROFESSIONAL MASSAGE AT HOME

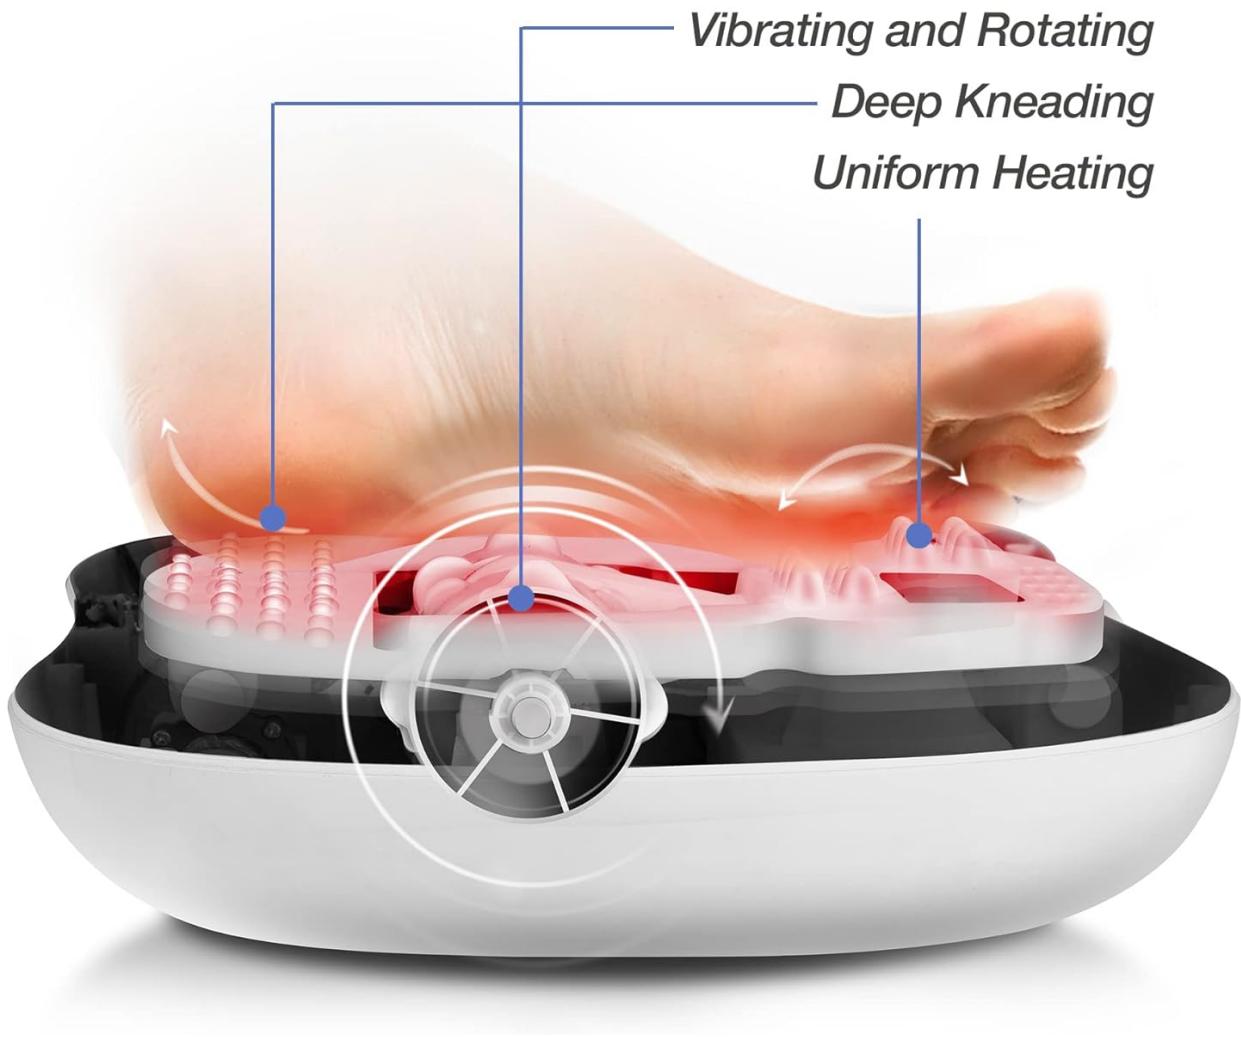


Figure 4: Illustration of the internal massage mechanisms.

Your browser does not support the video tag.

Video 1: Demonstration of the Sejoy Foot Massager's features, including heat and ease of use. This video shows a user interacting with the control panel and placing their feet into the massager.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your foot massager.

### Cleaning

- Always unplug the unit before cleaning.
- Wipe the exterior of the massager with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- The fabric foot covers are designed to be breathable and hygienic. Refer to product labeling for specific

cleaning instructions for the fabric.

- Do not immerse the massager in water or any other liquid.

## Storage

- Store the massager in a cool, dry place when not in use.
- Avoid placing heavy objects on top of the massager.
- Keep the power cord neatly coiled and avoid wrapping it tightly around the unit.

## 6. TROUBLESHOOTING

If you encounter any issues with your Sejoy Foot Massager, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Massager does not turn on.	Not plugged in correctly; Power outlet issue; Damaged power cord.	Ensure the power adapter is securely plugged into both the massager and a working electrical outlet. Test the outlet with another device. If the cord is damaged, discontinue use and contact customer support.
No heat or insufficient heat.	Heat function not activated; Low heat setting selected.	Press the Heat button to activate the heat function. Cycle through the heat settings to ensure High heat is selected if desired. Allow a few minutes for the heat to build up.
Massage feels too intense or too weak.	Incorrect speed or air compression setting; Individual sensitivity.	Adjust the Speed and Air compression settings to your preference. If the massage is still too intense, consider placing a thin towel over the footrests.
Unusual noise during operation.	Normal operating sound; Obstruction.	Some operational noise is normal for mechanical massagers. Ensure no foreign objects are obstructing the massage mechanisms. If the noise is excessive or unusual, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Sejoy customer support.

## 7. SPECIFICATIONS

- **Model:** EMK-760
- **Brand:** Sejoy
- **Product Dimensions:** 14.9 x 13.4 x 5.9 inches
- **Product Weight:** 10.54 Pounds
- **Use For:** Feet
- **Special Features:** Heat, Shiatsu Vibration, Electric Kneading, Air Compression
- **Product Benefits:** Tension relief, improved blood circulation

- **Cordless:** No (requires power adapter)
- **Manufacturer:** Sejoy
- **First Available:** February 24, 2022

## 8. WARRANTY AND SUPPORT

---

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the warranty card included with your purchase or visit the official Sejoy website. Contact details for customer service are typically provided in your product packaging.