



Manuals.plus /

› Gioteck /

› Gioteck WX-4 Wireless Premium Bluetooth Controller for Nintendo Switch User Manual

## Gioteck WX4NSW-31-MU

# Gioteck WX-4 Wireless Premium Bluetooth Controller User Manual

Model: WX4NSW-31-MU

## INTRODUCTION

---

Thank you for purchasing the Gioteck WX-4 Wireless Premium Bluetooth Controller for Nintendo Switch. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new controller. Please read this manual thoroughly before use to ensure proper functionality and to maximize your gaming experience.

## SAFETY INFORMATION

---

- Keep the controller away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the controller to strong impacts.
- Do not attempt to disassemble or modify the controller. This will void the warranty.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of small children.

## PACKAGE CONTENTS

---

Please check that all items are present:

- Gioteck WX-4 Wireless Premium Bluetooth Controller
- USB Charging Cable
- User Manual (this document)

## CONTROLLER OVERVIEW

---

Familiarize yourself with the buttons and features of your Gioteck WX-4 controller.



Figure 1: Front View of the Gioteck WX-4 Controller. Shows the layout of the analog sticks, D-pad, action buttons, and central function buttons.



Figure 2: Back View of the Gioteck WX-4 Controller. Highlights the shoulder buttons and additional programmable buttons on the underside.

### Key Components:

- **Left/Right Analog Sticks:** For precise movement and camera control.
- **D-Pad:** Directional input.
- **Action Buttons (X, Y, A, B):** Game-specific actions.
- **Shoulder Buttons (L, R, ZL, ZR):** Top and trigger buttons.
- **Home Button:** Returns to the Nintendo Switch HOME Menu.
- **Plus (+) / Minus (-) Buttons:** System and in-game menu functions.
- **Screenshot Button:** Captures screenshots.
- **Programmable Back Paddles:** Customizable buttons on the underside for advanced gameplay.
- **USB-C Port:** For charging and wired connection.

## GETTING STARTED (SETUP)

### 1. Charging the Controller

Before first use, fully charge the controller. Connect the supplied USB charging cable to the USB-C port on the controller and the other end to a USB power source (e.g., Nintendo Switch dock, USB wall adapter, or computer USB port). The LED indicators on the controller will show charging status and turn off or change color when fully charged.



Figure 3: USB-C Charging Port Location. The port is located on the top edge of the controller.

## 2. Pairing with Nintendo Switch

Follow these steps to pair your WX-4 controller with your Nintendo Switch console:

1. From the Nintendo Switch HOME Menu, select **Controllers > Change Grip/Order**.
2. On the WX-4 controller, press and hold the **Home button** and the **Y button** simultaneously for a few seconds until the LED indicators begin to flash rapidly. This indicates the controller is in pairing mode.
3. Once the controller appears on the Nintendo Switch screen, press the **L and R buttons** on the WX-4 controller as prompted by the Switch.
4. The LED indicators on the controller will stop flashing and remain solid, indicating successful pairing.
5. If pairing fails, ensure the controller is charged and repeat the steps.

## OPERATION

### Power On/Off

- **To Power On:** Press the **Home button**. The controller will attempt to connect to the last paired Nintendo Switch.
- **To Power Off:** Press and hold the **Home button** for approximately 5 seconds until the LED indicators turn off. The controller will also automatically power off after a period of inactivity.

### Basic Controls

The WX-4 controller functions similarly to official Nintendo Switch Pro Controllers. Refer to your game's instructions for specific button assignments.

### Advanced Features (Turbo Function & Programmable Paddles)

The WX-4 controller includes a turbo function and programmable back paddles for enhanced gameplay. Specific instructions for programming these features are typically found in a separate quick start guide or on the manufacturer's support website. Generally, programming involves holding a 'Program' button (often a small button on the back) and then pressing the desired button to map, followed by the back paddle.

## MAINTENANCE

---

### Cleaning

Wipe the controller with a soft, dry cloth. Do not use chemical cleaners or abrasive materials, as these may damage the surface.

### Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

## TROUBLESHOOTING

---

- **Controller not pairing:**
  - Ensure the controller is fully charged.
  - Verify the Nintendo Switch is in 'Change Grip/Order' mode.
  - Move the controller closer to the Nintendo Switch console.
  - Restart both the controller and the Nintendo Switch.
- **Input lag or disconnection:**
  - Ensure there are no strong wireless interference sources nearby (e.g., Wi-Fi routers, other Bluetooth devices).
  - Ensure the controller is within optimal range of the Nintendo Switch.
  - Check for any available firmware updates for the controller (refer to Gioteck's official website).
- **Controller not charging:**
  - Try a different USB charging cable and/or power source.
  - Ensure the USB-C cable is securely connected to both the controller and the power source.

## SPECIFICATIONS

---

<b>Model Number</b>	WX4NSW-31-MU
<b>Connectivity</b>	Bluetooth Wireless
<b>Battery Type</b>	1 Lithium-Ion Battery
<b>Product Dimensions</b>	10 x 5 x 4 cm
<b>Product Weight</b>	172 g
<b>Release Date</b>	June 1, 2019

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the official Gioteck website or contact their customer service directly. Keep your proof of purchase for warranty claims.

