

[Manuals.plus](#) /

› [boAt](#) /

› boAt PartyPal 50 Bluetooth Speaker User Manual

## boAt PartyPal 50

# boAt PartyPal 50 Bluetooth Speaker User Manual

Model: PartyPal 50

## INTRODUCTION

---

Thank you for choosing the boAt PartyPal 50 Bluetooth Speaker. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker. Please read these instructions carefully before using the product to ensure optimal performance and longevity.



Image: The boAt PartyPal 50 Bluetooth Speaker, showcasing its design and portability.

## Box CONTENTS

---

Please check the package for the following items:

- PartyPal 50 Bluetooth Speaker
- Type-C Charging Cable
- Audio Cable (AUX)
- User Manual
- Warranty Card

## PRODUCT OVERVIEW

---

### Controls

The boAt PartyPal 50 features integrated controls for easy management of playback, volume, and other functions.



Image: Detailed view of the speaker's control panel, including buttons for power, volume, mode, and playback, alongside the Type-C charging port.

## Ports and Connectivity

The speaker offers multiple connectivity options for versatile audio playback.



Image: Rear view of the boAt PartyPal 50, highlighting the USB port, DC 5V charging port, AUX input, and Reset button.

- **USB Port:** For playing music from a USB drive.
- **DC 5V (Type-C):** Charging port for the speaker.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.
- **Reset Button:** To reset the speaker to factory settings if needed.

## SETUP

---

### Charging the Speaker

1. Connect the provided Type-C charging cable to the DC 5V port on the speaker.
2. Connect the other end of the cable to a compatible USB power adapter (5V/1A recommended).
3. The charging indicator will illuminate. The speaker takes approximately 4.5 hours to fully charge.
4. Once fully charged, the indicator light will change or turn off, depending on the model. Disconnect the charging cable.

### Powering On/Off

- **To Power On:** Press and hold the Power button for a few seconds until you hear an audible prompt and the LED lights illuminate.
- **To Power Off:** Press and hold the Power button again for a few seconds until you hear an audible prompt and the LED lights turn off.

## OPERATING INSTRUCTIONS

---

### Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. The LED indicator will flash, indicating it is ready for pairing.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "PartyPal 50" from the list of devices.
4. Once paired, you will hear a confirmation tone, and the LED indicator will stop flashing.
5. You can now play audio from your device through the speaker.

### AUX Mode

1. Connect one end of the 3.5mm audio cable to the AUX input port on the speaker.
2. Connect the other end of the audio cable to the audio output jack of your external device (e.g., smartphone, MP3 player).
3. The speaker will automatically switch to AUX mode, or you may need to press the Mode button to select AUX.

### USB Mode

1. Insert a USB flash drive containing audio files into the USB port on the speaker.
2. The speaker will automatically detect the USB drive and begin playing music, or you may need to press the Mode button to select USB.

### FM Radio Mode

1. Press the Mode button to switch to FM Radio mode.
2. Press the Play/Pause button to automatically scan and save available FM stations.
3. Use the Previous/Next track buttons to navigate between saved stations.

### RGB LED Modes

The PartyPal 50 features dynamic RGB LEDs to enhance your listening experience. You can cycle through different lighting modes or turn them off.



Image: The boAt PartyPal 50 speaker with its RGB LED lights active, creating a dynamic visual effect.

- Press the dedicated LED button (if available) or a specific combination of buttons (refer to the control panel diagram) to change the RGB lighting mode.
- Continue pressing to cycle through available modes or to turn the lights off.

## Voice Assistant

Activate your device's default smart voice assistant (e.g., Google Assistant, Siri) directly from the speaker.

- Press the dedicated Voice Assistant button (often marked with a microphone icon) to activate the voice assistant on your connected smartphone.

## Call Function

When connected via Bluetooth, you can manage phone calls directly through the speaker's built-in microphone.

- **Answer Call:** Press the Play/Pause button once.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.

## MAINTENANCE

Proper care and maintenance will ensure the longevity of your boAt PartyPal 50 speaker.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, alcohol, or other chemical solvents, as these may damage the finish.
- **Water Resistance:** The speaker is IPX5 splash resistant. This means it can withstand light splashes of water, but it should not be submerged in water or exposed to heavy rain. Ensure all port covers are securely closed before exposure to moisture.

# RGB LEDs

## Set the Vibe



Image: The boAt PartyPal 50 speaker demonstrating its IPX5 splash resistance with water droplets around it.

- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, charge the speaker fully before long periods of inactivity and recharge it at least once every three months.

## TROUBLESHOOTING

If you encounter any issues with your PartyPal 50 speaker, refer to the following common problems and solutions:

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source using the Type-C cable.
Cannot pair via Bluetooth.	Ensure the speaker is in Bluetooth pairing mode. Turn off and on Bluetooth on your device. Move closer to the speaker. Clear previous Bluetooth connections on your device.
No sound from the speaker.	Check volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB) is selected.
FM radio reception is poor.	Try repositioning the speaker. In some cases, connecting the AUX cable can act as an external antenna to improve reception.
Speaker is unresponsive.	Use a thin object (like a paperclip) to press the Reset button located near the ports. This will restart the speaker.

## SPECIFICATIONS

Key technical specifications for the boAt PartyPal 50 speaker:

Feature	Detail
Brand	boAt
Model Name	PartyPal 50
Speaker Maximum Output Power	20 Watts RMS
Connectivity Technology	Auxiliary, Bluetooth v5.1, USB, FM
Audio Output Mode	Stereo
Water Resistance Level	IPX5 (Splash Resistant)
Control Method	Integrated Controls, Voice Assistant
Battery Average Life	Up to 4.5 Hours
Battery Charge Time	4.5 Hours
Power Source	Battery Powered (1 Lithium Polymer battery included)
Item Dimensions (D x W x H)	18D x 36W x 14H Centimeters
Item Weight	2500 Grams
Compatible Devices	Smartphone, Tablet

## WARRANTY AND SUPPORT

### Warranty Information

The boAt PartyPal 50 comes with a **1-year warranty** from the date of purchase. Please retain your purchase receipt and the warranty card for any warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### Customer Support

For any queries, assistance, or warranty claims, please contact boAt customer support:

- **Manufacturer:** Imagine Marketing Ltd.
- **Contact Information:** Unit no. 204 & 205, 2nd floor, D-wing & E-wing, Corporate Avenue, Andheri Ghatkopar Link Road, Mumbai, Maharashtra-400093, India.
- Please refer to the warranty card or the official boAt website for the most up-to-date contact details and support options.

