

Livoo DOD162N

Livoo DOD162N Two-Slot Toaster Instruction Manual

Model: DOD162N

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

PRODUCT OVERVIEW

The Livoo DOD162N is a two-slot toaster designed for daily use. It features an adjustable thermostat with 7 browning levels, functions for reheating and defrosting, and a manual stop button for precise control. The automatic ejection system

ensures toast is easily retrieved, and a removable crumb tray simplifies cleaning.



Figure 1: Front view of the Livoo DOD162N toaster. This image displays the toaster's main body, the two toasting slots, and the control panel which includes the browning control dial, and buttons for defrost, reheat, and cancel functions.



Figure 2: Top view of the Livoo DOD162N toaster. This image highlights the two wide slots designed to accommodate various bread types, along with the internal heating elements.

SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before toasting bread for consumption, operate the toaster empty on the highest setting (7) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard electrical outlet. Ensure the voltage matches the specifications of the toaster.

OPERATING INSTRUCTIONS

1. **Insert Bread:** Place one slice of bread into each toasting slot. Ensure the bread is not too thick or irregularly shaped, as this may cause jamming.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 7 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust according to preference.
3. **Start Toasting:** Press the carriage lever down until it locks into place. The toaster will begin toasting, and the indicator light (if present) will illuminate.
4. **Manual Stop:** To stop the toasting cycle at any time, press the "Cancel" button (often indicated by a stop symbol or 'STOP'). The carriage will automatically lift.
5. **Defrost Function:** For frozen bread, insert the bread, press the carriage lever down, then press the "Defrost" button (often indicated by a snowflake symbol). The toaster will automatically adjust the toasting time.
6. **Reheat Function:** To warm up already toasted bread without further browning, insert the bread, press the carriage

lever down, then press the "Reheat" button (often indicated by a sun symbol).

- 7. **Automatic Ejection:** Once the toasting cycle is complete, the toast will automatically eject and the carriage will lift.
- 8. **Remove Toast:** Carefully remove the toast from the slots. Use tongs if necessary, but avoid metal utensils.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

- 1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- 2. **Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Empty crumbs into a waste bin. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
- 3. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- 4. **Interior Cleaning:** Never insert objects into the toasting slots to clean them. If food becomes lodged, unplug the toaster, turn it upside down, and gently shake to dislodge.
- 5. **Storage:** When not in use, store the toaster in a clean, dry place. You can wrap the power cord around the cord storage area (if available) at the bottom of the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; faulty cord/plug.	Ensure plug is fully inserted. Test outlet with another appliance. Do not use if cord/plug is damaged; contact customer support.
Bread does not toast evenly.	Uneven bread thickness; crumb buildup; heating element issue.	Use uniformly sliced bread. Clean crumb tray. If problem persists, contact customer support.
Carriage lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure toaster is plugged into a live outlet. If still not working, contact customer support.
Smoke or burning smell.	Crumb buildup; food lodged in slots; first use residue.	Unplug immediately. Clean crumb tray. Remove any lodged food (after cooling). First use smoke is normal.

SPECIFICATIONS

- **Model:** DOD162N
- **Brand:** Livoo (Manufactured by Gef-roy)
- **Power:** 750W
- **Slots:** Two wide slots
- **Browning Levels:** 7 adjustable settings
- **Functions:** Defrost, Reheat, Manual Stop
- **Features:** Automatic ejection, Removable crumb tray
- **Color:** Black

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your purchase or contact the retailer. For technical support or service inquiries, please contact Gef-roy customer service through their official website or the contact information provided in your product documentation. Please have your model number (DOD162N) and proof of purchase ready when contacting support.

© 2023 Livoo / Gef-roy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question