

Comfort Zone CZ799BK

Comfort Zone CZ799BK Electric Portable Utility Space Heater Instruction Manual

Model: CZ799BK

INTRODUCTION

This manual provides important instructions for the safe operation, installation, maintenance, and troubleshooting of your Comfort Zone CZ799BK Electric Portable Utility Space Heater. Please read this manual thoroughly before using the product and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read and understand all instructions before using this heater.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped, or damaged in any manner.
- Do not use outdoors. This heater is intended for indoor use only.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- This heater includes an automatic tip-over switch that shuts off the heater if it is accidentally knocked over.

- An overheat protection sensor is in place to safeguard against excessive heating, automatically shutting off the unit if it reaches an unsafe temperature.

PRODUCT FEATURES

Adjustable Thermostat

Allows precise temperature control to maintain your desired comfort level.



Image: Close-up of the heater's adjustable thermostat dial, ranging from low to high settings.

Multiple Heat Settings

Choose between 1500W (High), 1300W (Low), or Fan-Only mode for versatile use.



Image: Close-up of the heater's power mode selector dial, showing options for 1500W, 1300W, Fan, and Off.

Safety Features

Equipped with a tip-over switch and overheat protection for enhanced safety.



Image: Icon representing the automatic shut-off feature when the heater tilts or tips over.

Portable Design

Features a sturdy all-metal housing and an oversized carry handle for easy transport.



Image: Close-up of the heater's cool-touch metal carry handle, designed for easy portability.



Image: The Comfort Zone CZ799BK Electric Portable Utility Space Heater, showing heat emanating from the front grille.

SETUP AND PLACEMENT

1. Remove the heater from its packaging. Ensure all packing materials are removed.
2. Place the heater on a firm, level surface. Avoid placing it on soft surfaces like rugs or carpets that could block air vents.
3. Ensure the heater is at least 3 feet (0.9 meters) away from walls, furniture, curtains, and other combustible materials.
4. Plug the heater directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.

Ideal for Garages and Sheds

Sturdy design with instant heat



Image: The Comfort Zone CZ799BK heater positioned on a workbench in a garage setting, demonstrating appropriate placement.

OPERATING INSTRUCTIONS

Control Panel Overview

Onboard Controls with Power Indicator Light



Image: A detailed view of the heater's control panel, highlighting the power/mode selector and the adjustable thermostat dial, along with Power and Caution indicator lights.

1. **Power On/Mode Selection:** Turn the upper rotary switch to select your desired mode:

- **OFF:** Turns the heater off.
- **FAN:** Activates the fan without heat, circulating air.
- **1300W:** Provides low heat output.
- **1500W:** Provides high heat output.

When the heater is on, the yellow "POWER" indicator light will illuminate.

2. **Adjusting Thermostat:** Turn the lower rotary switch (thermostat dial) to set the desired temperature.

- Turn the dial towards "HIGH" for warmer temperatures.
- Turn the dial towards "LOW" for cooler temperatures.

The heater will cycle on and off to maintain the set temperature. For continuous heat, set the thermostat to its highest setting.

3. **Safety Indicator:** The red "CAUTION" indicator light illuminates if an overheat condition is detected or if the tip-over switch is activated. The heater will automatically shut off in these situations.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. Ensure no water enters the interior of the heater.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to remove dust from the grilles and vents.
- **Storage:** When not in use, store the heater in a cool, dry location. It is recommended to store it in its original packaging to protect it from dust and damage.
- **Cord Care:** Inspect the power cord regularly for any signs of damage. Do not use the heater if the cord is frayed or damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in securely. Power switch is OFF. Circuit breaker tripped. Tip-over switch activated. Overheat protection activated.	Ensure plug is fully inserted into a working outlet. Turn the mode selector to 1300W or 1500W. Check your home's circuit breaker and reset if necessary. Place the heater on a firm, level surface. Unplug, wait 10 minutes for cooling, then plug back in.
Heater produces insufficient heat.	Thermostat set too low. Room size too large for heater. Air vents blocked.	Increase the thermostat setting. Ensure the heater is used in an appropriately sized room (up to 300 sq. ft.). Check and clear any obstructions from air intake and exhaust vents.
Heater cycles on and off frequently.	Thermostat setting reached. Overheat protection activated.	This is normal operation as the heater maintains the set temperature. Check for blocked vents or improper placement. Unplug, cool, and restart.

SPECIFICATIONS

Model Number	CZ799BK
Brand	Comfort Zone
Power Settings	1500W (High), 1300W (Low), Fan-Only
Voltage	120V AC
Amperage	12.5 Amps
Heating Coverage	Up to 300 sq. ft.

Dimensions (D x W x H)	10.24" x 7.09" x 15.08"
Weight	4.59 pounds
Special Features	Adjustable Thermostat, Overheat Protection, Tip-Over Switch, Cool Touch Exterior
Indoor/Outdoor Use	Indoor Use Only

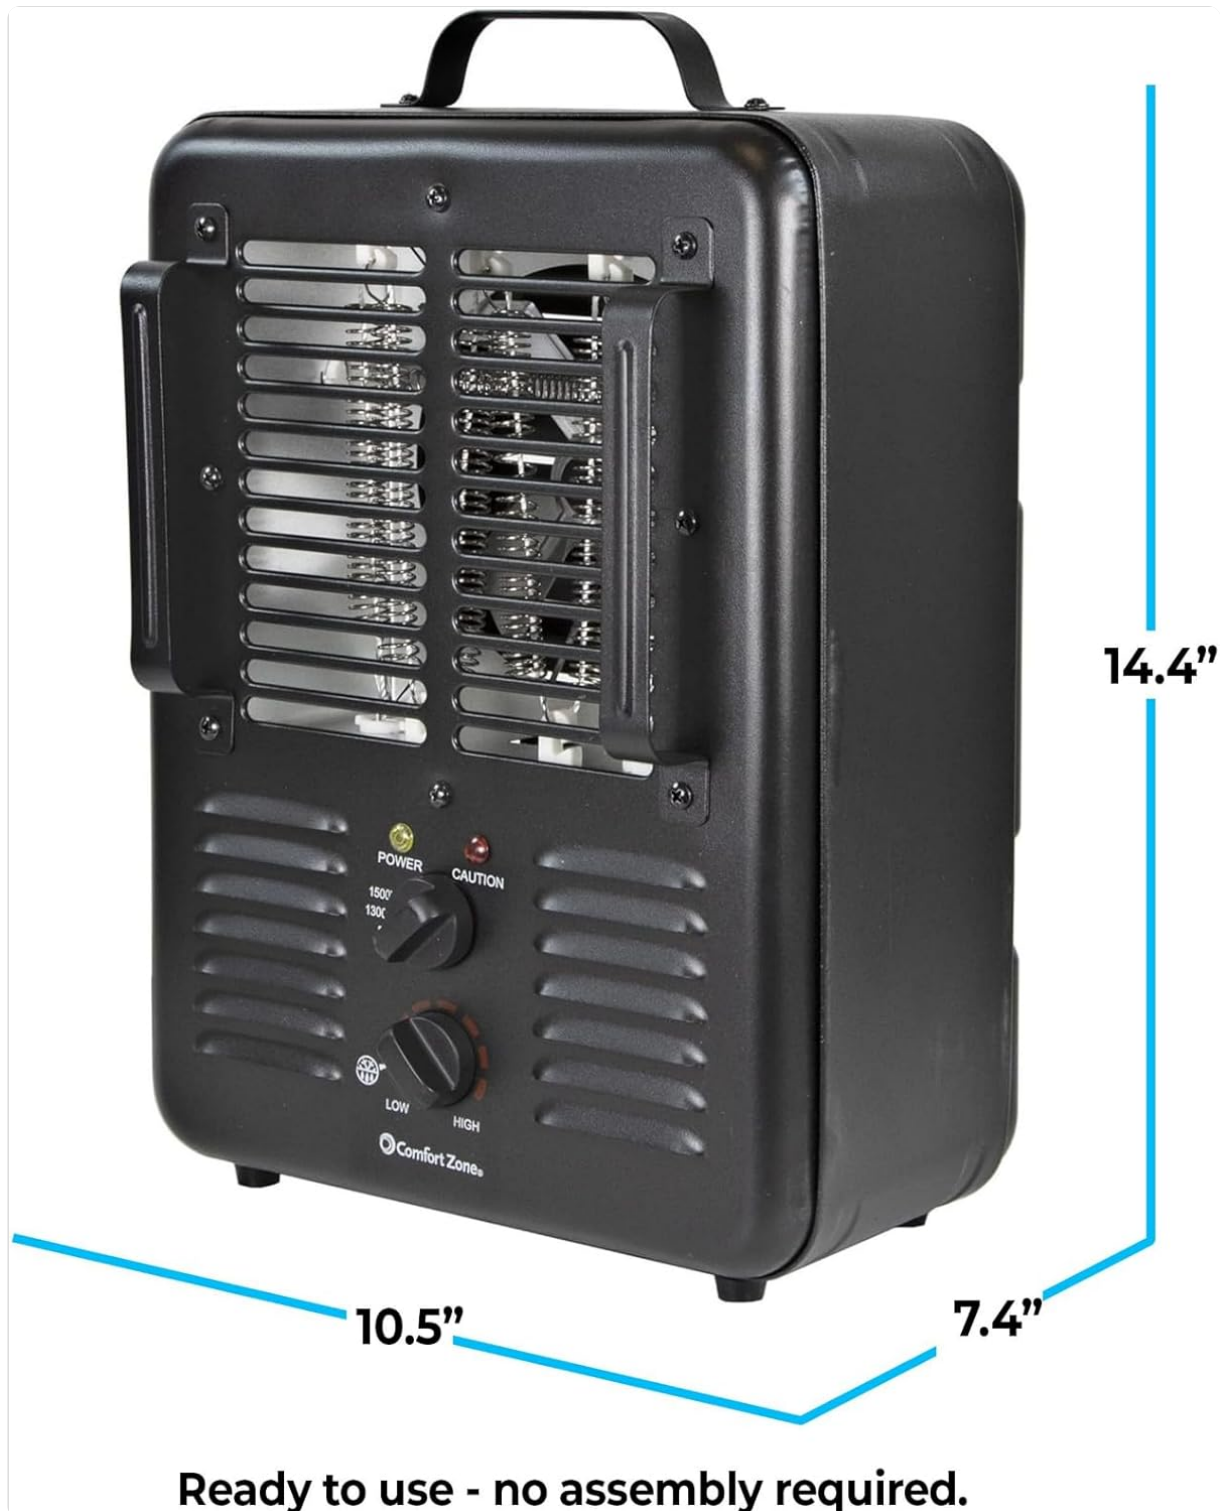


Image: Diagram illustrating the dimensions of the Comfort Zone CZ799BK heater: 10.5 inches wide, 14.4 inches high, and 7.4 inches deep.

WARRANTY AND SUPPORT

This Comfort Zone CZ799BK Electric Portable Utility Space Heater comes with a **1 Year Warranty Against Manufacturer Defects**.

For warranty claims, technical support, or customer service inquiries, please refer to the contact information provided on the product packaging or the official Comfort Zone website.