



Manuals.plus /

- › PUR /
- › PUR Plus 7-Cup Water Filter Pitcher Instruction Manual PPT711WAMA

PUR PPT711WAMA

PUR Plus 7-Cup Water Filter Pitcher Instruction Manual

Model: PPT711WAMA | Brand: PUR

1. PRODUCT OVERVIEW

The PUR Plus 7-Cup Water Filter Pitcher (Model PPT711WAMA) is designed to provide cleaner, great-tasting water by reducing various contaminants. This pitcher features a 7-cup capacity, a slim design for easy refrigerator storage, and a convenient filter change light indicator. It utilizes a powerful 3-in-1 filtration system, certified to reduce lead and microplastics, and improve water taste by reducing chlorine.



Image: The PUR Plus 7-Cup Water Filter Pitcher, showcasing its design and filter system.

2. SETUP INSTRUCTIONS

1. **Prepare the Filter:** Remove the PUR Plus filter from its packaging. Submerge the filter in cold water for 15 minutes to prime it. This helps remove air bubbles and prepares the filter for optimal performance.
2. **Wash the Pitcher:** Wash the pitcher, lid, and filter housing with mild soap and water. Rinse thoroughly. The pitcher is dishwasher safe (top rack only).
3. **Insert the Filter:** Insert the prepared filter into the filter housing. Twist it clockwise to lock it securely in place.
4. **Assemble the Pitcher:** Place the filter housing with the installed filter into the pitcher. Secure the lid onto the pitcher.
5. **Initial Flush:** Fill the pitcher with tap water. Discard the first two pitchers of filtered water. This flushes out any carbon dust from the filter.

Taste the PUR[®] Difference

PLUS



Image: Key features of the PUR Plus Water Filter Pitcher.

Setup Video Guide

Your browser does not support the video tag.

Video: An overview of PUR Plus Pitchers, Dispensers, and Filters, demonstrating setup and features.

3. OPERATING INSTRUCTIONS

- Filling the Pitcher:** Open the small lid on the top of the pitcher. Place the pitcher under a cold water tap and fill the upper reservoir with water. The water will slowly filter through to the main pitcher chamber.
- Filter Change Indicator:** The pitcher is equipped with a filter gauge light on the lid. Press the button to check the filter status:
 - **Green Light:** Filter is working optimally.
 - **Yellow Light:** Filter needs to be replaced soon.
 - **Red Light:** Filter needs to be replaced immediately.

3. **Pouring Water:** The LockFit cap design allows you to pour water while the remaining water in the reservoir is still filtering, minimizing spills.

NEVER MISS A FILTER CHANGE

With PUR's **filter change light indicator**



Image: The filter change light indicator on the PUR Plus pitcher lid.

4. MAINTENANCE

1. **Cleaning:** The pitcher, lid, and filter housing are dishwasher safe (top rack recommended). For manual cleaning, use mild soap and water. Ensure the filter change indicator mechanism on the lid does not get wet during washing.
2. **Filter Replacement:** Replace the PUR Plus filter every 40 gallons or approximately every 2 months, whichever comes first. Always use genuine PUR filters for certified performance. Look for the "PUR Genuine Filter" seal.
3. **Resetting the Filter Indicator:** After replacing the filter, press and hold the filter gauge button for 5 seconds to reset the indicator. The light will turn green.

DISHWASHER SAFE



Image: The PUR Plus pitcher is dishwasher safe for easy cleaning.

Be cautious of look-alikes



Only PUR Plus filters are certified to reduce chemical & physical substances when used with PUR Pitchers



Image: Always use genuine PUR filters for optimal performance.

5. TROUBLESHOOTING

- **Slow Filtration:** If water filters slowly, ensure the filter was properly primed by soaking it in cold water for 15 minutes before first use. Air bubbles can sometimes impede flow; try gently shaking the pitcher to dislodge them. If the filter is old, it may be clogged and require replacement.
- **Filter Indicator Not Working:** Ensure the battery in the lid's indicator is functional. If the light does not respond after pressing the button, the battery may need replacement (refer to specific instructions for battery access, if applicable, or contact support).
- **Unusual Water Taste:** If the filtered water has an unusual taste, ensure the filter was properly flushed by discarding the first two pitchers of filtered water. If the taste persists, the filter may be expired or faulty and should be replaced.

6. SPECIFICATIONS

- **Brand:** PUR

- **Model Name:** PUR PLUS 7 Cup Water Pitcher Filtration System
- **Model Number:** PPT711WAMA
- **Capacity:** 7 Cups (approximately 3.5 Pounds)
- **Product Dimensions:** 11.3"L x 11.3"W x 10.9"H
- **Material:** Plastic
- **Special Feature:** Change Filter Indicator
- **Purification Method:** Activated Carbon, Ion Exchange
- **Filter Life:** Up to 40 gallons or 2 months
- **Included Components:** 1 PUR Plus Pitcher filter (PPF951K)



Image: Dimensions of the PUR Plus 7-Cup Water Filter Pitcher.

7. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For detailed warranty information, please refer to the documentation included with your product or visit the official PUR website. For further assistance, troubleshooting, or to purchase genuine replacement filters, please visit the PUR Store on Amazon.

