

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BRONDI](#) /

› [BRONDI Bravo Star Cordless Phone User Manual](#)

BRONDI TRE-53098

BRONDI Bravo Star Cordless Phone User Manual

Model: TRE-53098

PRODUCT OVERVIEW

The BRONDI Bravo Star is a user-friendly cordless DECT phone designed for clear communication. It features a large, orange backlit LCD screen, a keypad with large buttons, and high volume settings for both ringtones and listening. This manual provides essential information for setting up, operating, and maintaining your phone.



This image displays the BRONDI Bravo Star cordless phone handset placed on its charging base. The phone features a black casing, an orange backlit LCD screen, and large, clearly labeled buttons. The base is also black with the BRONDI logo visible.

SETUP

1. Unpacking and Battery Installation

Carefully remove all components from the packaging. The package should include the handset, base unit, power adapter, telephone line cord, and 2 AAA rechargeable batteries.

1. Open the battery compartment cover on the back of the handset.
2. Insert the 2 AAA rechargeable batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover.

2. Connecting the Base Unit

1. Connect the power adapter to the base unit and plug it into a wall outlet.
2. Connect one end of the telephone line cord to the base unit and the other end to your telephone wall jack.

3. Initial Charging

Place the handset on the base unit. The handset will begin charging. For optimal battery performance, allow the handset to charge continuously for at least 12-15 hours before its first use, even if the display indicates a full charge sooner.

OPERATING INSTRUCTIONS

Making and Receiving Calls

- **To Make a Call:** Press the green call button, then dial the number using the large keypad.
- **To Receive a Call:** When the phone rings, press the green call button to answer.
- **To End a Call:** Press the red end call button or place the handset back on the base unit.

Phonebook

The phonebook can store up to 50 entries. Refer to the on-screen menu for adding, editing, and deleting contacts.

Caller ID and Call History

The phone supports Caller ID, displaying the caller's number if available. You can review a list of the last 30 received calls and the last 10 dialed calls through the menu options.

Ringtones and Volume

Choose from 5 polyphonic and 5 standard ringtones. The phone offers high volume settings for both ringtones and earpiece listening. Adjust volume using the navigation buttons during a call or through the settings menu.

Alarm Function

Set an alarm with a snooze function through the phone's menu. This feature allows for a temporary pause of the alarm before it sounds again.

Boost Button

The Boost button provides amplified listening and tone control during a call, enhancing audio clarity for users who may require it.

MAINTENANCE

Cleaning

Wipe the handset and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the surfaces.

Battery Care

- Use only the specified rechargeable AAA batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

General Handling

Avoid exposing the phone to extreme temperatures, direct sunlight, or moisture. Do not drop the phone or subject it to strong impacts.

TROUBLESHOOTING

• No Dial Tone:

Ensure the power adapter is securely plugged into the base unit and the wall outlet. Check that the telephone line cord is properly connected to both the base unit and the wall jack.

• Cannot Make or Receive Calls:

Verify that the handset is charged. Check the telephone line connection. If using a shared line, ensure no other phone is off-hook.

• Display Issues:

If the display is blank or unreadable, ensure the batteries are correctly installed and charged. Try resetting the phone by removing the batteries for a few minutes and then reinserting them.

• Battery Not Charging:

Ensure the handset is correctly placed on the charging base. Check that the charging contacts on both the handset and base are clean and free of debris. Verify the power adapter is connected.

• Poor Sound Quality:

Move closer to the base unit to improve signal strength. Check for interference from other electronic devices.

SPECIFICATIONS

Brand	BRONDI
Model Number	TRE-53098
Color	Bravo Star Noir
Dimensions (L x W x H)	17 x 2.6 x 5 cm
Weight	210 g
Material	Acrylonitrile Butadiene Styrene (ABS)

Display Size	1.6 inches
Batteries	2 AAA (included)
Features	Eco DECT, Boost button for amplified listening and tone control, Large keys, Caller ID (30 received calls), Redial (10 dialed numbers), 50 phonebook memories, 5 polyphonic + 5 standard ringtones, Alarm with snooze function.

WARRANTY AND SUPPORT

Warranty information for your BRONDI Bravo Star Cordless Phone is typically provided with your purchase documentation or can be found on the official BRONDI website. Please retain your proof of purchase for warranty claims.

For technical support or further assistance, please visit the official BRONDI support website or contact their customer service. Contact details are usually available on the manufacturer's website or in the product packaging.