



Manuals.plus /

› BOSCH /

› EasyGrassCut 18V-230 EU Cordless Grass Trimmer User Manual

**BOSCH 06008C1A03**

# Bosch EasyGrassCut 18V-230 EU Cordless Grass Trimmer

User Manual

## 1. INTRODUCTION

---

The Bosch EasyGrassCut 18V-230 is a lightweight and well-balanced cordless grass trimmer designed for efficient and easy trimming in small to medium-sized gardens. It is ideal for reaching narrow spaces and corners that conventional lawn mowers cannot access. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new grass trimmer.



Figure 1: Bosch EasyGrassCut 18V-230 EU Cordless Grass Trimmer. This image shows the complete grass trimmer with its main handle, auxiliary handle, shaft, and cutting head with guard.

## 2. IMPORTANT SAFETY INFORMATION

**Attention: During operation of the device, flying parts may appear. Always wear protective glasses and gloves. Follow the instructions for safe handling of batteries and charging stations.**

- Always read and understand all safety warnings and instructions before operating the tool.
- Keep hands and feet away from the cutting line.
- Do not operate the trimmer in wet conditions.
- Ensure the battery is fully charged before use.
- Store the tool in a dry, secure place out of reach of children.

## 3. PACKAGE CONTENTS

Carefully unpack your Bosch EasyGrassCut 18V-230 and verify that all components are present and undamaged. The package should contain:

- 1 x EasyGrassCut 18V-230 Cordless Grass Trimmer
- 1 x PBA 18V 2.0Ah W-B Battery
- 1 x AL 1810 HP Charger
- User Manual (this document)





Figure 2: The product packaging for the Bosch EasyGrassCut 18V-230 EU. The box displays the product, brand, and key features.

## 4. SETUP

### 4.1. Charging the Battery

1. Connect the AL 1810 HP Charger to a suitable power outlet.
2. Insert the PBA 18V 2.0Ah W-B Battery into the charger. The charging indicator light will illuminate.
3. Allow the battery to charge fully. The indicator light will change or turn off when charging is complete.

### 4.2. Installing the Battery

1. Ensure the trimmer is switched off.
2. Align the charged battery with the battery slot on the trimmer handle.
3. Slide the battery firmly into place until it clicks, indicating it is securely locked.



Figure 3: Close-up view of a hand holding the handle of the Bosch EasyGrassCut 18V-230, with the battery inserted. This illustrates the battery placement and the main power button.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Basic Operation

1. Ensure the battery is installed and fully charged.
2. Hold the trimmer firmly with both hands, ensuring a comfortable and balanced grip.
3. Press the safety lock-off button (if present) and then squeeze the trigger to start the trimmer.
4. Release the trigger to stop the trimmer.



Figure 4: A woman operating the Bosch EasyGrassCut 18V-230 in a garden, demonstrating typical use for trimming grass around plants.

## 5.2. Switching Between Horizontal and Vertical Cutting

The EasyGrassCut 18V-230 allows for easy switching between horizontal trimming and vertical edging functions. To switch:

1. Ensure the trimmer is switched off.
2. Locate the button near the handle that allows for rotation.
3. Press the button and rotate the handle to change the orientation of the cutting head from horizontal to vertical, or vice versa.
4. Release the button to lock the handle in the desired position.



Figure 5: A woman demonstrating how to adjust the handle of the Bosch EasyGrassCut 18V-230 to switch between horizontal trimming and vertical edging modes.

### **5.3. Semi-Automatic Line Feed**

The trimmer features a semi-automatic line feed system. With each press of the trigger, the cutting line is automatically advanced, ensuring continuous work without interruptions. This eliminates the need for manual line adjustments during operation.



Figure 6: The Bosch EasyGrassCut 18V-230 being used to edge grass along a paved pathway, showcasing its precision in vertical cutting mode.

## 6. MAINTENANCE

---

### 6.1. Cleaning the Trimmer

After each use, ensure the trimmer is switched off and the battery is removed. Use a soft brush or cloth to clean the cutting head, guard, and housing. Remove any grass clippings or debris that may have accumulated. Do not use water or cleaning solvents directly on electrical components.



Figure 7: A close-up view of the cutting head of the Bosch EasyGrassCut 18V-230, showing the line and protective guard. This area requires regular cleaning.

## 6.2. Battery Care

- Always charge the battery in a well-ventilated area.
- Do not expose the battery to extreme temperatures or direct sunlight.
- If the trimmer will not be used for an extended period, store the battery partially charged in a cool, dry place.

## 6.3. Line Replacement

When the cutting line becomes too short or breaks, it will need to be replaced. Refer to the specific instructions provided with your replacement line spool for detailed steps. Always use genuine Bosch replacement parts to ensure optimal performance and safety.

## 7. TROUBLESHOOTING

If you encounter issues with your Bosch EasyGrassCut 18V-230, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged or improperly installed	Charge battery fully; ensure battery is clicked into place
Cutting line does not advance	Line tangled or spool empty	Clear any tangles; replace line spool if empty
Reduced cutting performance	Dull or short cutting line; debris in cutting head	Replace cutting line; clean cutting head thoroughly

If the problem persists after attempting these solutions, please contact Bosch customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	BOSCH
Model Number	06008C1A03
Power Source	Battery Powered
Battery Voltage	18 V
Battery Capacity	2.0 Ah
Cutting Circle Diameter	23 cm (9 inches)
Item Weight	2.1 kg (4.62 pounds) with 2.0 Ah battery
Product Dimensions	0.39"L x 0.39"W (Note: These dimensions seem to be placeholders and may not reflect actual product size)
Assembly Required	No

## 9. WARRANTY AND SUPPORT

### 9.1. Warranty Information

Bosch provides a 5-year EU Spare Part Availability Duration for this product. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Bosch website.

### 9.2. Customer Support

For technical assistance, spare parts, or any questions regarding your Bosch EasyGrassCut 18V-230, please contact Bosch customer support. You can find contact information on the official Bosch website or by visiting the Bosch Store on Amazon.