

Manuals.plus /

› Bosch /

› Bosch AdvancedHedgeCut 70 Electric Hedge Trimmer User Manual

Bosch AdvancedHedgeCut 70

Bosch AdvancedHedgeCut 70 Electric Hedge Trimmer User Manual

Model: AdvancedHedgeCut 70 (06008C0903)

1. INTRODUCTION

Thank you for choosing the Bosch AdvancedHedgeCut 70 electric hedge trimmer. This powerful and ergonomically designed tool is engineered for efficient and comfortable trimming of large hedges. Featuring Pro-Silence technology, it significantly reduces noise levels during operation. The 500 W Eco motor ensures high cutting performance, while the 70 cm blade length and 34 mm cutting capacity are ideal for dense foliage.

This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your hedge trimmer. Please read it thoroughly before first use and keep it for future reference.

2. GENERAL SAFETY INSTRUCTIONS

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, hearing protection, gloves, and sturdy footwear.
- Keep children and bystanders away while operating the hedge trimmer.
- Inspect the hedge trimmer for damage before each use. Do not use if damaged.
- Ensure the power cord is in good condition and positioned to avoid being cut by the blades.
- Never operate the hedge trimmer in wet conditions or rain.
- Disconnect the power supply before cleaning, maintenance, or when leaving the tool unattended.
- Hold the hedge trimmer firmly with both hands during operation.
- Avoid cutting near electrical cables or other hidden objects.
- Do not overreach. Maintain proper footing and balance at all times.
- Store the hedge trimmer in a dry, secure place, out of reach of children.

3. PRODUCT OVERVIEW

The Bosch AdvancedHedgeCut 70 is designed for comfortable and efficient hedge trimming. Key components include:

- **Blade:** 70 cm laser-cut, diamond-ground blades for precise cutting.
- **Blade Guard:** Protective cover for the blade when not in use.
- **Multi-Position Handle:** Ergonomic handle for comfortable operation at various angles.
- **Pro-Silence Motor:** 500 W motor with reduced noise output.
- **Hand Guard:** Transparent hand guard for clear visibility of the cutting area.
- **Power Cable:** Integrated power cable for mains connection.



Figure 3.1: A woman operating the Bosch AdvancedHedgeCut 70 hedge trimmer, demonstrating its ProSilence technology. A man is relaxing nearby, undisturbed by the low noise level.



Figure 3.2: A close-up view of the precision-ground blades of the AdvancedHedgeCut 70, highlighting their sharpness and cutting efficiency.



Figure 3.3: Detail of the ergonomic multi-position handle on the AdvancedHedgeCut 70, designed for comfortable use at various angles.

4. SETUP

1. **Unpacking:** Carefully remove the hedge trimmer and all accessories from the packaging. Ensure all components listed in the "Components Included" section are present.
2. **Blade Guard Removal:** Before use, remove the blade guard from the cutting blade. Always reattach the blade guard when the tool is not in use or during transport.

3. **Power Connection:** Connect the hedge trimmer's power cable to a suitable outdoor extension cord. Ensure the extension cord is rated for outdoor use and is in good condition. Use a cable retainer if available on the extension cord to prevent accidental disconnection.
4. **Pre-Operation Check:** Before starting, visually inspect the blades for any damage or debris. Ensure all handles are securely fastened.

5. OPERATING INSTRUCTIONS

5.1 Starting and Stopping

- To start the hedge trimmer, press and hold both safety switches (one on the front handle, one on the rear handle) simultaneously.
- To stop the hedge trimmer, release either safety switch. The blades will stop quickly.

5.2 Trimming Techniques

For best results and safety, follow these guidelines:

- **Holding the Tool:** Always hold the hedge trimmer firmly with both hands. The multi-position handle allows for comfortable grip at various angles, reducing fatigue during extended use.
- **Cutting Motion:** Use a sweeping motion, moving the blades along the hedge. For horizontal cuts, tilt the blade slightly (5-10 degrees) towards the hedge to ensure a clean cut.
- **Vertical Cuts:** When trimming the sides of hedges, move the trimmer upwards, then downwards, ensuring a smooth, even finish.
- **Thick Branches:** The AdvancedHedgeCut 70 can cut branches up to 34 mm in diameter. For thicker branches, position the blade teeth around the branch and allow the tool to cut through without forcing.



Figure 5.1: The hedge trimmer blade effectively cutting through a thick branch, demonstrating its robust cutting capacity.



Figure 5.2: The hedge trimmer blade positioned close to a wall, illustrating its ability to trim edges precisely without damaging the surface.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your hedge trimmer.

- **Cleaning:** After each use, disconnect the power supply and clean the blades and housing. Use a stiff brush to remove sap and debris from the blades. Wipe the housing with a damp cloth. Do not use solvents or abrasive cleaners.
- **Blade Care:** Periodically lubricate the blades with a light machine oil or blade lubricant to prevent rust and ensure smooth operation. If the blades become dull, they can be sharpened by a qualified service technician.
- **Storage:** Always attach the blade guard before storing. Store the hedge trimmer in a dry, well-ventilated area, away from direct sunlight and extreme temperatures. Keep it out of reach of children.
- **Power Cord:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, it must be replaced by Bosch or an authorized service center to avoid a hazard.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Hedge trimmer does not start.	No power supply; safety switches not pressed simultaneously; damaged power cord.	Check power connection and extension cord. Ensure both safety switches are fully depressed. Inspect power cord for damage; replace if necessary.
Poor cutting performance.	Dull blades; blades clogged with debris; cutting branches too thick.	Clean blades and lubricate. Have blades sharpened by a professional. Avoid cutting branches exceeding 34 mm.
Excessive vibration.	Damaged blades; loose components.	Inspect blades for damage. Check for any loose screws or parts. If problem persists, contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	06008C0903
Motor Power	500 W
Blade Length	70 cm
Cutting Capacity (Max. Branch Diameter)	34 mm
No-Load Stroke Rate	3400 strokes/min
Acoustic Power Level	93 dB
Friction Clutch Torque	60 Nm
Weight (without battery)	4.1 kg
Product Dimensions (L x W x H)	50 x 60 x 10 cm
Power Source	Corded Electric
Blade Material	Aluminium
Included Components	AdvancedHedgeCut 70, Blade Cover, Carton

9. WARRANTY AND SUPPORT

Bosch provides high-quality products and stands by their durability. This product comes with a commitment to spare parts availability for **5 years**.

For warranty claims, technical assistance, or to order spare parts, please contact your local Bosch service center or visit the official Bosch website. Ensure you have your model number (06008C0903) and proof of purchase available when contacting support.

For more information, you may visit the [Bosch Store on Amazon](#).