

Dakota 38249

Dakota Digital Clip Watch Instruction Manual

MODEL: 38249

1. Introduction

Thank you for choosing the Dakota Digital Clip Watch. This versatile timepiece is designed for durability and functionality, featuring both analog and digital displays, along with multiple useful tools. This manual will guide you through the setup, operation, and maintenance of your new watch.





Figure 1: Dakota Digital Clip Watch (Orange variant)

2. Key Features

- **Water Resistance:** 100 feet water resistant. Suitable for splashes and brief immersion, but not for diving.
- **Dual Display:** Features both analog and digital time displays.
- **Digital Functions:** Includes alarm, stopwatch, timer, calendar, 12/24 hour time mode, and dual time function.
- **Durable Construction:** Metal cased design for outdoor use.
- **Integrated Clip:** Easily attaches to belt loops, backpacks, golf bags, and more.



Figure 2: Overview of watch features including digital movement, water resistance, and clip-on functionality.

3. Setup

3.1. Battery Installation

The Dakota Digital Clip Watch requires 1 AA battery. To install or replace the battery:

1. Locate the battery compartment cover on the back of the watch.
2. Use a small screwdriver to carefully remove the screws securing the cover.
3. Insert the AA battery, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screws. Do not overtighten.

3.2. Initial Time and Date Setting

Upon battery installation or after a reset, you may need to set the time and date. Refer to the 'Operating Instructions' section for detailed steps on setting the digital display.

4. Operating Instructions

Your Dakota Digital Clip Watch features several buttons for operation:

- **MODE:** Cycles through different display modes (Time, Alarm, Stopwatch, Timer, Dual Time).
- **LIGHT/RESET:** Activates backlight; used to reset values in setting modes.
- **START/STOP:** Starts/stops stopwatch or timer; adjusts values in setting modes.
- **SET:** Enters setting mode; confirms selections.



Figure 3: Key components and features of the Dakota Digital Clip Watch.

4.1. Setting Time and Date (Digital Display)

1. From the normal time display, press the **MODE** button until the time setting mode is displayed (often indicated by flashing digits).
2. Press the **SET** button to select the digit or setting you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **START/STOP** button to increase the value. Hold to rapidly advance.
4. Repeat steps 2 and 3 until all desired settings are correct.
5. Press the **MODE** button to exit the setting mode and return to the normal time display.

4.2. Using the Alarm Function

1. Press the **MODE** button until the alarm time is displayed.
2. Press the **SET** button to select the hour or minute digits.
3. Use the **START/STOP** button to adjust the alarm time.
4. Press **MODE** to exit. To activate/deactivate the alarm, typically press **START/STOP** while in alarm display mode. An alarm icon will appear/disappear.

4.3. Stopwatch Function

1. Press the **MODE** button until the stopwatch display (00:00:00) appears.
2. Press **START/STOP** to start the stopwatch.
3. Press **START/STOP** again to pause/stop.
4. Press **LIGHT/RESET** to reset the stopwatch to zero.

4.4. Timer Function

1. Press the **MODE** button until the timer display appears.
2. Press **SET** to adjust the desired countdown time (hours, minutes, seconds) using the **START/STOP** button.
3. Press **MODE** to confirm the set time.
4. Press **START/STOP** to begin the countdown.

5. The timer will alert you when it reaches zero. Press **LIGHT/RESET** to stop the alert and reset the timer.

4.5. Dual Time Function

This feature allows you to track a second time zone.

1. Press the **MODE** button until the dual time display appears (often labeled 'T2' or similar).
2. Press **SET** to enter the setting mode for the dual time.
3. Adjust the hours and minutes using the **START/STOP** button.
4. Press **MODE** to exit the setting mode.

4.6. Light Function

Press the **LIGHT/RESET** button to illuminate the digital display for a few seconds, improving visibility in low-light conditions.

4.7. Carabiner Clip Usage

The integrated carabiner clip allows you to attach the watch to various items for hands-free access.

1. Open the carabiner gate by pressing the spring-loaded mechanism.
2. Attach the watch to a belt loop, backpack strap, gear loop, or any secure point.
3. Ensure the gate closes securely to prevent accidental detachment.

Your browser does not support the video tag.

Video 1: Demonstrates the clip-on functionality of the Dakota Analog & Digital Clip Watch.



Figure 4: The watch clipped to a backpack strap for hands-free timekeeping during outdoor activities.

4.8. Compass Usage

The watch includes a small compass. While it provides a general directional indication, it is primarily a decorative feature. For precise navigation, always rely on a dedicated, high-quality compass or GPS device.

5. Maintenance

5.1. Water Resistance

Your Dakota Digital Clip Watch is rated 100 feet (3 ATM) water resistant. This means it is protected against splashes, rain, and accidental immersion in shallow water. It is **not** suitable for swimming, diving, or prolonged exposure to water pressure. Avoid operating buttons while the watch is wet to prevent water ingress.

Your browser does not support the video tag.

Video 2: Demonstrates the water resistance of a Dakota Digital Clip Watch.

5.2. Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the finish or internal components.

5.3. Battery Replacement

When the display becomes dim or the watch stops functioning, it's time to replace the AA battery. We recommend having battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

6. Troubleshooting

- Display is blank or dim:** Check the battery. Replace if necessary. Ensure the battery is inserted with correct polarity.
- Time is inaccurate:** Reset the time and date following the instructions in Section 4.1. If the issue persists after a new battery, contact customer support.
- Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not a standard feature for this model). Try a soft reset by removing and reinserting the battery. If the problem continues, contact customer support.
- Water inside the watch:** Immediately cease use and take the watch to a professional for inspection and repair to prevent further damage.

7. Specifications

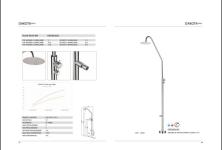
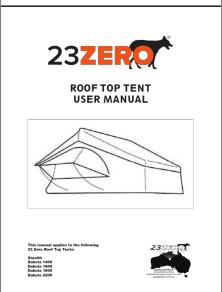
Feature	Specification
Product Dimensions	3.25 x 1.5 x 0.5 inches
Item Weight	7.05 ounces
Item Model Number	38249-parent
Batteries	1 AA battery required
Water Resistance	100 feet (3 ATM)
Manufacturer	Dakota Watch Company
Clasp Type	Tang Buckle (referring to the clip mechanism)
Item Type Name	Ana Dig Clip

8. Warranty and Support

For warranty information, please refer to the documentation included with your purchase or visit the official Dakota Watch Company website. If you encounter any issues not covered in this manual or require further assistance, please contact Dakota customer support.

Dakota Watch Company: [Visit the Dakota Store on Amazon](#)

Related Documents - 38249

	<p>Dakota Series GPD003/ANG Pool Shower System - Technical Specifications</p> <p>Detailed specifications for the Dakota Series GPD003/ANG pool shower system, featuring S316 stainless steel construction, black matte finish, flow rates, dimensions, and pressure requirements.</p>
	<p>Dakota GPD003/AC Shower System - Technical Specifications</p> <p>Detailed technical specifications for the Dakota GPD003/AC shower system, featuring S.316 stainless steel construction. Includes flow rates, dimensions, pressure requirements, and guarantee information.</p>
	<p>23ZERO Roof Top Tent User Manual: Installation, Operation, and Warranty Guide</p> <p>Comprehensive user manual for 23ZERO Roof Top Tents, including Stealth, Dakota 1400, 1600, 1800, and 2200 models. Covers installation, hardware, tent orientation, operation, ladder adjustment, annex attachment, transit cover, closing, storage, and warranty information.</p>
	<p>Innova Cellular Reloj Casual Dakota WT/1G Digital Watch User Manual and Specifications</p> <p>Comprehensive guide for the Innova Cellular Reloj Casual Dakota WT/1G digital watch, covering specifications, operating instructions, maintenance, safety warnings, and warranty information in multiple languages.</p>
	<p>Dakota CX2 & CX4 Ultrasonic Material Thickness Gauges User Guide</p> <p>Comprehensive user guide for the Dakota CX2 and CX4 ultrasonic material thickness gauges, covering setup, calibration, operation, specifications, and troubleshooting. Learn how to accurately measure material thickness with these advanced instruments.</p>
	<p>Manuel d'utilisation Garmin Dakota 10 et 20</p> <p>Manuel d'utilisation pour les appareils de navigation GPS Garmin Dakota 10 et Dakota 20. Ce guide couvre l'installation, l'utilisation, la personnalisation et les fonctionnalités de base des appareils.</p>