

Redi-Remote RTXQUAAUDIOREM

User Manual

REPLACEMENT REMOTE FOR TECHNICAL PRO XAQUA EXPLOSIVE WATERFALL SPEAKER SYSTEM

Model: RTXQUAAUDIOREM | Brand: Redi-Remote

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Redi-Remote replacement remote control, specifically designed for the Technical Pro XAQUA Explosive Waterfall Speaker System. This remote is a custom replacement and is not an original Technical Pro product. It is engineered to perform all functions for the specified unit.

SETUP

Battery Installation

The remote control requires 4 AAA batteries for operation. Follow these steps to install the batteries:

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Slide the cover downwards or press the latch (if present) to open the compartment.
- 3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Close the battery compartment cover securely until it clicks into place.

Note: Remove batteries if the remote will not be used for an extended period to prevent leakage.

OPERATING INSTRUCTIONS

This section details the functions of each button on your replacement remote control. The remote features a sliding cover that reveals additional, model-specific functions in the lower half.



Image: Redi-Remote replacement remote control. The top section includes standard controls like Power, Volume, Channel, and a numeric keypad. The lower section, accessible by sliding down the cover, contains additional function buttons for the XAQUA system.

Top Section Buttons

PWR (Power): Turns the speaker system on or off.

INPUT: Cycles through available input sources (e.g., AUX, Bluetooth, USB).

SLEEP: Activates or deactivates the sleep timer function.

DISP (Display): Changes or shows display information on the speaker system.

CH+ / CH-: Navigates through channels or presets (if applicable).

VOL+ / VOL-: Increases or decreases the master volume level.

MUTE: Mutes or unmutes the audio output.

MENU: Accesses the system's main menu.

RECALL: Recalls the previously selected channel or input.

Number Pad (0-9): Used for direct input of numbers, such as channel selection or track numbers.

- (Dash): Used for entering sub-channels or specific numerical inputs.

ENT (Enter): Confirms a selection or input.

Lower Section Buttons (Slide Down to Reveal)

To access these functions, slide the lower cover of the remote downwards.

(Previous Track): Skips to the beginning of the current track or the previous track.

(Play/Pause): Toggles between playing and pausing media playback.

(Next Track): Skips to the next track.

MODE: Cycles through different operational modes of the speaker system.

VOL+ / VOL- (Lower Section): Adjusts volume, potentially for specific audio zones or sub-functions.

EQ (Equalizer): Cycles through preset equalizer modes or accesses EQ settings.

MUTE (Lower Section): Mutes or unmutes audio, potentially for specific audio outputs.

RPT (Repeat): Toggles repeat playback modes (e.g., repeat one, repeat all).

SCAN / U/SD: Initiates a scan for radio stations or switches between USB and SD card inputs.

AXQUAAUDIOREM / TECHNICAL PRO: These labels indicate compatibility and branding for the remote.

MAINTENANCE

Cleaning: Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.

Storage: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

Battery Care: Replace batteries when the remote's performance degrades. If the remote will not be used for an extended period, remove the batteries to prevent corrosion.

Avoid Drops: Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Remote Not Responding:

- Check if the batteries are installed correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote and the speaker system's infrared receiver.

- Confirm the remote is pointed directly at the speaker system.

Certain Buttons Not Working:

- Clean the remote's surface, especially around the non-working buttons, to remove any dirt or debris.
- Ensure the lower cover is fully slid down if you are trying to use functions in that section.

Interference:

- Bright light sources (like direct sunlight or certain types of fluorescent lights) can interfere with infrared signals. Try operating the remote in a different lighting condition.

If issues persist after following these steps, please contact the seller for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	5 ounces
Item Model Number	RTXAQUAAUDIOREM
Batteries Required	4 AAA batteries
Manufacturer	Redi-Remote
Brand	Redi-Remote
Special Feature	XAQUA Explosive Waterfall Speaker System compatibility
Max Number of Supported Devices	1
Compatible Devices	SPEAKER SYSTEM/WATERFALL LIGHTS
Connectivity Technology	Infrared

WARRANTY AND SUPPORT

Specific warranty information for this replacement remote is not provided in the product details. For any warranty claims, technical support, or operational questions, please contact the seller directly through your purchase platform. Redi-Remotes are designed to control the specific unit they are intended for and cannot be programmed for auxiliary devices.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09LNZ135V>

More documents and user manuals: <https://manuals.plus/>