



Manuals.plus /

› LILPARTNER /

› LILPARTNER 5.3-QT Stand Mixer Instruction Manual

## LILPARTNER 5.3-QT

# LILPARTNER 5.3-QT Stand Mixer Instruction Manual

Model: 5.3-QT | Brand: LILPARTNER

## 1. PRODUCT OVERVIEW

The LILPARTNER 5.3-QT Stand Mixer is designed for various kitchen tasks, featuring a durable 304 stainless steel body and a 5.3-quart stainless steel mixing bowl. It includes multiple attachments for diverse recipes and offers precise control with its LCD display and multiple speed settings. The tilt-head design facilitates easy access to the bowl and attachments, while anti-skid suction cups ensure stability during operation.



Figure 1: LILPARTNER 5.3-Qt Stand Mixer with its main components.

## 2. COMPONENTS OVERVIEW

Familiarize yourself with the various parts of your LILPARTNER Stand Mixer:

- **Main Unit:** Houses the motor, speed control, and tilt-head mechanism.
- **5.3-Qt Stainless Steel Mixing Bowl:** Large capacity bowl for mixing ingredients.
- **Stainless Steel Whisk:** Ideal for whipping eggs, cream, and light mixtures.
- **PTFE Dough Hook:** Designed for kneading heavy mixtures like bread and pizza dough.
- **PTFE Beater:** Suitable for medium-heavy mixtures such as cookies and mashed potatoes.
- **Splash Guard:** Prevents splashing and allows for adding ingredients during mixing.
- **Scraper:** For scraping down the sides of the bowl.
- **LCD Display:** Shows time and speed settings.
- **Speed Control Dial:** Adjusts mixing speed.
- **Tilt Lock:** Secures the mixer head in place.

- **Anti-slip Feet:** Suction cups on the base for stability.



Figure 2: Detailed view of the stand mixer and its included accessories.

### 3. SPECIFICATIONS

Feature	Specification
Brand	LILPARTNER
Model Name	LILPARTNER Stand Mixer
Capacity	5.3 Quarts
Wattage	1200 Watt-hours
Voltage	120 Volts
Controls Type	Push Button
Special Feature	Removable Bowl
Material	Stainless Steel
Product Dimensions	10.83"D x 6.5"W x 12.64"H
Item Weight	10.13 pounds



Figure 3: Technical specifications and dimensions of the mixer.

## 4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all accessories (mixing bowl, whisk, dough hook, beater, splash guard, scraper) are present.
2. **Clean:** Before first use, wash the mixing bowl, whisk, dough hook, beater, and splash guard in warm, soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth.
3. **Position:** Place the mixer on a clean, dry, and stable surface. Ensure the anti-slip suction cups are firmly attached to the countertop.
4. **Attach Mixing Bowl:** Place the 5.3-QT stainless steel mixing bowl onto the base of the mixer. Rotate it clockwise until it locks securely into position.
5. **Raise Mixer Head:** Push the tilt lock lever (located on the side of the mixer) downwards and gently lift the mixer head until it clicks into the raised position.
6. **Install Attachment:** Select the desired attachment (whisk, dough hook, or beater). Align the attachment with the output shaft and push upwards, then rotate counter-clockwise until it locks into place.
7. **Lower Mixer Head:** Push the tilt lock lever downwards again and gently lower the mixer head until it clicks into the locked position.
8. **Attach Splash Guard:** If desired, attach the splash guard by aligning it over the mixing bowl and rotating it until it fits snugly.

### Setup Demonstration Video

Your browser does not support the video tag.

Video 1: This video demonstrates the process of setting up the LILPARTNER Stand Mixer, including attaching the bowl and accessories.

## 5. OPERATING INSTRUCTIONS

The LILPARTNER Stand Mixer features an LCD display and a 6+P speed control for precise mixing.

### Speed Settings and Applications

- **Speed 1-2 (Dough Hook):** For heavy mixtures like bread, pizza, or spaghetti dough.
- **Speed 2-4 (Beater):** For medium-heavy mixtures such as cookies, cakes, or mashed potatoes.
- **Speed 5-6 (Whisk):** For light mixtures like whipping cream, egg whites, or sauces.
- **Pulse (P):** Provides a quick burst of power for rapid mixing or breaking down large chunks.



Figure 4: Recommended speed settings for various mixing tasks.

### Using the LCD Display and Timer

The LCD display shows the remaining time and current speed. Use the '+' and '-' buttons to adjust the timer in 30-second increments. The timer can be set for up to 15 minutes, allowing you to multitask while the mixer operates.



Figure 5: LCD display for time and speed control.

## 6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your stand mixer.

- **Attachments and Bowl:** The stainless steel mixing bowl, whisk, dough hook, beater, and splash guard are dishwasher safe for easy cleaning.
- **Main Unit:** Wipe the main unit with a damp cloth. Do not immerse the motor base in water or other liquids.
- **Storage:** Ensure the mixer and all accessories are clean and dry before storing. Store in a cool, dry place.

## 7. TROUBLESHOOTING

- **Mixer stops during operation:** The mixer is equipped with an overheat protection design. If the motor overheats, the unit may automatically shut off. Allow the mixer to cool down for approximately 15-20 minutes before resuming use. Ensure proper ventilation around the unit.
- **Attachments not mixing evenly:** Ensure the attachment is correctly installed and the mixer head is fully lowered and locked. For optimal mixing, use the recommended speed settings for the type of mixture.
- **Mixer moves or vibrates excessively:** Verify that the anti-slip silicone suction cups on the base are clean and firmly attached to a smooth, dry countertop.

## 8. SAFETY INFORMATION

- Always unplug the mixer from the power outlet before cleaning, assembling, or disassembling parts.
- Do not operate the mixer with a damaged cord or plug.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving beaters during operation to prevent injury.
- Never leave the mixer unattended while it is operating.
- This appliance is for household use only. Do not use outdoors.
- Children should be supervised to ensure they do not play with the appliance.

## 9. WARRANTY AND SUPPORT

Your LILPARTNER Stand Mixer comes with a 3-Month MONEY-BACK guarantee, a 1-Year FREE warranty, and LIFE-TIME customer service. If there is any part of a damaged attachment, please contact us to get a free replacement.

For support, please refer to the contact information provided in your purchase documentation or visit the official LILPARTNER website.

