

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [CIARRA](#) /

> [CIARRA CAB75502 30-inch Black Range Hood Instruction Manual](#)

## CIARRA CAB75502

# CIARRA CAB75502 30-inch Black Range Hood Instruction Manual

Model: CAB75502 | Brand: CIARRA

## 1. IMPORTANT SAFETY INFORMATION

---

Please read this manual carefully before installation and use. Keep these instructions for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the electrical supply matches the rating label on the appliance.
- Installation must be performed by a qualified person in accordance with all applicable codes and standards.
- Do not operate the range hood if the power cord is damaged.
- Clean grease filters regularly to prevent grease buildup and fire hazards.
- Never leave cooking food unattended.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## 2. WHAT'S IN THE BOX

---

The following items are included with your CIARRA CAB75502 Range Hood:

- Range Hood Unit
- Installation Kit (includes mounting brackets, screws, wall anchors, and zip ties)
- Instruction Manual
- Duct pipe (for ducted mode)



Image: Included components for the CIARRA CAB75502 Range Hood, showing the main unit, installation hardware, and documentation.

### 3. SETUP AND INSTALLATION

The CIARRA CAB75502 is designed for wall-mounted installation and can be configured for both ducted and ductless operation. All necessary installation accessories are included.

#### 3.1 Installation Type: Ducted vs. Ductless

- **Ducted Mode:** Exhausts air outside through a duct pipe. This mode provides the most effective ventilation. The necessary duct pipe is included.
- **Ductless Mode (Recirculation):** Filters air through an optional carbon filter (model CACF003, sold separately) and recirculates it back into the kitchen. This is suitable when external venting is not possible.

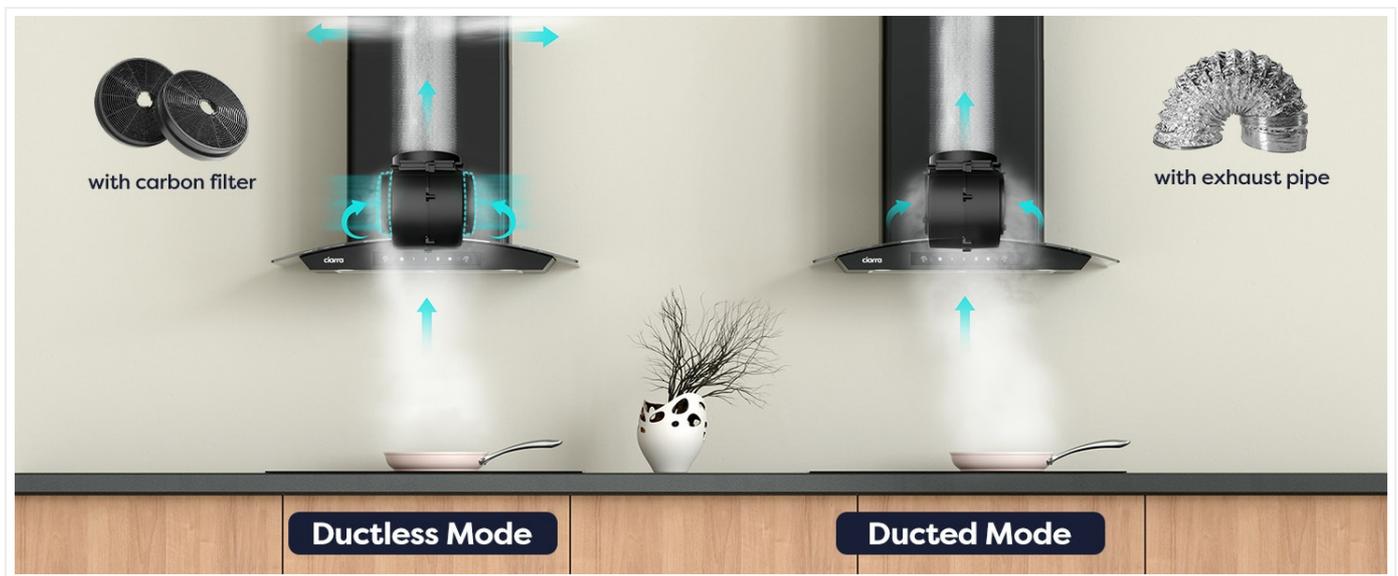


Image: Illustration of the range hood operating in ducted mode (venting outside) and ductless mode (recirculating air with a carbon filter).

### 3.2 Wall Mounting

The 30-inch wall-mounted design is compatible with standard stovetops. Refer to the detailed instruction manual provided in the box for step-by-step installation guidance. Installation videos are also available to assist with setup.

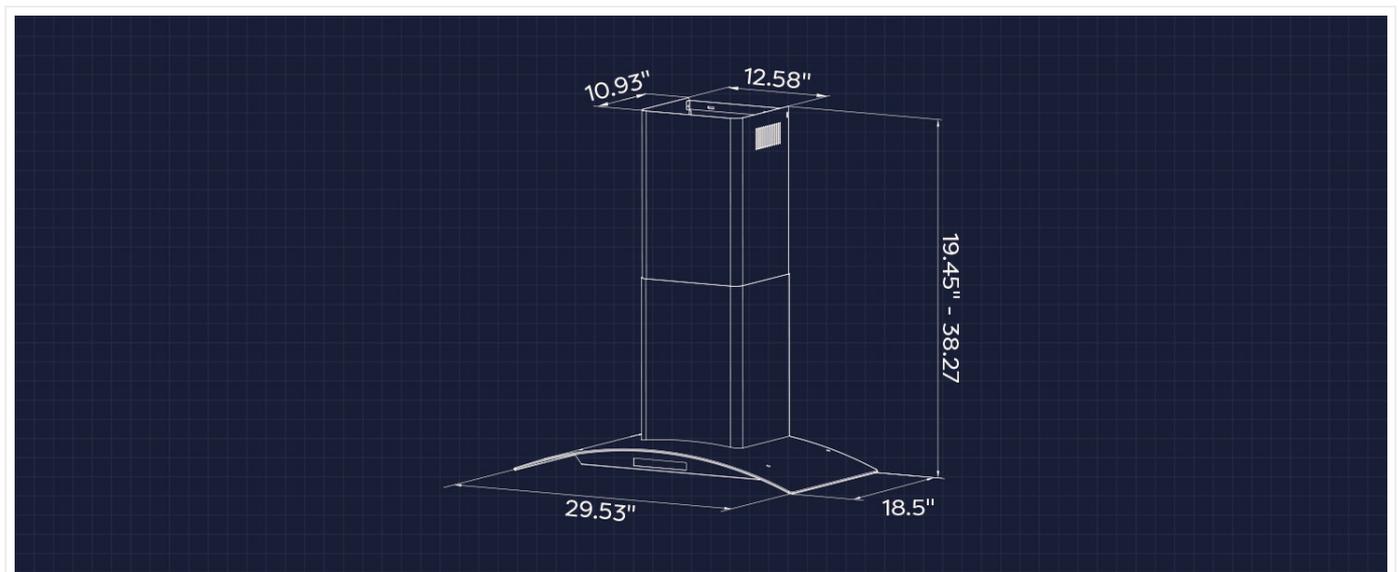


Image: The 30-inch CIARRA range hood mounted on a kitchen wall above a cooking surface.

## 4. OPERATING INSTRUCTIONS

Your CIARRA CAB75502 Range Hood features both gesture and touch controls for convenient operation.

### 4.1 Control Panel Overview

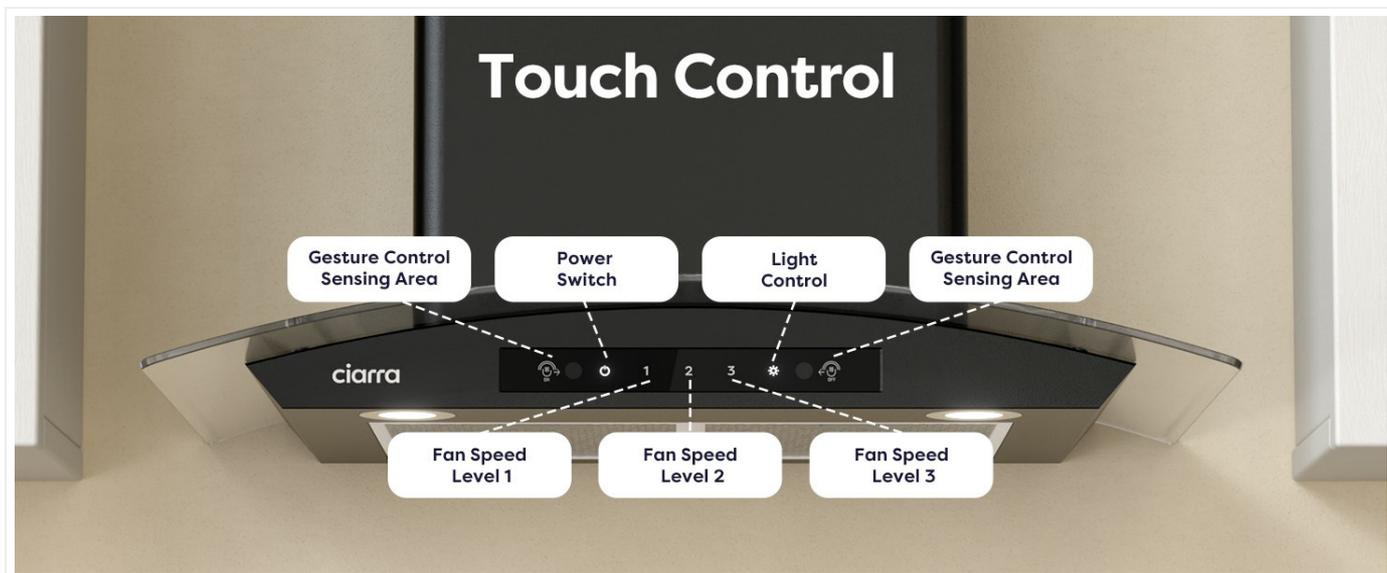


Image: Detailed view of the touch control panel, indicating the power button, fan speed controls (1, 2, 3), light control, and gesture sensing areas.

## 4.2 Gesture Control

The gesture control allows for hands-free operation, ideal when your hands are busy or soiled during cooking.

- **To Turn On / Adjust Speed:** Wave your hand across the gesture control sensing area (typically from left to right) to turn on the hood and cycle through fan speeds.
- **To Turn Off:** Wave your hand across the gesture control sensing area (typically from right to left) to turn off the hood.

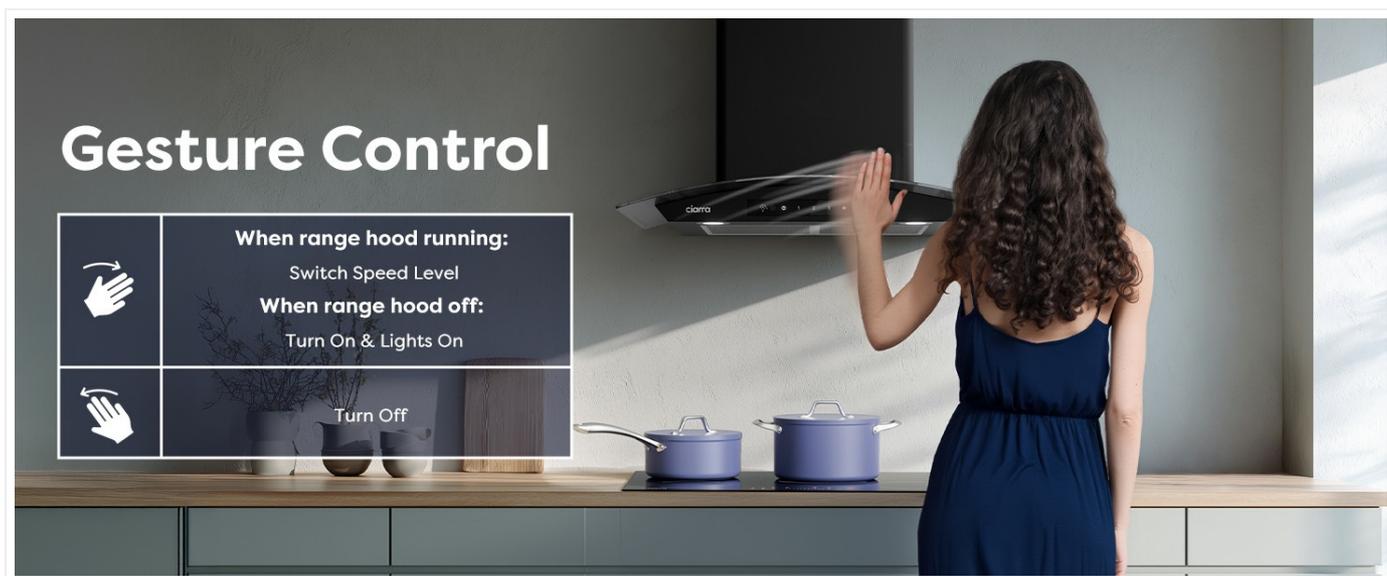


Image: Visual guide for using gesture control to operate the range hood, showing hand movements for different functions.

## 4.3 Touch Control

The touch control panel provides precise command over the range hood's functions.

- **Power Switch:** Press to turn the range hood on or off.
- **Fan Speed Control:** Select from 3 speed levels (1, 2, 3) to adjust suction power. Level 1 is for light cooking, Level 3 for heavy smoke and odors.
- **Light Control:** Press to turn the LED lights on or off. The hood features 2 adjustable LED light levels for varied illumination.

## 4.4 Timer Function

The timer function allows the range hood to operate for a set period before automatically shutting off.

Your browser does not support the video tag.

Video: Demonstration of the timer function on the CIARRA range hood, showing how to set the automatic shut-off time.

- Press the timer button repeatedly to cycle through preset shut-off times (e.g., 5, 10, 15, 20 minutes).
- The selected time will be displayed, and the timer indicator will flash.
- To cancel the timer, press the timer button until the display shows '0' or the indicator stops flashing.

## 4.5 Clean & Fresh Function

This function helps maintain a fresh kitchen environment by periodically activating the fan at a low speed.

Your browser does not support the video tag.

Video: Demonstration of the Clean & Fresh function on the CIARRA range hood, showing activation and operation.

- To activate: Turn on the range hood, press the timer button for 3 seconds, then press the power button.
- The hood will periodically run at a low speed to refresh the air.
- Refer to the full manual for specific activation and deactivation procedures.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and longevity of your range hood.

### 5.1 Cleaning Grease Filters

The 5-layer aluminum mesh filters effectively capture grease. For best performance, clean them regularly.

- The filters are dishwasher safe. Place them in the dishwasher for easy cleaning.
- Alternatively, wash by hand with hot water and a mild detergent.
- Ensure filters are completely dry before reinstalling.

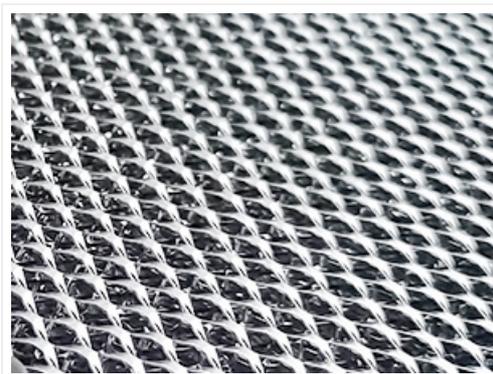


Image: A detailed view of the 5-layer aluminum mesh filter, designed to capture grease effectively.

### 5.2 General Cleaning

- Wipe the exterior surfaces with a soft cloth and mild, non-abrasive cleaner.
- The curved glass and matte black finish are designed to repel splatters and resist wear, making cleanup quick.
- Do not use abrasive cleaners or scouring pads, as these can damage the finish.

## 6. TROUBLESHOOTING

---

If you encounter issues with your range hood, refer to the following common solutions:

Problem	Possible Cause	Solution
Hood does not turn on.	No power supply; power cord disconnected; circuit breaker tripped.	Check power connection; ensure circuit breaker is on; test power outlet.
Low suction power.	Grease filters are dirty; fan speed too low; ducting obstruction (if ducted).	Clean or replace grease filters; increase fan speed; check ducting for blockages.

Problem	Possible Cause	Solution
Excessive noise.	Loose components; fan obstruction; improper installation.	Check for loose screws or parts; ensure nothing is obstructing the fan blades; verify proper installation.
Lights not working.	LED bulbs faulty; loose wiring.	Replace LED bulbs if necessary; check electrical connections (consult a technician if unsure).

If the problem persists after attempting these solutions, please contact CIARRA customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	CIARRA
Model Number	CAB75502
Product Dimensions	19.69 x 29.53 x 38.27 inches
Color	Black
Material	Matte black finished
Air Flow Capacity	650 CFM (Cubic Feet Per Minute)
Noise Level	7.5 Sones
Number of Speeds	3
Control Method	Gesture, Touch
Light Source Type	LED (2 levels)
Filter Type	Mesh (5-layer aluminum)
Ventilation Type	Ducted / Ductless Convertible
Installation Type	Wall Mount
Voltage	120 Volts
Wattage	88 watts
Item Weight	12.32 pounds (5.6 Kilograms)

## 8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or technical assistance, please refer to the warranty card included in your product packaging or visit the official CIARRA website. Keep your purchase receipt as proof of purchase.

For further inquiries, you may contact CIARRA customer service through their official channels.



