

[Manuals.plus](#) /

› [Battat](#) /

› Battat Deluxe Kitchen Playset (Model BT2766C1Z) Instruction Manual

## Battat BT2766C1Z

# Battat Deluxe Kitchen Playset (Model BT2766C1Z) Instruction Manual

Model: BT2766C1Z

## INTRODUCTION

The Battat Deluxe Kitchen Playset is a comprehensive 71-piece collection of pretend cooking accessories designed for imaginative play. This set provides children aged 2 years and up with a variety of items to simulate cooking, baking, and hosting tea parties or snack times. The components are designed to be break-resistant and dishwasher safe, ensuring durability and ease of cleaning.

The playset encourages the development of fine motor skills, social skills, hand-eye coordination, and imaginative role-play. It includes four complete table settings, various cutlery, cooking utensils, pots, pans, and baking accessories, all in bright, engaging colors.

## PACKAGE CONTENTS

The Battat Deluxe Kitchen Playset includes the following 71 pieces:

- 12 Plates
- 28 Pieces of Cutlery (forks, spoons, knives)
- 8 Cups
- 1 Teapot with 1 Lid
- 1 Pan
- 1 Bowl
- 9-Piece Baker Set (includes rolling pin, cookie cutters, mixer, etc.)
- 1 Dish Rack
- 1 Pot with 1 Lid
- 1 Pan with 1 Lid
- 1 Creamer
- 1 Sugar Bowl with 1 Lid

- 1 Salt Shaker
- 1 Pepper Shaker



Image: All 71 pieces of the Battat Deluxe Kitchen Playset, including plates, cutlery, cups, pots, pans, and baking accessories, arranged on a white surface.

## SETUP

The Battat Deluxe Kitchen Playset requires no assembly. All pieces are ready for immediate play directly out of the packaging.

1. **Unpack Components:** Carefully remove all 71 pieces from the packaging.
2. **Inspect for Damage:** Before first use, inspect all pieces for any signs of damage or manufacturing defects.
3. **Initial Cleaning (Optional but Recommended):** Although the items are new, it is recommended to wash all pieces with mild soap and water or place them in a dishwasher before the first use. Refer to the "Maintenance" section for cleaning instructions.
4. **Arrange for Play:** Organize the dishes, cutlery, and cooking accessories as desired to set up a play kitchen or tea party area. The included dish rack can be used for organizing plates and cups.



Image: A grey dish rack holding colorful plates and cups, with a teal hand mixer, a silver and red rolling pin, and grey cookie cutters (star and heart shapes) next to it.

## OPERATING INSTRUCTIONS (IMAGINATIVE PLAY)

This playset is designed to foster imaginative play and role-playing scenarios. There are no electronic components or complex operations. Children can use the various pieces to simulate real-life kitchen activities.

- **Tea Parties:** Use the teapot, cups, saucers, creamer, and sugar bowl to host pretend tea parties. Serve imaginary beverages and snacks.
- **Cooking and Baking:** Utilize the pots, pans, spatulas, spoons, rolling pin, and cookie cutters to "cook" and "bake" pretend meals and treats. The hand mixer can be used for mixing imaginary ingredients.
- **Meal Service:** Set the table with the plates, forks, knives, and spoons for four guests. Practice serving and eating pretend food.
- **Dishwashing:** After play, use the dish rack to organize and "wash" the dishes, promoting tidiness and fine motor skills.
- **Role-Playing:** Encourage children to take on roles such as chef, baker, waiter, or guest to enhance social interaction and storytelling.



Image: A red teapot with a teal lid, a teal pot with a lid, a grey pan, various colorful cups and saucers, and red and teal salt and pepper shakers, arranged for a pretend tea party or cooking session.

## MAINTENANCE

The Battat Deluxe Kitchen Playset is designed for easy care and durability.

- **Cleaning:** All pieces are dishwasher safe. For best results, place items on the top rack of the dishwasher. Alternatively, wash by hand using mild soap and warm water. Rinse thoroughly and allow to air dry completely before storing.
- **Storage:** Store all pieces in a clean, dry place away from direct sunlight when not in use. The original packaging or a designated toy bin can be used for organized storage.
- **Durability:** The playset components are break-resistant under normal play conditions. Avoid excessive force or misuse to prolong the life of the toys.



Image: A vibrant outdoor scene featuring a wooden table with a place setting from the Battat Deluxe Kitchen Playset, including orange and teal plates, matching cutlery, red and green cups, and salt and pepper shakers, under green foliage.

## TROUBLESHOOTING

As a non-electronic toy, troubleshooting for the Battat Deluxe Kitchen Playset is minimal. Most issues can be resolved with simple checks.

- **Missing Pieces:** If any pieces are missing upon unboxing, carefully check all packaging materials. If pieces are still missing, contact Battat customer support.
- **Damaged Pieces:** In the rare event of a damaged piece, discontinue use of that specific item and contact Battat customer support for assistance.
- **Cleaning Difficulties:** For stubborn stains, a gentle scrub brush can be used with mild soap and water. Avoid abrasive cleaners that may damage the plastic.

## SPECIFICATIONS

<b>Brand Name</b>	Battat
<b>Model Number</b>	BT2766C1Z

<b>Item Type Name</b>	Toy Kitchen Set – 71pc Pretend Cooking Accessories – 4 Table Settings & Cutlery – Dishwasher Safe & Worry-Free – 2 Years +
<b>Age Range Description</b>	2 Years +
<b>Manufacturer Minimum Age</b>	24 Months
<b>Included Components</b>	DELUXE KITCHEN PLAYSET (71 pieces)
<b>Material Type</b>	Plastic
<b>Color</b>	Multicolor
<b>Item Dimensions (L x W x H)</b>	15.75 x 5 x 9 inches
<b>Educational Objective</b>	Hand-Eye Coordination, Role Play
<b>UPC</b>	062243474925
<b>GTIN</b>	062243474925

## WARRANTY INFORMATION

---

Battat products are manufactured to high-quality standards. For specific warranty details regarding the Deluxe Kitchen Playset, please refer to the information provided on the product packaging or visit the official Battat website. General warranty terms typically cover manufacturing defects.

## SUPPORT

---

For further assistance, questions, or to report any issues with your Battat Deluxe Kitchen Playset, please contact Battat customer service. Contact information can typically be found on the product packaging or on the official Battat website.

You can also visit the [Battat Store on Amazon](#) for more product information and to explore other Battat toys.