

[Manuals.plus](#) /

› [KAFF](#) /

› KAFF MFAFOT25 Electric Oven Toaster Grill (OTG) Instruction Manual

KAFF MFAFOT25

KAFF MFAFOT25 Electric Oven Toaster Grill (OTG) Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your KAFF MFAFOT25 Electric Oven Toaster Grill. Please read these instructions thoroughly before first use and retain them for future reference. This appliance is designed for baking, grilling, toasting, air frying, and defrosting various food items.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot items.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not immerse the cord, plug, or appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating.
- Always ensure the crumb tray is properly inserted before operation.

PRODUCT OVERVIEW

The KAFF MFAFOT25 is a versatile electric oven toaster grill with multiple cooking functions. Familiarize yourself with its components and controls.

Components

- **Main Unit:** Stainless steel housing with heat-resistant tempered glass door.
- **Control Panel:** Features knobs for Timer, Function, Air Fryer Temperature, Oven Temperature, and a Lamp switch.
- **Power Indicator:** Illuminates when the appliance is operating.
- **Interior Light:** For monitoring cooking progress.

Accessories Included

- **Crumb Tray:** Collects crumbs and drips for easy cleaning.
- **Rotisserie with Handle:** For roasting whole chickens or large cuts of meat.
- **Frying Basket:** Specifically designed for air frying.
- **Wire Rack:** For baking, grilling, and toasting.
- **Bake Tray:** For baking and collecting drips.



Image: Front view of the KAFF MFAFOT25 OTG with the door open, revealing the interior rack and the control panel with four knobs and a lamp switch.



Image: Front view of the KAFF MFAFOT25 OTG demonstrating the rotisserie function with food cooking inside.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Remove any protective films or stickers.
2. **Placement:** Place the OTG on a flat, stable, and heat-resistant surface, ensuring adequate ventilation around the unit (at least 10 cm clearance on all sides). Do not place it directly against a wall or under cabinets.
3. **Cleaning:** Wipe the exterior with a damp cloth. Wash the crumb tray, wire rack, bake tray, frying basket, and rotisserie parts in warm, soapy water. Rinse and dry thoroughly.
4. **First Burn-in:** Before cooking food, operate the oven empty for approximately 15 minutes at the maximum temperature (230°C) using the "Bake" function. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240V~50Hz).

OPERATING INSTRUCTIONS

This section details how to use the various cooking functions of your KAFF MFAFOT25 OTG.

Control Panel Overview

- **Timer Knob:** Sets cooking time up to 120 minutes. The oven will turn off automatically when the timer reaches zero.
- **Function Knob:** Selects the cooking mode (Rotisserie, Air Fryer, Bake, Defrost, Broil, Bake with Convection, Broil with Convection, Toast with Convection).
- **Air Fryer Temp Knob:** Adjusts temperature specifically for air frying.
- **Oven Temp Knob:** Adjusts temperature for other oven functions (up to 230°C).
- **Lamp Switch:** Turns the interior light on or off.

General Operation Steps

1. Place food on the appropriate accessory (wire rack, bake tray, frying basket, or rotisserie).
2. Insert the accessory into the desired rack position inside the oven.
3. Close the oven door securely.
4. Turn the **Function Knob** to select the desired cooking mode.
5. Set the temperature using the **Air Fryer Temp Knob** (for air frying) or the **Oven Temp Knob** (for other functions).
6. Turn the **Timer Knob** to the desired cooking time. The power indicator will illuminate.
7. The oven will begin heating. You can turn on the interior light using the **Lamp Switch** to monitor cooking.
8. When the timer reaches zero, a bell will sound, and the oven will turn off.
9. Carefully remove cooked food using oven mitts.

Specific Functions

- **Air Fryer:** Use the frying basket. Select "Air Fryer" function and set the Air Fryer Temp.
- **Rotisserie:** Secure food onto the rotisserie spit. Insert into the designated slots. Select "Rotisserie" function.
- **Bake/Broil/Toast with Convection:** These functions utilize the convection fan for more even and faster cooking. Select the desired function with "Convection" enabled.
- **Defrost:** Use this function to gently thaw frozen foods.

Your browser does not support the video tag.

Video: A short preview demonstrating the KAFF MFAFOT25 OTG in operation, showing food cooking inside the oven.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Always unplug the oven and allow it to cool completely before cleaning.**
2. **Crumb Tray:** Remove the crumb tray from the bottom of the oven. Discard crumbs. Wash the tray in warm, soapy water, rinse, and dry thoroughly. Reinsert before next use.
3. **Accessories:** Wash the wire rack, bake tray, frying basket, and rotisserie parts in warm, soapy water. For stubborn food residues, soak them before cleaning. Rinse and dry completely.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that can damage the non-stick coating. For baked-on food, a paste of baking soda and water can be applied, left for a

few minutes, then wiped clean.

- 5. **Exterior:** Wipe the exterior housing with a soft, damp cloth. Do not use abrasive cleaners or polishes.
- 6. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth.
- 7. Never immerse the main unit in water or any other liquid.



Image: Front view of the KAFF MFAFOT25 OTG with the crumb tray partially pulled out, illustrating ease of access for cleaning.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check household circuit breaker. Turn the timer knob to the desired cooking time.
Food is not cooking evenly.	Incorrect temperature/time; overcrowding; improper rack position.	Adjust temperature and time settings. Avoid overcrowding the oven. Use the convection function for more even cooking. Ensure food is placed centrally on the rack.
Excessive smoke during cooking.	Food residue or grease buildup; fatty foods.	Clean the interior and accessories thoroughly. Use the crumb tray to catch drips. Reduce the amount of oil or fat if possible.
Rotisserie is not turning.	Rotisserie not properly engaged; food too heavy/unbalanced.	Ensure the rotisserie spit is correctly inserted into the motor drive and support. Balance the food evenly on the spit.

SPECIFICATIONS

Brand	KAFF
Model	MFAFOT25
Capacity	25 Litres
Power	1700W
Voltage	220-240V~50Hz
Max Temperature	230°C
Product Dimensions (W x D x H)	42.9 x 40.5 x 39.5 cm
Item Weight	12 kg 500 g
Control Type	Knob
Door Material	Tempered Glass
Special Features	Temperature Control, Rotisserie, Air Fryer, Convection, Defrost

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or contact KAFF customer service. Keep your purchase receipt as proof of purchase.

KAFF Customer Service: Please visit the official KAFF website or refer to your product packaging for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09LQZ5NDX>

More documents and user manuals: **<https://manuals.plus/>**