Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Pyle /
- > Pyle Digital Clip-On Chromatic Tuner User Manual (Model ACCPGATNR20)

Pyle ACCPGATNR20

Pyle Digital Clip-On Chromatic Tuner User Manual

Model: ACCPGATNR20

1. Introduction

The Pyle Digital Clip-On Chromatic Tuner (Model ACCPGATNR20) is a versatile and accurate tuning device designed for a variety of stringed instruments. Its compact and rotatable design ensures ease of use and clear visibility during tuning. This manual provides detailed instructions for setting up, operating, and maintaining your tuner.



Image 1: Pyle Digital Clip-On Chromatic Tuner and its retail packaging.

2. PACKAGE CONTENTS

- Pyle Digital Clip-On Chromatic Tuner (ACCPGATNR20)
- User Manual
- Battery (typically CR2032, pre-installed or included separately)

3. SETUP

3.1 Battery Installation

- 1. Locate the battery compartment on the back of the tuner.
- 2. Open the compartment cover.
- 3. Insert the CR2032 battery with the positive (+) side facing up.
- 4. Close the battery compartment securely.

3.2 Attaching the Tuner

- 1. Gently open the clip mechanism.
- 2. Attach the tuner securely to the headstock of your instrument. Ensure it is firmly clipped without obstructing strings or tuning pegs.
- 3. Adjust the display angle for optimal viewing. The tuner features a 360-degree rotatable and 105-degree tiltable joint for convenience.

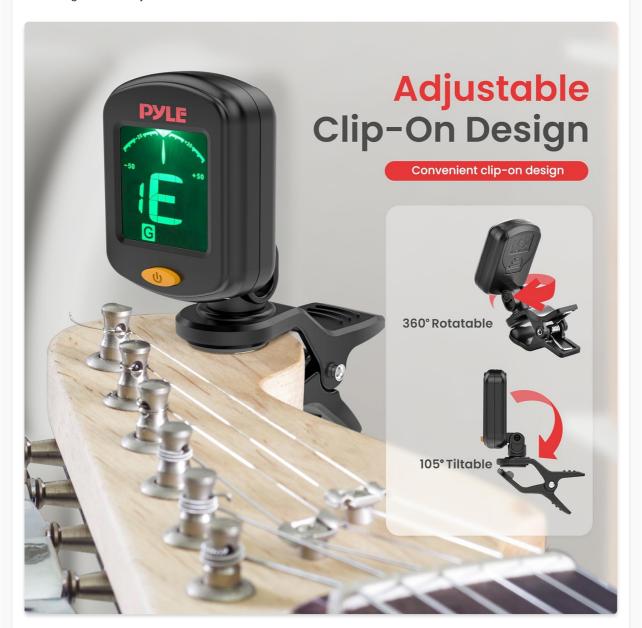


Image 2: The tuner clipped onto a guitar headstock, illustrating its adjustable and rotatable design.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on, press and hold the power button (usually marked with a power symbol) for approximately 2 seconds.
- To power off, press and hold the power button for approximately 2 seconds.
- The tuner features an automatic shut-off function to conserve battery life if no signal is detected for a period.



Image 3: Pressing the power button to operate the tuner.

4.2 Selecting Tuning Mode

- With the tuner powered on, short press the power button to cycle through the available tuning modes.
- The tuner supports various instruments, including Guitar (G), Bass (B), Violin (V), and Ukulele (U). It also includes a Chromatic (C) mode for general tuning.

Supports Tuning Modes for Various Instruments



Image 4: The tuner supports various instruments like guitar, violin, ukulele, and bass.

4.3 Tuning Your Instrument

- 1. Select the appropriate tuning mode for your instrument.
- 2. Pluck a single string on your instrument. The tuner will detect the vibration and display the note on its LCD screen.
- 3. Observe the display:
 - The central indicator will show if the note is flat (left), sharp (right), or in tune (center).
 - The note name (e.g., E, A, D, G, B, E for guitar) and string number will be displayed.
 - The backlight LCD display provides clear visibility in various lighting conditions.
- 4. Adjust your instrument's tuning peg until the indicator is centered and the display shows the correct note for the string. The screen will typically turn green when in tune.



Image 5: Detailed view of the tuner's backlit LCD display, showing tuning indicators.

5. MAINTENANCE

5.1 Cleaning

- Wipe the tuner with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials, as these may damage the device.

5.2 Battery Replacement

- When the display becomes dim or the tuner performs inconsistently, replace the battery following the steps in Section 3.1.
- Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

- Tuner does not power on: Ensure the battery is correctly installed and has sufficient charge. Replace the battery if necessary.
- Inaccurate or inconsistent readings:
 - Ensure the tuner is securely clipped to the instrument's headstock.
 - Verify that the correct tuning mode is selected for your instrument.
 - Pluck strings clearly and individually, avoiding sympathetic vibrations from other strings.
 - Check for excessive background noise that might interfere with detection.
- Display is dim: Replace the battery.

7. SPECIFICATIONS

Feature	Specification
Model Number	ACCPGATNR20
Tuning Modes	Chromatic (C), Guitar (G), Bass (B), Violin (V), Ukulele (U)
Detection Method	Vibration (Clip-on)
Display	Backlit LCD
Power Source	CR2032 Battery (included)
Automatic Shut-off	Yes
Rotatable Angle	360 degrees
Tiltable Angle	105 degrees
Dimensions (approx.)	3.2" x 1.8" x 1.3" (8.1cm x 4.6cm x 3.3cm)
Weight (approx.)	1.06 ounces (30g)



Image 6: The tuner's compact size for readability.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

For detailed warranty information regarding your Pyle Digital Clip-On Chromatic Tuner, please refer to the product packaging or visit the official Pyle website. Warranty terms and conditions may vary by region and retailer.

8.2 Customer Support

If you encounter any issues or have questions not covered in this manual, please contact Pyle customer support for assistance. Contact information can typically be found on the product packaging or the official Pyle website:

• Pyle Official Website: www.pyleusa.com

Related Documents - ACCPGATNR20



Pyle 6-String Classic Guitar User Guide: Setup, Tuning, and Truss Rod Adjustment

Comprehensive user guide for the Pyle 6-String Classic Guitar, covering strap attachment, guitar tuning, and truss rod adjustment for optimal playability. Includes digital tuner setup.



Pyle PGST93 9-Space Foldable Guitar Rack User Manual

User manual for the Pyle PGST93 9-Space Foldable Guitar Rack, detailing features, assembly instructions, technical specifications, and parts list for this multi-instrument guitar stand.



Pyle Beginners 6-String Acoustic Guitar User Guide

Comprehensive user guide for the Pyle Beginners 6-String Acoustic Guitar, covering essential information on protection, tuning, string changes, truss rod adjustment, and care.



Pyle Beginners 6-String Acoustic Guitar User Guide

User guide for the Pyle Beginners 6-String Acoustic Guitar, covering care, tuning, string changes, and truss rod adjustment. Includes information on temperature and humidity protection.



Pyle 6-String Classic Guitar User Guide: Setup and Tuning

Comprehensive user guide for the Pyle 6-String Classic Guitar, covering strap attachment, tuning procedures, and truss rod adjustment. Includes detailed instructions and tips for optimal playability.



Pyle PGA500BR Acoustic Resonator Guitar: Instructions Manual & Care Guide

Comprehensive instructions manual for the Pyle PGA500BR 6-String Acoustic Resonator Guitar. Learn about its features, parts, setup, action adjustment, cone care, tuning, and maintenance.

Documents - Pyle - ACCPGATNR20

no relevant documents