

MEDION E66476

MEDION E66476 Stereo Sound System

Instruction Manual

Model: E66476 | Brand: MEDION

1. INTRODUCTION AND OVERVIEW

The MEDION E66476 Stereo Sound System is a versatile boombox designed for portable audio entertainment. It features multiple playback options including CD, MP3, cassette, FM radio, and external device connectivity via AUX-In and USB.

Key Features:

- Boombox sound system with CD/MP3/cassette player.
- PLL FM radio with 30 preset stations.
- MP3 music playback from USB stick.
- AUX-In for connecting external devices like MP3 players or smartphones.
- LC display with blue backlight.
- Automatic Memory System (AMS) for radio stations.
- Top-loading CD/MP3 player with programmable track memory (20 tracks for CD, 99 for MP3).
- CD-R/CD-RW compatible.
- 2 x 2.2 W RMS output power (2 x 20 W max. music output power).
- Headphone output for private listening.
- Operates on AC power or batteries for portability.



Figure 1.1: Front view of the MEDION E66476 Stereo Sound System, showing the central display, control buttons, and dual speakers.

2. SETUP

2.1 Power Connection

The MEDION E66476 can be powered by either AC mains electricity or batteries.

AC Power:

1. Ensure the unit is switched off.
2. Connect the supplied AC power cable to the AC IN socket on the back of the unit.
3. Plug the other end of the power cable into a standard wall outlet (230V ~ 50Hz).

Battery Power:

For portable use, the unit requires 6 x 1.5V 'C' size batteries (not included).

1. Ensure the unit is switched off.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 'C' size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2.2 Antenna Setup (for FM Radio)

For optimal FM radio reception, extend the telescopic antenna located on the back of the unit. Adjust its position and angle to improve signal strength.

PLL FM-stereoradio met 30 geheugenplaatsen

Topontvangst en alle favorieten altijd bij de hand



Figure 2.1: The MEDION E66476 with its telescopic antenna extended, illustrating its use for FM radio reception.

3. OPERATING INSTRUCTIONS

3.1 General Controls

- **POWER Button:** Press to turn the unit ON or OFF.
- **VOLUME +/- Buttons:** Adjust the playback volume.
- **FUNCTION/MODE Button:** Press repeatedly to switch between CD/MP3, FM Radio, Cassette, AUX, and USB modes.

3.2 CD/MP3 Player Operation

Top-Loading CD-Player & cassettedeck

Voor nieuwste hits of oude klassiekers



Figure 3.1: The top-loading CD player and cassette deck of the MEDION E66476, shown open for media insertion.

1. Press the **OPEN/CLOSE** button on the CD compartment lid to open it.
2. Place a CD or MP3 CD onto the spindle, label side up. Gently press down until it clicks into place.
3. Close the CD compartment lid.
4. Press the **FUNCTION/MODE** button to select 'CD' mode. The display will show 'CD' and the total number of tracks.
5. Press the **PLAY/PAUSE** button to start playback.
6. Press **PLAY/PAUSE** again to pause, and press **STOP** to stop playback.
7. Use the **SKIP/SEARCH** buttons ($\ll$ / $\gg$) to skip tracks or fast forward/rewind within a track.

Programmable Playback:

You can program up to 20 tracks for CD and 99 tracks for MP3 CDs to play in a specific order.

1. In 'STOP' mode, press the **PROGRAM** button. 'PROG' will flash on the display.
2. Use the **SKIP/SEARCH** buttons to select the desired track.

3. Press **PROGRAM** again to confirm the track. Repeat for all desired tracks.
4. Press **PLAY/PAUSE** to start programmed playback.

3.3 Cassette Player Operation

1. Press the **STOP/EJECT** button on the cassette compartment to open it.
2. Insert a cassette tape with the open side facing upwards.
3. Close the cassette compartment.
4. Press the **FUNCTION/MODE** button to select 'TAPE' mode.
5. Press the **PLAY** button to start playback.
6. Use the **FAST FORWARD** (>>) and **REWIND** (<<) buttons to navigate the tape.
7. Press **STOP/EJECT** to stop playback and eject the tape.

3.4 FM Radio Operation

1. Extend the telescopic antenna fully.
2. Press the **FUNCTION/MODE** button to select 'FM' mode.
3. **Automatic Tuning (AMS):** Press and hold the **SCAN** button to automatically scan and save available FM stations. The unit can store up to 30 preset stations.
4. **Manual Tuning:** Press the **TUNE +/-** buttons to manually tune to a desired frequency.
5. **Recalling Presets:** Use the **PRESET +/-** buttons to cycle through saved stations.

3.5 USB Playback

Mp3-weergave van de USB-stick

Favoriete liedjes de klok rond



Figure 3.2: A close-up view of the USB port on the MEDION E66476, indicating where a USB stick can be inserted for MP3 playback.

1. Insert a USB stick containing MP3 audio files into the USB port.
2. Press the **FUNCTION/MODE** button to select 'USB' mode. The unit should automatically detect and begin playing MP3 files.
3. Use the **PLAY/PAUSE**, **STOP**, and **SKIP/SEARCH** buttons as you would for CD playback.

3.6 AUX-In Connection

Met hoofdtelefoonaansluiting

Insteken, achterover leunen en ontspannen



Figure 3.3: Detailed view of the AUX IN and PHONES (headphone) ports on the MEDION E66476.

1. Connect an external audio device (e.g., smartphone, MP3 player) to the **AUX IN** jack using a 3.5mm audio cable (not included).
2. Press the **FUNCTION/MODE** button to select 'AUX' mode.
3. Control playback and volume from your external device. The unit's volume control will also affect the output.

3.7 Headphone Output

1. Connect headphones with a 3.5mm jack to the **PHONES** jack.
2. Audio will be routed to the headphones, and the speakers will be muted.
3. Adjust volume using the unit's volume controls.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity of your MEDION E66476 Stereo Sound System.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **CD/Cassette Compartments:** Keep the CD and cassette compartments free from dust and debris. Avoid touching the lens in the CD player.
- **Battery Care:** If the unit will not be used for an extended period, remove the batteries to prevent leakage and corrosion.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you experience issues with your unit, please refer to the following common problems and solutions before seeking professional service.

Problem	Possible Cause	Solution
No power	AC cable not connected; Batteries depleted or incorrectly inserted.	Check AC cable connection; Replace batteries, ensuring correct polarity.
No sound	Volume too low; Incorrect function mode selected; Headphones connected.	Increase volume; Select correct mode (CD, FM, AUX, USB, TAPE); Disconnect headphones.
Poor FM radio reception	Antenna not extended or positioned correctly; Weak signal area.	Fully extend and adjust the telescopic antenna; Try repositioning the unit.
CD/MP3 CD skips or does not play	Disc dirty or scratched; Disc inserted incorrectly; Unit is vibrating.	Clean disc with a soft cloth; Reinsert disc correctly; Place unit on a stable surface.
Cassette tape not playing or distorted	Tape damaged or tangled; Tape head dirty.	Check tape condition; Clean tape head with a cotton swab and rubbing alcohol.
USB stick not recognized	USB format not supported; USB stick damaged; Files not in MP3 format.	Ensure USB is FAT32 format; Try a different USB stick; Ensure files are MP3.

6. SPECIFICATIONS



Figure 6.1: The MEDION E66476 with key dimensions (213mm, 285mm, 140mm) and port labels (Headphone, USB, AUX In).

Feature	Detail
Brand	MEDION
Model	E66476 (MD 44176)
Supported Media	CD, CD-R, CD-RW, MP3 (from CD/USB), Cassette
Radio Tuner	PLL FM, 30 preset stations
Audio Output Power	2 x 2.2 W RMS (2 x 20 W max. music output)
Connectivity	USB port, AUX-In (3.5mm), Headphone Out (3.5mm)
Display	LC display with blue backlight

Feature	Detail
Power Source	AC 230V ~ 50Hz or 6 x 1.5V 'C' size batteries (not included)
Dimensions (W x D x H)	Approx. 28.5 x 21.3 x 14 cm
Weight	Approx. 2.33 kg

7. WARRANTY AND SUPPORT

Your MEDION E66476 Stereo Sound System comes with a warranty. Please refer to the warranty card included in the packaging for specific terms and conditions.

For technical support, service, or further inquiries, please contact MEDION customer service. MEDION aims to provide comprehensive support to its customers.

You can typically find detailed support information, FAQs, and contact options on the official MEDION website. It is recommended to visit www.medion.com for the most up-to-date support resources.

© 2024 MEDION. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09LR78GLD>

More documents and user manuals: **<https://manuals.plus/>**