

SEB MS-5867567

SEB Replacement Bowl MS-5867567 for Moulinex Masterchef Food Processors User Guide

Model: MS-5867567

INTRODUCTION

This user guide provides essential information for the proper installation, use, and maintenance of your SEB replacement bowl, model MS-5867567. This bowl is compatible with various Moulinex Masterchef food processor models, including MASTERCHEF 500 CLASSIC, MASTERCHEF 570 DUO, MASTERCHEF 750 DUOTRONIC, MASTERCHEF 970 DUOTRONIC, MASTERCHEF LINE, and MASTERCHEF VITASUN. Please read these instructions carefully before use to ensure safe and efficient operation.

COMPATIBILITY

The MS-5867567 replacement bowl is designed for use with the following Moulinex Masterchef food processor series:

- Moulinex Masterchef 500 Classic
- Moulinex Masterchef 570 Duo
- Moulinex Masterchef 750 Duotronic
- Moulinex Masterchef 970 Duotronic
- Moulinex Masterchef Line
- Moulinex Masterchef Vitasun

Always verify your food processor's model number to ensure compatibility before installing the replacement bowl.

SETUP AND INSTALLATION

1. **Unpack the Bowl:** Carefully remove the replacement bowl from its packaging. Inspect it for any signs of damage.
2. **Prepare the Food Processor:** Ensure your Moulinex Masterchef food processor is unplugged from the power outlet before beginning installation. Remove any existing bowl or accessories.
3. **Position the Bowl:** Place the new MS-5867567 bowl onto the motor unit base. Align the bowl's base with the

locking mechanism on the motor unit.

4. **Secure the Bowl:** Rotate the bowl clockwise until it clicks securely into place. The bowl must be properly locked for the food processor to operate.
5. **Add Accessories:** Once the bowl is secured, you can insert the appropriate processing blade or disc, followed by the lid (not included with this replacement bowl).



Image: The MS-5867567 replacement bowl, designed for Moulinex Masterchef food processors. This image shows the bowl without its lid or accessories.

OPERATING INSTRUCTIONS

This section describes the general operation of the food processor with the installed replacement bowl. Refer to your original Moulinex Masterchef food processor manual for specific operating procedures related to different functions and accessories.

1. **Ensure Proper Assembly:** Verify that the bowl is securely locked onto the motor unit and that the blade/disc and lid are correctly installed.

2. **Add Ingredients:** Place your ingredients into the bowl. Do not overfill the bowl beyond the maximum fill line indicated on your original bowl or in your food processor's manual.
3. **Power On:** Plug the food processor into a suitable power outlet.
4. **Select Speed/Function:** Choose the desired speed or function setting on your food processor's control panel.
5. **Process Ingredients:** Activate the food processor. Monitor the processing to achieve the desired consistency.
6. **Power Off and Unplug:** Once processing is complete, turn off the food processor and unplug it from the power outlet.
7. **Remove Lid and Bowl:** Carefully remove the lid, then unlock and lift the bowl from the motor unit.

Safety Note: Always ensure the food processor is unplugged before assembling, disassembling, or cleaning any parts.

CARE AND MAINTENANCE

Proper care extends the life of your replacement bowl.

- **Cleaning:** After each use, disassemble the bowl from the motor unit. Wash the bowl with warm, soapy water. Rinse thoroughly and dry immediately. The bowl may be dishwasher safe; refer to your original food processor manual for specific cleaning instructions for plastic components.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the bowl's surface.
- **Storage:** Store the clean, dry bowl in a safe place, away from direct heat or sunlight, to prevent warping or discoloration.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food processor does not start.	Bowl not properly locked.	Ensure the bowl is rotated clockwise until it clicks securely into place on the motor unit.
Bowl leaks during operation.	Bowl seal damaged or improperly seated.	Inspect the bowl's seal for damage. Ensure it is correctly seated. If damaged, the bowl may need replacement.
Bowl does not fit the motor unit.	Incorrect bowl model for your food processor.	Verify your food processor's model number against the compatible models listed in this manual.

If you encounter issues not listed here, or if solutions do not resolve the problem, please refer to your original Moulinex Masterchef food processor manual or contact customer support.

SPECIFICATIONS

- **Product Type:** Replacement Food Processor Bowl
- **Model Number:** MS-5867567
- **Brand:** SEB (for Moulinex Masterchef appliances)
- **Material:** Food-grade plastic
- **Compatibility:** Moulinex Masterchef 500 Classic, 570 Duo, 750 Duotronic, 970 Duotronic, Line, Vitasun

- **Part Number (Internal Reference):** MLX5867567

WARRANTY AND SUPPORT

This replacement bowl is manufactured by SEB. For specific warranty information regarding this replacement part, please refer to the documentation provided with your purchase or contact the seller directly. General warranty terms for your Moulinex Masterchef food processor are typically covered by the original appliance's warranty.

For technical support or inquiries, please contact the retailer or the manufacturer's customer service department. Keep your purchase receipt as proof of purchase.

© 2024 SEB. All rights reserved. Moulinex and Masterchef are registered trademarks.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question