

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SHOKZ](#) /
- › [SHOKZ OpenSwim Bone Conduction Swimming Headphones - User Manual](#)

## SHOKZ S700BK

# SHOKZ OpenSwim Bone Conduction Swimming Headphones

Model: S700BK

### INTRODUCTION

The SHOKZ OpenSwim Bone Conduction Swimming Headphones are engineered for an unparalleled underwater audio experience. Featuring Shokz's signature open-ear design and 7th generation bone conduction technology, these headphones provide comfortable, bud-free listening. Fully waterproof and submersible, with 4GB of MP3 storage, they are designed to support rigorous training without wires or external devices.



Image: Front view of the SHOKZ OpenSwim Bone Conduction Swimming Headphones, showcasing their sleek, black design.

### WHAT'S IN THE BOX

- SHOKZ OpenSwim Headphones
- Charging Cable
- Protective Case
- User Manual
- Headband

## SETUP

### 1. Initial Charge

Before first use, fully charge your OpenSwim headphones. Connect the provided charging cable to the charging port on the headphones and a USB power source. The LED indicator will show charging status. A full charge provides up to 8 hours of playback.

### 2. Loading Music

The OpenSwim headphones feature 4GB of built-in MP3 storage. To load music, connect the headphones to your computer using the charging cable. The headphones will appear as a removable disk drive. Drag and drop your MP3 audio files into the drive folder. Ensure files are in a compatible format (MP3, WAV, FLAC, AAC).



Image: Close-up view of the SHOKZ OpenSwim headphones, highlighting the charging contacts.

## OPERATING INSTRUCTIONS

### Power On/Off

Press and hold the Power/Volume+ button for 2 seconds to power on or off the headphones. A voice prompt will confirm the action.

### Playback Controls

- **Play/Pause:** Press the Multi-function button once.

- **Next Track:** Double-press the Multi-function button.
- **Previous Track:** Triple-press the Multi-function button.
- **Volume Up:** Press the Volume+ button.
- **Volume Down:** Press the Volume- button.

## Wearing the Headphones

Place the transducers on your cheekbones, just in front of your ears. The titanium band should wrap around the back of your head. Adjust for a comfortable and secure fit. The open-ear design ensures awareness of your surroundings.



Image: A man wearing the SHOKZ OpenSwim headphones, demonstrating the proper fit for swimming activities.

## Underwater Use

The OpenSwim headphones are IP68 waterproof, meaning they can be submerged in water up to 2 meters deep for up to 2 hours. For optimal sound quality underwater, ensure the headphones are securely positioned. It is recommended to use earplugs (not included) to enhance the bone conduction audio experience in water.

Your browser does not support the video tag.

Video: An official product video demonstrating the features and use of SHOKZ OpenSwim Bone Conduction Headphones, including their waterproof capabilities.

## MAINTENANCE

### Cleaning

After each use, especially after swimming, rinse the headphones with fresh water to remove chlorine or salt residue. Gently wipe them dry with a soft cloth. Do not use abrasive cleaners or harsh chemicals.

### Storage

Store the headphones in their protective case when not in use to prevent damage. Keep them in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

### No Sound / Low Volume

- Ensure the headphones are powered on and charged.
- Adjust the volume using the Volume+ button.
- Verify that music files are properly loaded onto the device.
- For underwater use, ensure proper placement on cheekbones and consider using earplugs.

### Headphones Not Responding

- Perform a soft reset by holding the Power/Volume+ button for 10-15 seconds until the device powers off and then on again.
- Ensure the charging contacts are clean and free of debris.

### Difficulty Loading Music

- Ensure the charging cable is securely connected to both the headphones and the computer.
- Try a different USB port on your computer.
- Check if your computer's operating system recognizes the device as a removable disk.

## SPECIFICATIONS

Feature	Detail
Model Name	OpenSwim S700BK
Connectivity Technology	Wireless (MP3 Player)
Water Resistance Level	IP68 (Submersible up to 2 meters for 2 hours)
Storage	4 GB MP3
Battery Life	Up to 8 hours
Item Weight	7 ounces (0.2 Kilograms)
Product Dimensions	6.69 x 5.31 x 2.68 inches
Ear Placement	Open Ear (Bone Conduction)
Material	Titanium Band

## WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the official SHOKZ website or contact their customer service directly. The included User Manual also contains specific warranty terms and contact details.

Manufacturer: Shokz