

NC N\C-JMAPZS

NC E7S Bluetooth Headset User Manual

Model: N\C-JMAPZS

PRODUCT OVERVIEW

The NC E7S Bluetooth Headset offers a true wireless audio experience with advanced Bluetooth 5.0 technology. Designed for comfort and convenience, these in-ear earbuds feature a power display, call function, voice control, and support for music playback. The compact design and long-lasting battery life make them ideal for daily use and on-the-go communication.



Image: The NC E7S earbuds are shown inside their open charging case. The case features a digital display that indicates the battery percentage, providing a clear visual of the remaining charge.

SETUP GUIDE

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the charging case to a power source using a compatible USB cable. The digital display on the case will show the charging status and battery level. A full charge typically provides up to 40 hours of standby time.



Image: The NC E7S earbuds are securely placed within their charging case. The case's digital display clearly shows "L 100 R", indicating that both the left and right earbuds are fully charged to 100%.

2. Initial Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "E7S" or "NC E7S" from the list of found devices.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

The earbuds feature automatic pairing connection: once initially paired, they will automatically connect to the last paired device when removed from the charging case.

OPERATING INSTRUCTIONS

Controls

The NC E7S earbuds utilize a one-click intelligent control system for easy operation. Specific functions are typically controlled by single, double, or long presses on the earbud's touch-sensitive area.

- **Play/Pause:** Single click on either earbud.
- **Next Track:** Double click on the right earbud.
- **Previous Track:** Double click on the left earbud.
- **Answer/End Call:** Single click on either earbud during an incoming call.
- **Reject Call:** Long press on either earbud during an incoming call.
- **Activate Voice Assistant:** Triple click on either earbud (functionality depends on device compatibility).



Image: A close-up shot of two NC E7S earbuds, showcasing their sleek, in-ear design and the subtle blue LED indicator light on each earbud.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth to wipe down the surfaces. For ear tips, you may gently remove them and clean with a damp cloth, ensuring they are completely dry before reattaching.

Water Resistance

The NC E7S earbuds feature IPX4 waterproof technology, meaning they are resistant to splashing water from any direction. This makes them suitable for light rain and sweat during outdoor sports. However, they are not designed for submersion in water or exposure to pressurized water jets. Do not wear them while swimming or showering.



Image: The NC E7S charging case and both earbuds are depicted with water droplets on their surfaces, illustrating their IPX4 water resistance, suitable for protection against splashes and sweat.

Storage

When not in use, store the earbuds in their charging case to protect them from dust, damage, and to keep them charged. Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing	Low battery; out of range; not in pairing mode; previously paired to another device.	Charge earbuds and case. Ensure Bluetooth is on and within 15m. Place earbuds in case, close, then open to re-enter pairing mode. Disconnect from other devices.
No sound from one earbud	Low battery; earbud not properly connected; earbud malfunction.	Ensure both earbuds are charged. Place both earbuds back in the case, close, then open again. Re-pair if necessary.
Charging case not charging	Faulty cable/adapter; dirty charging port.	Try a different USB cable and power adapter. Clean the charging port gently with a dry cotton swab.
Poor sound quality	Earbuds not seated properly; dirty ear tips; interference; low quality audio source.	Adjust earbud position. Clean ear tips. Move away from sources of interference. Try a different audio source.

SPECIFICATIONS

- Model Name:** JMAPZS
- Connectivity Technology:** Wireless
- Wireless Communication Technology:** Bluetooth 5.0
- Bluetooth Range:** 15 meters
- Ear Placement:** In Ear
- Form Factor:** In Ear
- Material:** Silicone
- Water Resistance Level:** IPX4 (Waterproof)
- Battery Life (Earbuds):** Up to 4 hours (typical usage)
- Carrying Case Battery Capacity:** Provides multiple charges for earbuds (up to 40 hours standby time)
- Control Type:** Voice Control, One-click intelligent control
- Functions:** Power display, call function, voice control, music support
- Color:** Black
- Item Weight:** 2.36 ounces
- Package Dimensions:** 5.71 x 4.17 x 1.38 inches

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your NC E7S Bluetooth Headset, please refer to the purchase documentation or contact the retailer where the product was acquired. Specific warranty terms and support channels may vary by region and seller.



